


Operation Procedures

7.1. Remote Control Key Buttons Operations

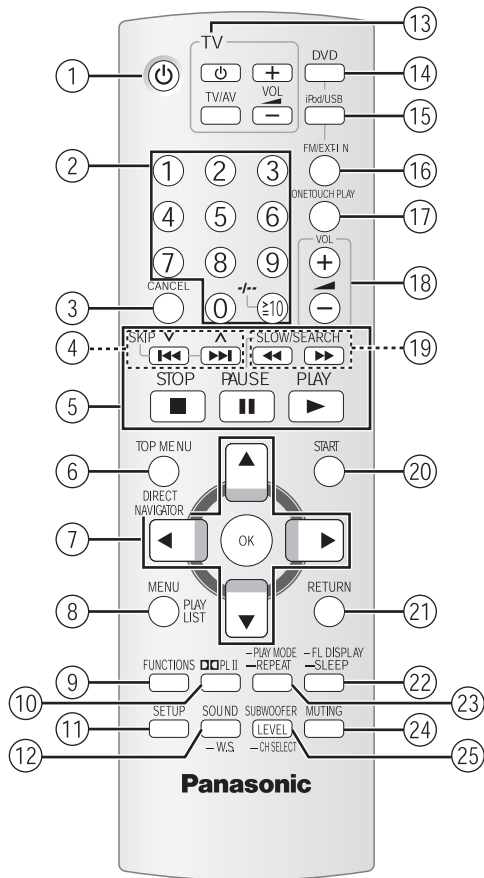

- ① Turn this unit on/off
- ② Select channels and title numbers etc. / Enter numbers
- ③ Cancel
- ④ Select preset radio stations
- ⑤ Basic operations for play
- ⑥ Show a disc top menu or program list
- ⑦ Select or confirm menu items / Frame-by-frame
- ⑧ Show a disc menu or play list
- ⑨ Show on-screen menu / Display RDS text data
- ⑩ Turn Dolby Pro Logic II on/off
- ⑪ Show setup menu
- ⑫ Select sound mode / Turn Whisper-mode Surround on/off
- ⑬ TV operations
Aim the remote control at the Panasonic TV and press the button.
[⏻]: Turn the TV on/off
[TV/AV]: Change the TV's video input mode
[+ , -]: Adjust the TV volume
This may not work properly with some models.
- ⑭ Select disc as the source
- ⑮ Select USB or iPod as the source
- ⑯ Select FM tuner or external audio as the source
FM→AV→AUX→D-IN
- ⑰ Start up and play a disc automatically
- ⑱ Adjust the volume of this unit
- ⑲ Select radio stations manually
- ⑳ Show START menu
- ㉑ Return to previous screen
- ㉒ Switch information on this unit's display
or
Set the Sleep timer
Press and hold [-SLEEP].
While the time is shown on this unit' display, press the [-SLEEP] repeatedly.
SLEEP 30→SLEEP 60→SLEEP 90→SLEEP120
↑ OFF (Cancel) ↓
- To confirm the remaining time, press and hold the button again.
- ㉓ Select the play mode / Set the repeat mode
- ㉔ Mute the sound
● "MUTING" flashes in this unit's display while the function is on.
● To cancel, press the button again or adjust the volume.
● Muting is cancelled when you switch the unit to standby.
- ㉕ Adjust the subwoofer level or select speaker channel