


SI2-K08-Y1 Inductive Sensor – Slot-type

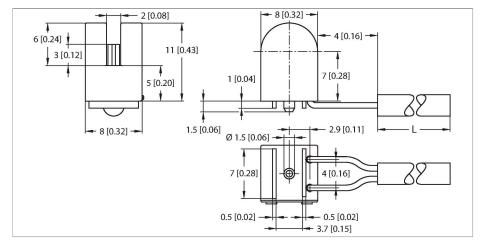


Technical data

| Tupo | SI2-K08-Y1 |
|---|---|
| Туре ID | 1007700 |
| | 1007700 |
| General data | |
| Slot width | 2 mm |
| Repeat accuracy | ≤ 2 % of full scale |
| Temperature drift | ≤ ±10 % |
| Hysteresis | 110 % |
| Electrical data | |
| Output function | 2-wire, NAMUR |
| Switching frequency | 2.5 kHz |
| Voltage | Nom. 8.2 VDC |
| Non-actuated current consumption | ≥ 2.1 mA |
| Actuated current consumption | ≤ 1.2 mA |
| Approval acc. to | KEMA 02 ATEX 1090X |
| Internal capacitance (C _i)/inductance (L _i) | 250 nF/350 μH |
| Device marking | Ex II 1 G Ex ia IIC T6 Ga/II 1 D Ex ia IIIC T135 °C Da |
| | (max. U _i = 20 V, I _i = 60 mA, P _i = 130 mW) |
| Mechanical data | |
| Design | Slot sensor, K08 |
| Dimensions | 11 x 15 x 8 mm |
| Housing material | Plastic, PP |
| Active area material | Plastic, PP |
| Electrical connection | Stranded wires |
| Cable quality | Ø 1 mm, LifY, PVC, 0.21 m |
| Core cross-section | 2 x 0.08 mm ² |

Features

- Slot sensor, height 8 mm
- Plastic, polypropylene
- Mechanical end stop, removable, for analog pointer instruments
- DC 2-wire, nom. 8.2 VDC
- Output acc. to DIN EN 60947-5-6 (NAMUR)
- Strand connection, mostly jacketed
- ATEX category II 1 G, Ex zone 0
- ATEX category II 1 D, Ex zone 20
- SIL2 (Low Demand Mode) acc. to IEC 61508, PL c acc. to ISO 13849-1 with HFT0
- SIL3 (All Demand Mode) acc. to IEC 61508, PL e acc. to ISO 13849-1 with redundant configuration HFT1

Wiring diagram



Functional principle

Inductive sensors detect metal objects contactless and wear-free. For this purpose they use a high-frequency electromagnetic AC field that interacts with the target. The sensors hosting a ferrite core coil generate the AC field through an LC resonant circuit.




Technical data

| Environmental conditions | |
|--------------------------|---|
| Ambient temperature | -25+70 °C |
| Vibration resistance | 55 Hz (1 mm) |
| Shock resistance | 30 g (11 ms) |
| Protection class | IP67 |
| MTTF | 6198 years acc. to SN 29500 (Ed. 99) 40 °C |

Mounting instructions


Mounting instructions/Description

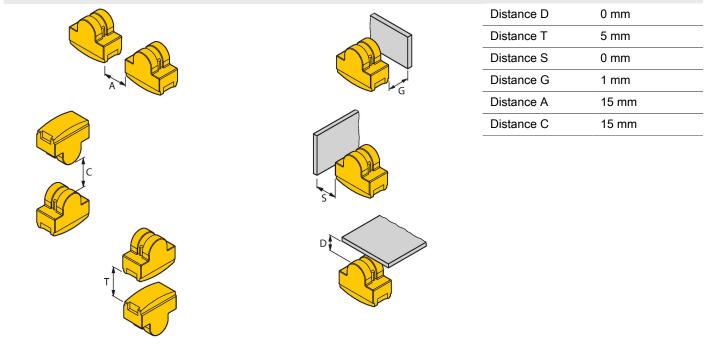



Accessories

Dimension drawing

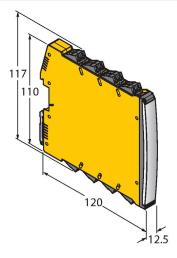

Type IMX12-DI01-2S-2T-0/24VDC ID 7580020

Isolating switching amplifier, 2-channel; SIL2 acc. to IEC 61508; Ex-proof version; 2 transistor outputs; input Namur signal; ON/OFF switchable monitoring of wire-break and shortcircuit; toggle between NO/NC mode; signal doubling; removable screw terminals; 12.5 mm wide; 24 VDC power supply



Instructions for use

| Intended use | This device fulfills Directive 2014/34/EC and is suited for use in explosion-hazardous areas according to EN 60079-0:2018 and EN 60079-11:2012.It is also suitable for use in safety-re- lated systems, including SIL2 (IEC 61508) and PL c (ISO 13849-1) with HFT0 and SIL3 (IEC 61508) and PL e (ISO 13849-1) with redundant configuration HFT1In order to ensure that the device is operated as intended, the national regula- tions and directives must be observed. |
|--|---|
| For use in explosion hazardous areas conform to classification | II 1 G and II 1 D (Group II, Category 1 G, electrical equipment for gaseous atmospheres and category 1 D, electrical equip- ment for dust atmospheres). |
| Marking (see device or technical data sheet) | Ex II 1 G and Ex ia IIC T6 Ga and Ex II 1 D Ex ia IIIC T135 °C Da acc. to EN 60079-0, -11 |
| Local admissible ambient temperature | -25+70 °C |
| Installation/Commissioning | These devices may only be installed, connected and oper- ated by trained and qualified staff. Qualified staff must have knowledge of protection classes, directives and regulations concerning electrical equipment designed for use in explosion hazardous areas.Please verify that the classification and the marking on the device comply with the actual application con- ditions. |
| | This device is only suited for connection to approved Exi cir- cuits according to EN 60079-0 and EN 60079-11. Please ob- serve the maximum admissible electrical values. After con- nection to other circuits the sensor may no longer be used in Exi installations. When interconnected to (associated) electri- cal equipment, it is required to perform the "Proof of intrinsic safety" (EN60079-14). Attention! When used in safety systems, all content of the security manual must be observed. |
| Installation and mounting instructions | Avoid static charging of cables and plastic devices. Please only clean the device with a damp cloth. Do not install the device in a dust flow and avoid build-up of dust deposits on the device. If the devices and the cable could be subject to mechanical damage, they must be protected accordingly. They must also be shielded against strong electro-magnetic fields. The pin configuration and the electrical specifications can be taken from the device marking or the technical data sheet. |
| Service/Maintenance | Repairs are not possible. The approval expires if the device is repaired or modified by a person other than the manufacturer. The most important data from the approval are listed. |