

SHARP SERVICE MANUAL

No. S4023CDBP1500

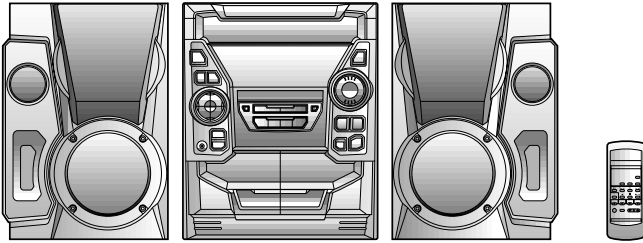


Illustration: CD-BP1500W

• In the interests of user-safety the set should be restored to its original condition and only parts identical to those specified be used.



CD-BP160W

CD-BP160W Mini Component System consisting of CD-BP160W (main unit) and CP-BP160 (speaker system).

CD-BP180W

CD-BP180W Mini Component System consisting of CD-BP180W (main unit), CP-BP180 (front speaker) and GBOXS0041AWM1 (surround speaker).

CD-BP1500W

CD-BP1500W Mini Component System consisting of CD-BP1500W (main unit) and CP-BP1500 (speaker system).

CD-BP1700W

CD-BP1700W Mini Component System consisting of CD-BP1700W (main unit), CP-BP1700 (front speaker) and GBOXS0041AWM1 (surround speaker).

CONTENTS

	Page
SAFETY PRECAUTION FOR SERVICE MANUAL	2
VOLTAGE SELECTION	2
SPECIFICATIONS	3
NAMES OF PARTS	4
OPERATION MANUAL	6
DISASSEMBLY	8
REMOVING AND REINSTALLING THE MAIN PARTS	11
ADJUSTMENT	12
BLOCK DIAGRAM	15
SCHEMATIC DIAGRAM	18
VOLTAGE	27
WIRING SIDE OF P.W.BOARD	28
NOTES ON SCHEMATIC DIAGRAM	34
WAVEFORMS OF CD CIRCUIT	35
TROUBLESHOOTING	36
FUNCTION TABLE OF IC	40
FL DISPLAY	46
REPLACEMENT PARTS LIST/EXPLODED VIEW	

SAFETY PRECAUTION FOR SERVICE MANUAL

Precaution to be taken when replacing and servicing the Laser Pickup.

The AEL (Accessible Emission Level) of Laser Power Output for this model is specified to be lower than Class I Requirements. However, the following precautions must be observed during servicing to protect your eyes against exposure to the Laser beam.

- (1) When the cabinet has been removed, the power is turned on without a compact disc, and the Pickup is on a position outer than the lead-in position, the Laser will light for several seconds to detect a disc. Do not look into the Pickup Lens.
- (2) The Laser Power Output of the Pickup inside the unit and replacement service parts have already been adjusted prior to shipping.
- (3) No adjustment to the Laser Power should be attempted when replacing or servicing the Pickup.
- (4) Under no circumstances look directly into the Pickup Lens at any time.
- (5) CAUTION - Use of controls or adjustments, or performance of procedures other than those specified herein may result in hazardous radiation exposure.


CAUTION

CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1

- This Mini Component System is classified as a CLASS 1 LASER product.
- The CLASS 1 LASER PRODUCT label is located on the rear cover.
- Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

Laser Diode Properties
Material: GaAlAs
Wavelength: 780 nm
Emission Duration: continuous
Laser Output: max. 0.6 mW

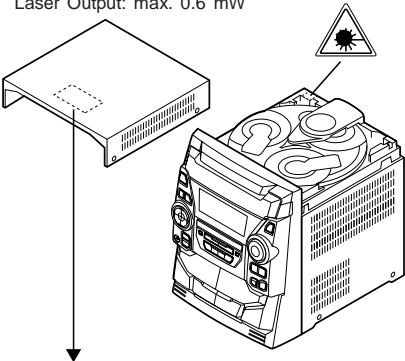


CAUTION-INVISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.
VARNING-OŠYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. STIRRA EJ IN I STRÅLEN OCH BETRÄKTA EJ STRÅLEN MED OPTISKA INSTRUMENT.
ADVERSEL-USYNLIG LASERSTRÅLING VED ÅBNING. SE IKKE IND I STRÅLEN-HELLER IKKE MED OPTISKE INSTRUMENTER.
VARO! AVATTAESSA OLET ALTIIDIN NÄKYMATÖN LASERSÄTELYLLE. ÄLÄ TUJOTA SÄHTEESTEN ALAKA KATSO SITA OPTISEN LAITTEEN LAPEL.
VARNING-OŠYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. STIRRA EJ IN I STRÅLEN OCH BETRÄKTA EJ STRÅLEN GENOM OPTISKT INSTRUMENT.
ADVERSEL-USYNLIG LASERSTRÅLING NÄR DEKSEL ÖPNES. STIRR IKKE INN I STRÅLEN ELLER SE DIREKTE MED OPTISKE INSTRUMENTER.


VOLTAGE SELECTION

The voltage selector is located on the AC voltage selector box. If adjustment is necessary, use a screwdriver in order to turn the selector in either direction until the correct voltage figure is displayed in the window next the adjustment screw.


QACCB0008AW00

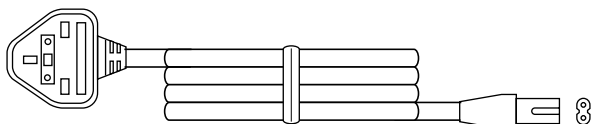


QACCE0011AW00




QACCL0002AW00/QACCZ0008AW00



92LCORDZ1652A



92LCORD577B



QPLGA0003AWZZ

QPLGA0004AWZZ



Figure 2 AC POWER SUPPLY CORD AND PLUG ADAPTOR

FOR A COMPLETE DESCRIPTION OF THE OPERATION OF THIS UNIT, PLEASE REFER TO THE OPERATION MANUAL.

SPECIFICATIONS

CD-BP160W/180W/1500W/1700W

● **General**

Power source: AC 110/127/220/230-240 V, 50/60 Hz
Power consumption: 100 W
Dimensions: Width; 270 mm (10-5/8")
 Height; 330 mm (13")
 Depth; 355 mm (14")
Weight: 6.7 kg (14.7 lbs.)

● **Amplifier section**

Output power: MPO; 160 W (80 W + 80 W) (10 % T.H.D.)
 RMS; 100 W (50 W + 50 W) (10 % T.H.D.)
 RMS; 74 W (37 W + 37 W) (0.9 % T.H.D.)

Output terminals: Speakers; 6 ohms
(CD-BP160W/1500W) Headphones; 16-50 ohms (recommended; 32 ohms)

Output terminals: Front speakers; 8 ohms
(CD-BP180W/1700W) Surround speakers; 16 ohms
 Headphones; 16-50 ohms (recommended; 32 ohms)

Input terminals: Video/Auxiliary (audio signal); 500 mV/47 kohms

● **Compact disc player section**

Type: 3-disc multi-play compact disc player
Signal readout: Non-contact, 3-beam semiconductor laser pickup
D/A converter: 1-bit D/A converter
Frequency response: 20 - 20,000 Hz
Dynamic range: 90 dB (1 kHz)

● **Tuner section**

Frequency range: FM; 88-108 MHz
 AM; 531-1,602 kHz

● **Cassette deck section**

Frequency response: 50-14,000 Hz (Normal tape)
Signal/noise ratio: 55 dB (TAPE 1, playback)
 50 dB (TAPE 2, recording/playback)
Wow and flutter: 0.3 % (WRMS)

CP-BP160/1500

Type: 3-way type [10 cm (4") woofer × 2 and 5 cm (2") tweeter]

Maximum input power: 100 W
Rated input power: 50 W
Impedance: 6 ohms
Dimensions: Width; 220 mm (8-11/16")
(CP-BP160) Height; 330 mm (13")
 Depth; 227 mm (8-15/16")
Weight: 3.0 kg (6.6 lbs.)/each

Dimensions: Width; 231.5 mm (9-1/8")
(CP-BP1500) Height; 330 mm (13")
 Depth; 210 mm (8-1/4")

Weight: 3.1 kg (6.8 lbs.)/each
(CP-BP1500)

CP-BP180/1700

Type: 3-way type [10 cm (4") woofer × 2 and 5 cm (2") tweeter]

Maximum input power: 80 W
Rated input power: 40 W
Impedance: 8 ohms
Dimensions: Width; 231.5 mm (9-1/8")
(CP-BP180) Height; 330 mm (13")
 Depth; 210 mm (8-1/4")
Weight: 3.1 kg (6.8 lbs.)/each

Dimensions: Width; 240 mm (9-7/16")
(CP-BP1700) Height; 330 mm (13")
 Depth; 234 mm (9-9/16")

Weight: 3.2 kg (7.0 lbs.)/each
(CP-BP1700)

GBOXS0041AWM1

Type: 10 cm (4") full-range speaker
Maximum input power: 30 W
Rated input power: 15 W
Impedance: 16 ohms
Dimensions: Width; 170 mm (6-3/4")
 Height; 170 mm (6-3/4")
 Depth; 88 mm (3-1/2")
Weight: 0.5 kg (1.0 lbs.)/each




Specifications for this model are subject to change without prior notice.

NAMES OF PARTS

CD-BP160W/180W/1500W/1700W


■ Front panel

1. (CD) Disc Tray
2. Extra Bass Indicator
3. FM Stereo Mode Indicator
4. FM Stereo Indicator
5. (CD) Repeat Indicator
6. (CD) Pause Indicator
7. (CD) Play Indicator
8. (CD) Disc Number Indicators
9. (TAPE 2) Record Indicator
10. (CD/TUNER) Memory Indicator
11. (TAPE) Reverse Mode Indicator
12. (TAPE 2) Direction Indicator
13. (TAPE 1) Play Indicator
(TAPE 2) Direction Indicator
14. Sleep Indicator
15. Timer Record Indicator
16. Timer Play Indicator
17. Spectrum Analyzer/Volume Level Indicator
18. (CD) Track Down/Review Button
(TUNER) Preset Down Button
(TAPE 2) Rewind Button
19. (CD) Track Up/Cue Button
(TUNER) Preset Up Button
(TAPE 2) Fast Forward Button
20. Timer Set Indicator
21. On/Stand-by Button
22. Clock Button
23. Timer/Sleep Button
24. Function Selector Buttons
25. Dimmer Button
26. Volume Up/Down Buttons
27. Equalizer Mode Selector Button
28. Extra Bass/Demo Mode Button
29. (CD) Open/Close Button
30. Headphone Socket
31. Tuning and Time Up/Down Buttons
32. Memory/Set Button
33. (TAPE) Reverse Play Button
34. (CD/TAPE) Stop Button
35. (TAPE 2) Reverse Mode Button
36. (CD) Play/Repeat Button
(TAPE 1) Play Button
(TAPE 2) Forward Play Button
37. (TAPE 2) Record Pause Button
38. (CD) Disc Skip Button
39. (TAPE 1) Cassette Compartment
40. (TAPE 2) Cassette Compartment

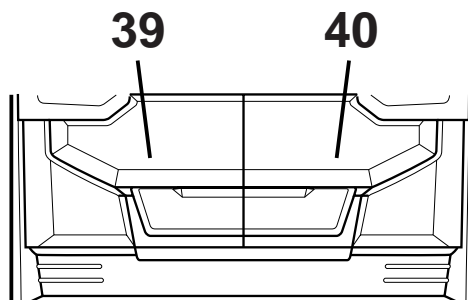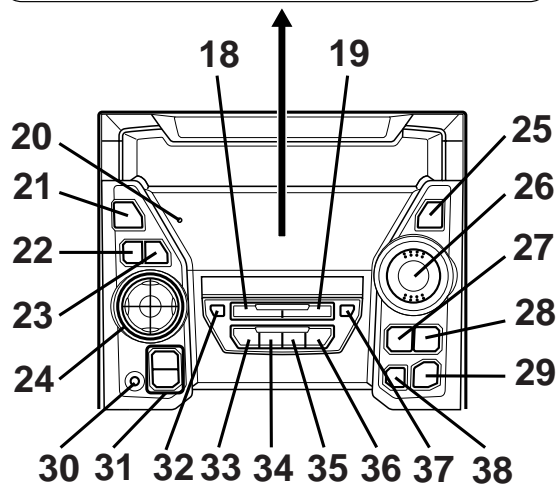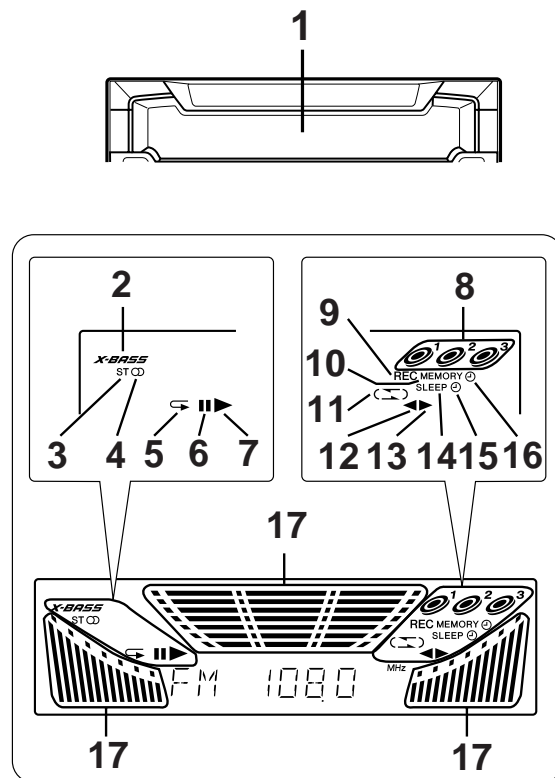


■ Rear panel

1. AC Voltage Selector
2. AC Power Input Socket
3. FM 75 Ohms Aerial Terminal
4. FM Aerial Earth Terminal
5. AM Loop Aerial Input Socket
6. Span Selector Switch
7. Video/Auxiliary (Audio Signal) Input Sockets
8. Front Speaker Terminals
9. Surround Speaker Terminals
(For 180W/1700W Only)

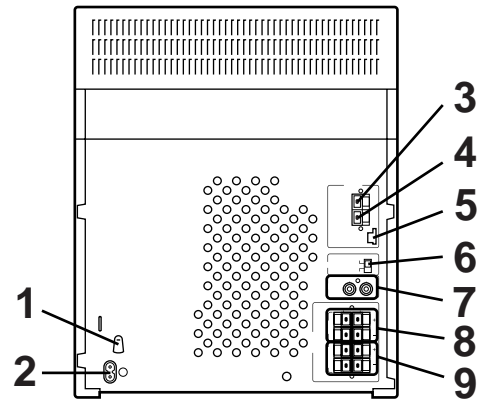


CP-BP160/1700

1. Tweeter
2. Bass Reflex Duct
3. Woofers
4. Speaker Wire

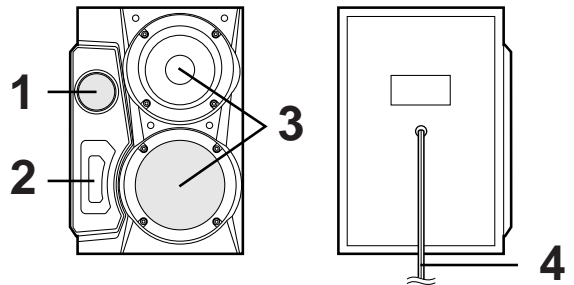


CP-BP180/1500

1. Tweeter
2. Bass Reflex Duct
3. Woofers
4. Speaker Wire

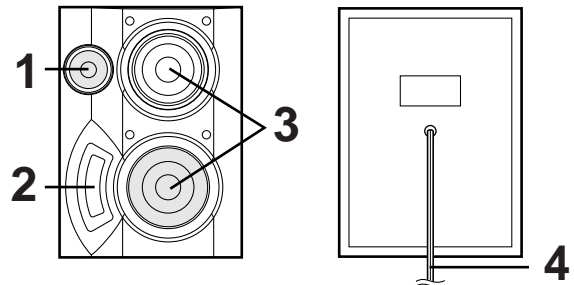

GBOXS0041AWM1

1. Full-Range Speaker
2. Speaker Wire

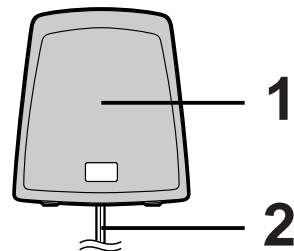


CD-BP160W/180W/1500W/1700W

CD-BP160W/180W/1500W/1700W


Remote control

1. Remote Control Transmitter LED
2. (CD) Disc Skip Button
3. (CD) Clear Button
4. (CD) Memory Button
5. (CD) Random Button
6. (TAPE 2) Record Pause Button
7. (CD) Track Down/Review Button
(TUNER) Preset Down Button
(TAPE 2) Fast Wind Button
8. (CD) Pause Button
9. (CD) Track Up/Cue Button
(TUNER) Preset Up Button
(TAPE 2) Fast Wind Button
10. Equalizer Mode Selector Button
11. (TAPE 2) Reverse Play Button
12. (CD/TAPE) Stop Button
13. (CD) Play/Repeat Button
(TAPE 1) Play Button
(TAPE 2) Forward Play Button
14. Function Selector Buttons
15. On/Stand-by Button
16. Extra Bass Button
17. Volume Up/Down Buttons

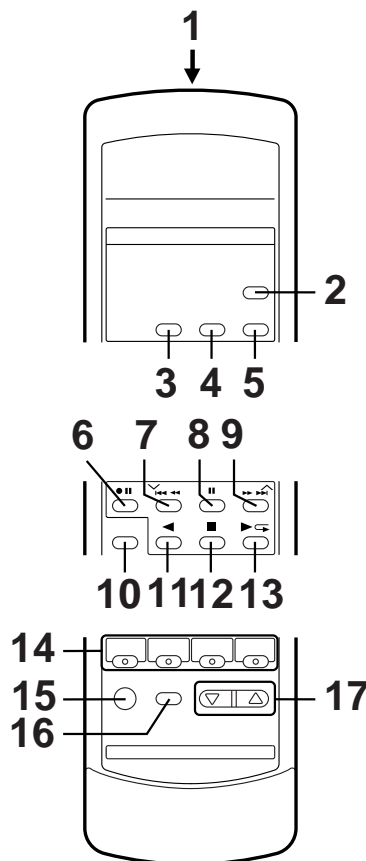

OPERATION MANUAL

RESETTING THE MICROCOMPUTER

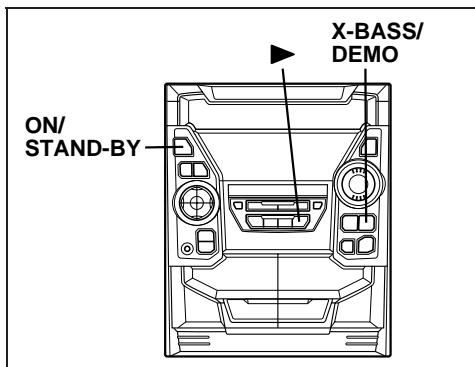

Reset the microcomputer under the following conditions:

- To erase all of the stored memory contents (clock and timer settings, and tuner and CD presets).
- If the display is not correct.
- If the operation is not correct.

1 Press the ON/STAND-BY button to enter the stand-by mode.

2 Whilst pressing down the ► button and the X-BASS/DEMO button, hold down the ON/STAND-BY button for at least 1 second.

- "CLEAR AL" will appear.


Caution:

- The operation explained above will erase all data stored in memory including clock and timer settings, and tuner and CD presets.

Remote control

Notes concerning use:

- Replace the batteries if the operating distance is reduced or if the operation becomes erratic.
- Periodically clean the transmitter LED on the remote control and the sensor on the main unit with a soft cloth.
- Exposing the sensor on the main unit to strong light may interfere with operation. Change the lighting or the direction of the unit.
- Keep the remote control away from moisture, excessive heat, shock, and vibrations.

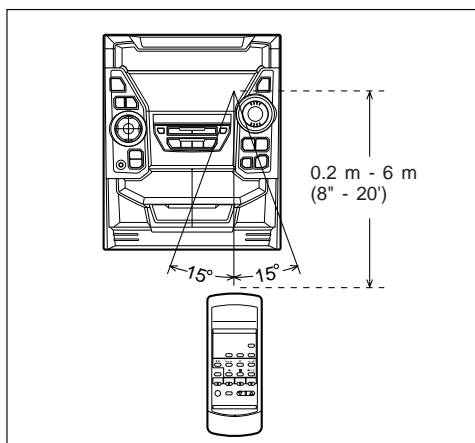

(Continued)

In this example, the clock is set for the 24-hour (0:00) system.

- 1 Press the ON/STAND-BY button to enter the stand-by mode.
 - 2 Press the CLOCK button.
 - 3 Within 5 seconds, press the MEMORY/SET button.
 - 4 Press the TUNING/TIME (^ or v) button to select the time display mode.
 - The 24-hour display will appear.
(0:00 - 23:59)
 - "AM 0:00" → The 12-hour display will appear.
(AM 0:00 - PM 11:59)
 - "AM 12:00" → The 12-hour display will appear.
(AM 12:00 - PM 11:59)
- Note that this can only be set when the unit is first installed or it has been reset.
- 5 Press the MEMORY/SET button.
 - 6 Press the TUNING/TIME (^ or v) button to adjust the hour.
 - Press the TUNING/TIME (^ or v) button once to advance the time by 1 hour. Hold it down to advance continuously.
 - When the 12-hour display is selected, "AM" will change automatically to "PM".
 - 7 Press the MEMORY/SET button.
 - 8 Press the TUNING/TIME (^ or v) button to adjust the minutes.
 - Press the TUNING/TIME (^ or v) button once to advance the time by 1 minute. Hold it down to change the time in 5 minute intervals.
 - The hour setting will not advance even if minutes advance from "59" to "00".
 - 9 Press the MEMORY/SET button.
 - The clock starts operating from "0" second.
(Seconds are not displayed).
- And then the clock display will disappear after a few seconds.

To see the time display:

- Press the CLOCK button.
- The time display will appear for about 5 seconds.

Note:


- The clock display will flash on and off at the push of the CLOCK button when the AC power supply is restored after a power failure occurs or after the AC power lead is disconnected. If this happens, follow the procedure below to change the clock time.

To change the clock time:

- 1 Press the CLOCK button.
- 2 Within 5 seconds, press the MEMORY/SET button.
- 3 Perform steps 6 - 9 above.

To change the time display mode:

- 1 Perform steps 1 - 2 in the section "RESETTING THE MICRO-COMPUTER".
- 2 Perform steps 1 - 9 above.

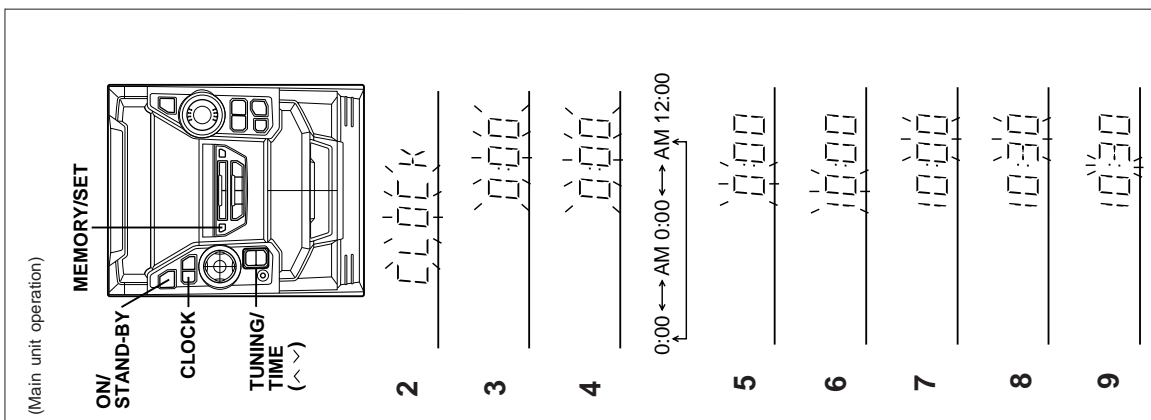

AM/FM interval (span)

The International Telecommunication Union (ITU) has established that member countries should maintain either a 10 kHz or a 9 kHz interval between broadcasting frequencies of any AM station. The illustration shows the 9 kHz interval zones (regions 1 and 3), and the 10 kHz interval zone (region 2). Before using the unit, set the SPAN SELECTOR switch (on the rear panel) to AM tuning interval (span) of your area.

To change the tuning zone:

- 1 Press the ON/STAND-BY button to enter the stand-by mode.
 - 2 Set the SPAN SELECTOR switch to "50/9" for 9 kHz AM interval (50 kHz FM interval), and "100/10" for 10 kHz AM interval (100 kHz FM interval).
 - 3 Whilst pressing down the button and the X-BASS/DEMO button, hold down the ON/STAND-BY button for at least 1 second.
- "CLEAR AL" will appear.

Caution:

- The operation explained above will erase all data stored in memory including clock and timer settings, and tuner and CD presets.

Connecting the AC power lead

Check the setting of the AC voltage selector located on the rear panel before plugging the unit into an AC socket. If necessary, adjust the selector to correspond to the AC power voltage used in your area.



Selector adjustment:

Turn the selector with a screwdriver until the appropriate voltage number appears in the window (110V, 127V, 220V or 230V - 240V AC).

Notes:

- Plug the AC power lead into a convenient AC socket, after any connections.
- Unplug the AC power lead from the AC socket if the unit will not be in used for a prolonged period of time.
- Never use a power lead other than the one supplied. Use of a power lead other than the one supplied may cause an electric shock or fire.
- **AC Plug Adaptor**
In areas (or countries) where an AC socket as shown in illustration 2 is used, connect the unit using the AC plug adaptor supplied with the unit, as illustrated. The AC plug adaptor is not included in areas where the AC wall socket and AC power plug can be directly connected (see illustration 1).

Note for users in Australia and New Zealand:
An AC plug adaptor is not supplied if the lead has an Australian Standard plug.

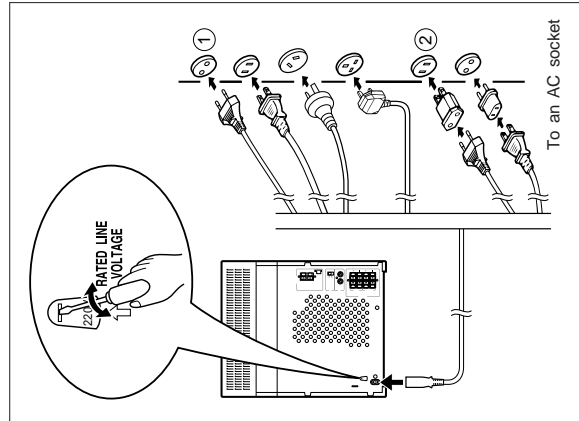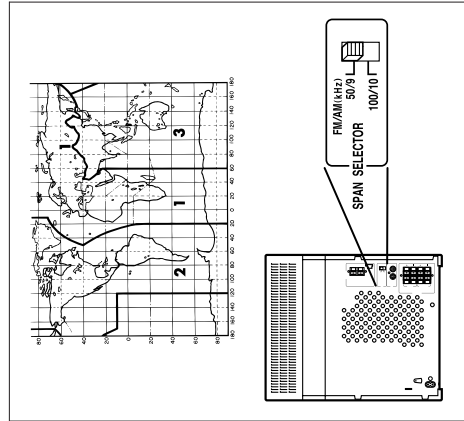

DISASSEMBLY

Caution on Disassembly

Follow the below-mentioned notes when disassembling the unit and reassembling it, to keep it safe and ensure excellent performance:

1. Take cassette tape and compact disc out of the unit.
2. Be sure to remove the power supply plug from the wall outlet before starting to disassemble the unit.
3. Take off nylon bands or wire holders where they need to be removed when disassembling the unit. After servicing the unit, be sure to rearrange the leads where they were before disassembling.
4. Take sufficient care on static electricity of integrated circuits and other circuits when servicing.

CD-BP160W/180W/1500W/1700W

STEP	REMOVAL	PROCEDURE	FIGURE
1	Top Cabinet	1. Screw (A1) x4	8-1
2	Side Panel (Left/right)	1. Screw (B1) x8	8-1
3	CD Player Unit/ CD Tray Cover	1. Turn on the power supply, open the disc tray, take out the CD cover, and close. (Note 1) 2. Screw (C1) x1 3. Hook (C2) x3 4. Hook (C3) x2 5. Socket (C4) x2	8-2
4	Rear Panel	1. Screw (D1) x6	8-2
5	Main PWB	1. Screw (E1) x5 2. Socket (E2) x4 3. Flat Cable (E3) x1 4. Lug Wire (E4) x1 5. Flat Wire (E5) x1	8-2,9-2 9-2
6	Socket PWB	1. Screw (F1) x1 2. Socket (F2) x1	9-2
7	Front Panel	1. Screw (G1) x2	9-2
8	Display PWB	1. Screw (H1) x15 2. Flat Cable (H2) x1	9-3
9	Tape Mechanism	1. Open the cassette holder. 2. Screw (J1) x6	9-3
10	Headphones PWB	1. Screw (K1) x1	9-3
11	Turntable	1. Hook (L1) x2 2. Cover (L2) x1	9-4
12	Disc Tray	1. Turn fully the lock lever in the arrow direction. 2. While holding the lock lever, rotate the cam gear until the cam gear rib engages with the clamp lever. 3. Push the slide holder backward to engage the claw with the groove and remove it in the direction of the arrow. (M1) x6	8-3 9-1 9-5
13	CD Servo PWB (Note 2)	1. Screw (N1) x1 2. Hook (N2) x3 3. Socket (N3) x4	9-6
14	CD Mechanism	1. Hook (P1) x2 2. Hook (P2) x3	10-1

Note 1:

- How to open the changer manually. (Fig. 8-3)
1. In this state, turn fully the lock lever in the arrow direction through the hole on the loading chassis bottom.
 2. While holding the lock lever, rotate the cam gear anticlockwise until the cam gear rib engages with the clamp lever. (Fig. 9-1)
 3. After that, push forward the CD slide holder.

CD-BP160W/180W/1500W/1700W

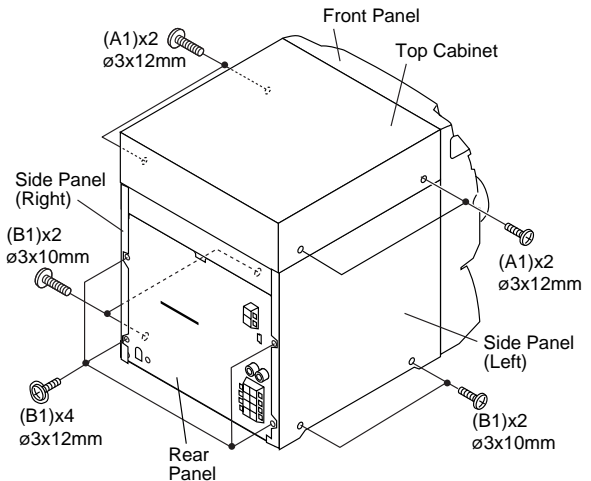


Figure 8-1

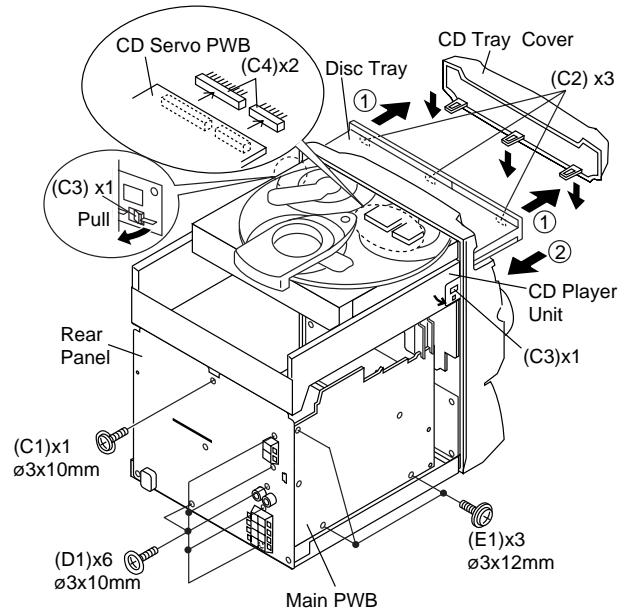


Figure 8-2

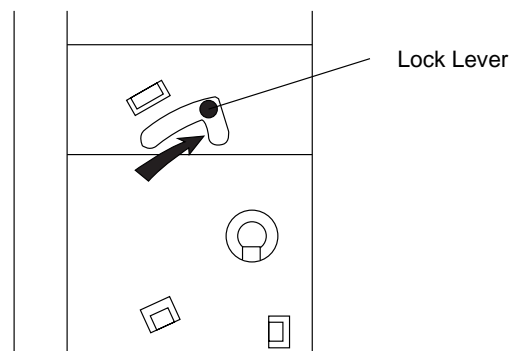


Figure 8-3

Note 2:

1. After removing the connector for the optical pickup from the connector, wrap the conductive aluminium foil around the front end of the connector to protect the optical pickup from electrostatic damage.

Note 3:

1. Be careful not to break the claw of the CD mechanism.
2. When fining back the cam gear assembly, let it lock by front movement.

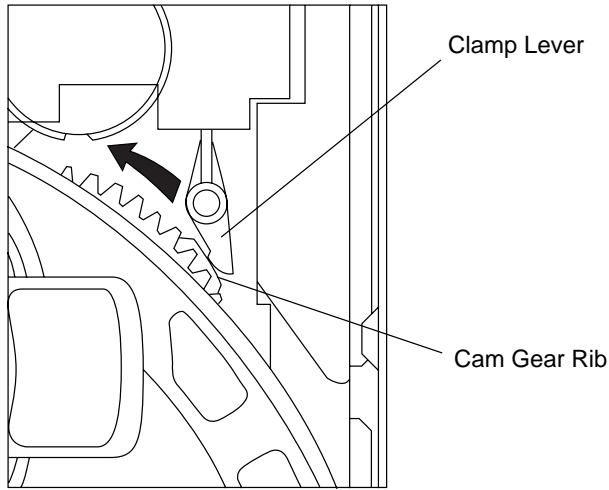


Figure 9-1

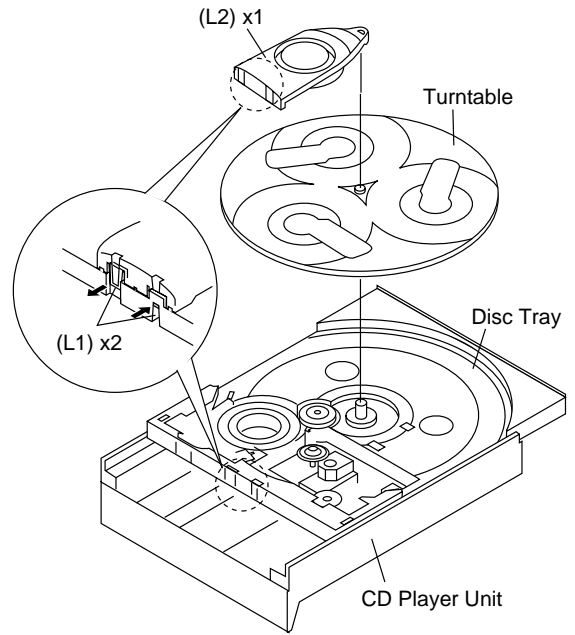


Figure 9-4

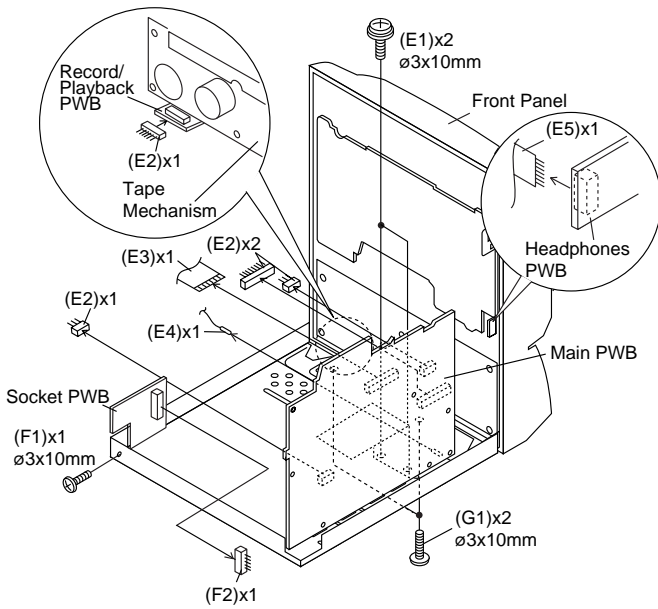


Figure 9-2

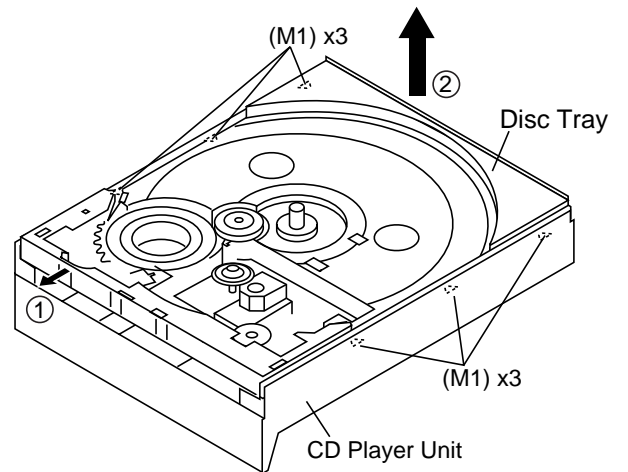


Figure 9-5

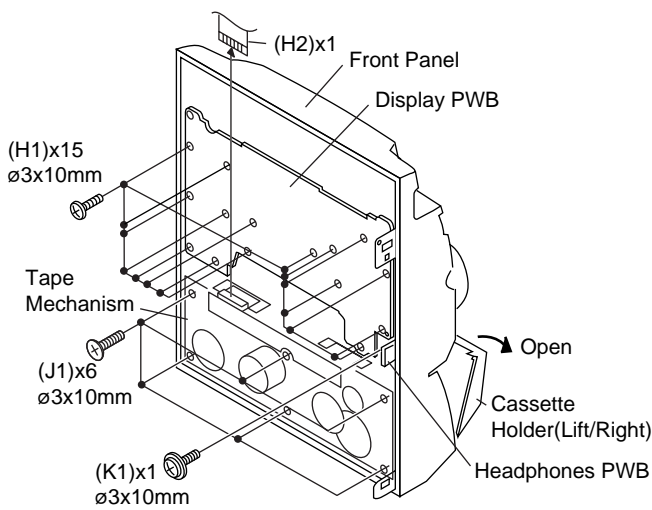


Figure 9-3

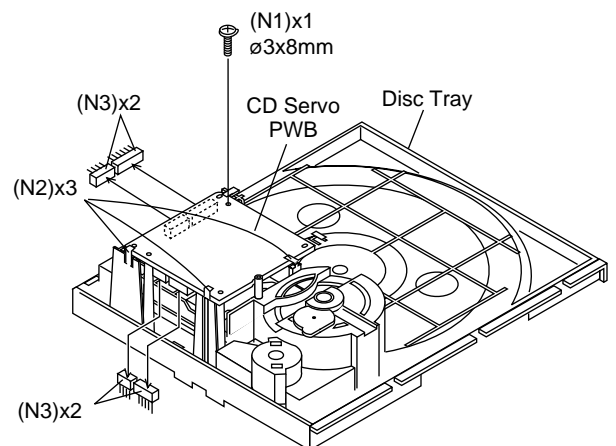


Figure 9-6

CD-BP160W/180W/1500W/1700W

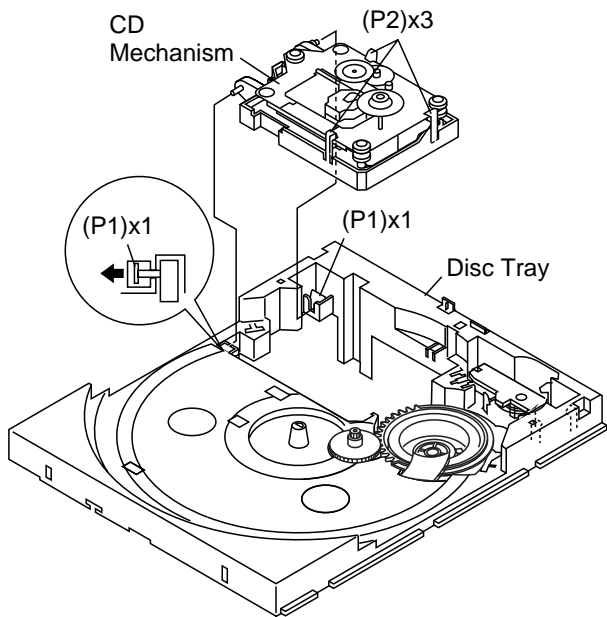


Figure 10-1

CP-BP1700/160			
STEP	REMOVAL	PROCEDURE	FIGURE
1	Woofer/ Sub Woofer	1. Front Panel (A1) x1 2. Screw (A2) x8	10-2
2	Tweeter	1. Screw (B1) x2	10-2

CP-BP180/1500			
STEP	REMOVAL	PROCEDURE	FIGURE
1	Woofer/ Sub Woofer	1. Front Panel (A1) x1 2. Screw (A2) x8	10-3
2	Tweeter	1. Screw (B1) x2	10-3

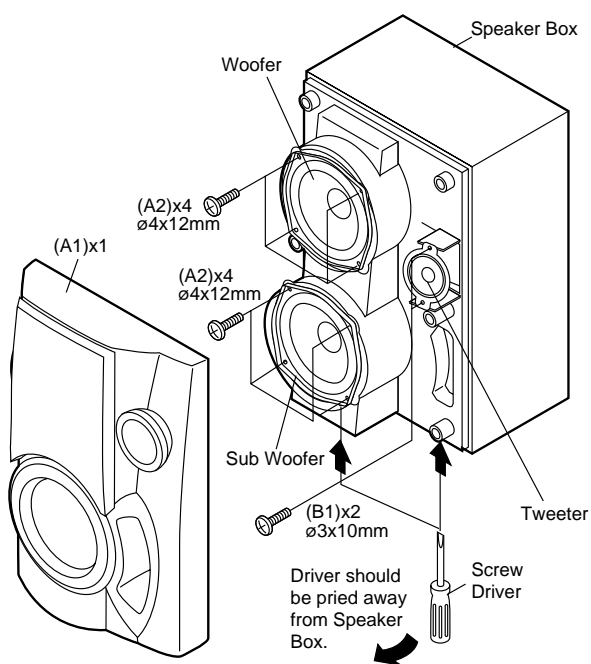


Figure 10-2

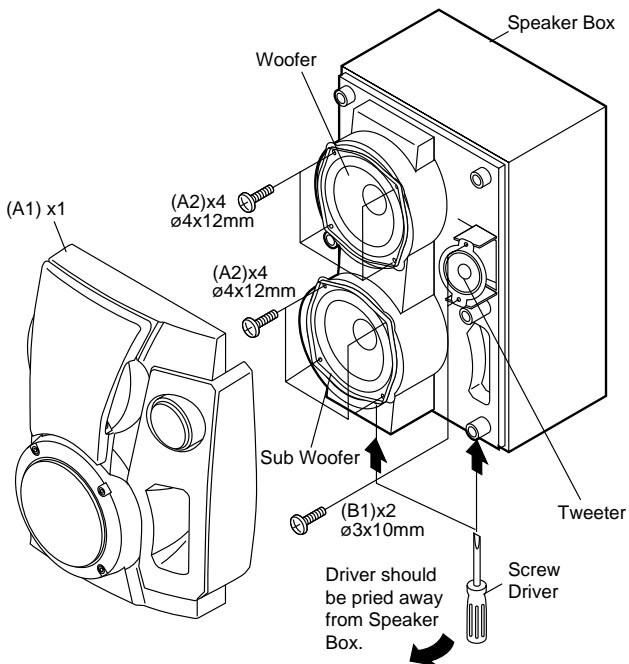


Figure 10-3

REMOVING AND REINSTALLING THE MAIN PARTS

TAPE MECHANISM SECTION

Perform steps 1, 2, 3, 4, 5, 7 and 9 of the disassembly method to remove the tape mechanism.

How to remove the record/playback and erase heads (Tape 2) (See Fig. 11-1)

1. Carefully remove the record/playback head and erase head screws (A1) x 2 pcs.

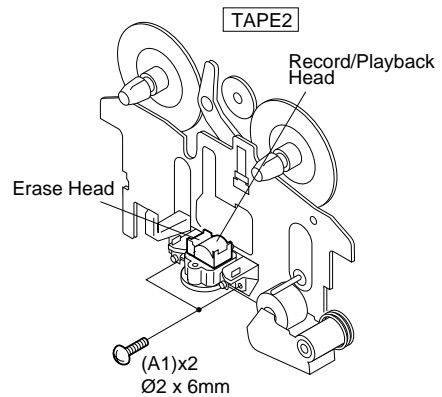


Figure 11-1

How to remove the playback head (Tape 1) (See Fig. 11-2)

1. Carefully remove the playback head screws (B1) x 2 pcs.

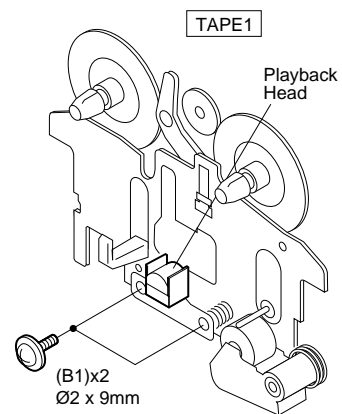


Figure 11-2

How to remove the pinch roller (Tape 1/2) (See Fig. 11-3)

1. Carefully bend the pinch roller pawl in the direction of the arrow <A>, and remove the pinch roller (C1) x 1 pc., in the direction of the arrow

Note:

When installing the pinch roller, pay attention to the spring mounting position.

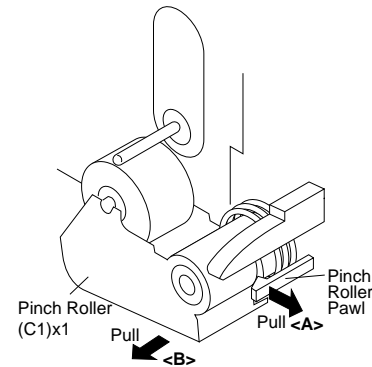


Figure 11-3

How to remove the belt (Tape 1) (See Fig. 11-4)

1. Remove the main belt (D1) x 1 pc., from the motor side.
2. Remove the FF/REW belt (D2) x 1 pc.

How to remove the belt (Tape 2) (See Fig. 11-4)

1. Remove the main belt (E1) x 1 pc., from the motor side.
2. Remove the FF/REW belt (E2) x 1 pc.

How to remove the motor (See Fig. 11-5)

1. Remove the screws (F1) x 2 pcs., to remove the motor.

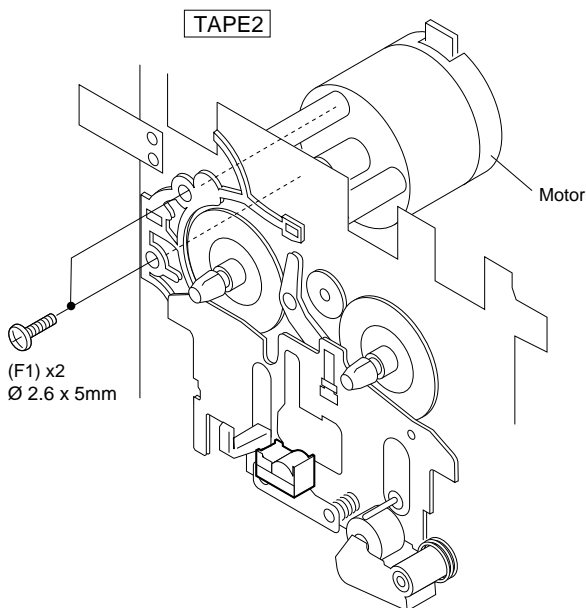


Figure 11-5

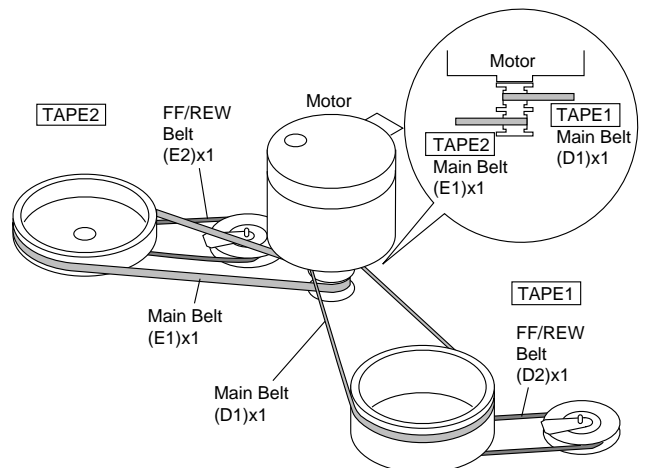


Figure 11-4

CD-BP160W/180W/1500W/1700W

CD MECHANISM SECTION

Perform steps 1, 2, 3, 11, 12, 13 and 14 of the disassembly method to remove the CD mechanism.

How to remove the T/T Up/Down motor (See Fig. 12-1)

1. Bend the hooks (A1) x 5 pcs., to remove the T/T Up/Down motor.
2. Remove the drive belt (A2) x 1 pc.

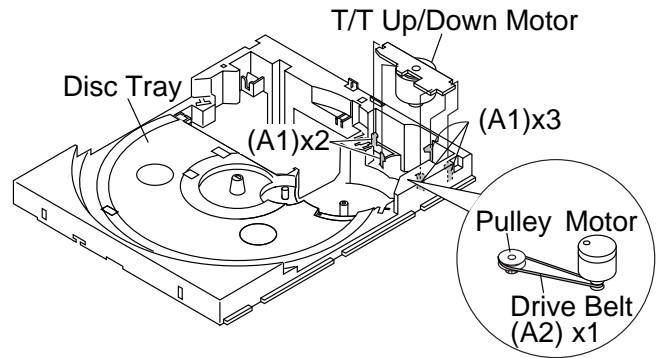


Figure 12-1

How to remove the pickup (See Fig. 12-2)

1. Remove the screws (B1) x 2 pcs., to remove the shaft (B2).
2. Remove the stop washer (B3) x 1 pc., to remove the gear (B4).
3. Remove the pickup.

Note

After removing the connector for the optical pickup from the connector, wrap the conductive aluminium foil around the front end of connector to protect the optical pickup from electrostatic damage.

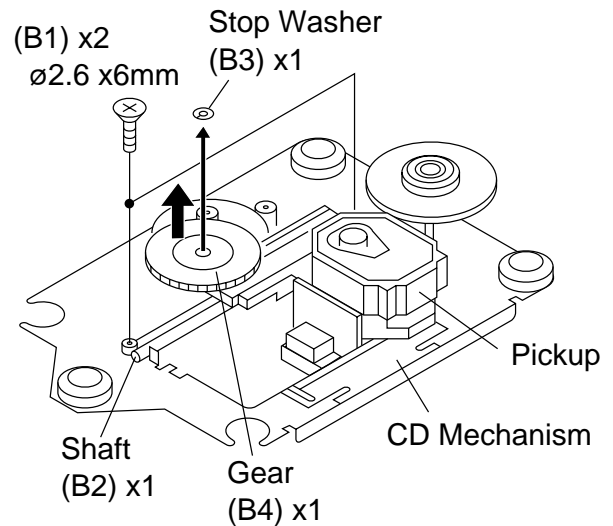


Figure 12-2

ADJUSTMENT

MECHANISM SECTION

• Driving Force Check

Torque Meter	Specified Value
Play: TW-2111	Tape 1: Over 80 g Tape 2: Over 80 g

• Torque Check

Torque Meter	Specified Value	
	Tape 1	Tape 2
Play: TW-2111	30 to 80 g.cm	30 to 80 g.cm
Fast forward: TW-2231	—	70 to 180 g.cm
Rewind: TW-2231	—	70 to 180 g.cm

• Tape Speed

	Test Tape	Adjusting Point	Specified Value	Instrument Connection
Normal speed	MTT-111	Variable Resistor in motor.	3,000 ± 30 Hz	Speaker terminal (Load resistance: 6 ohms)

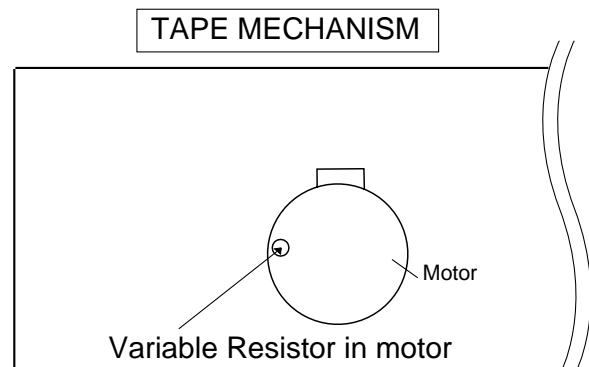


Figure 12-3

TUNER SECTION

fL: Low-range frequency
fH: High-range frequency

• **AM IF/RF**

Signal generator: 400 Hz, 30%, AM modulated

Test Stage	Frequency	Frequency Display	Setting/ Adjusting Parts	Instrument Connection
AM IF	450 kHz	1,602 kHz	T351	*1
AM Band Coverage	—	531 kHz	(fL): T306 1.1 ± 0.1 V	*2
AM Tracking	990 kHz	990 kHz	(fL): T303	*1

*1. Input: Antenna, Output: TP302
*2. Input: Antenna, Output: TP301

• **FM RF**

Signal generator: 400Hz, 22.5 kHz dev., FM modulated

Test Stage	Frequency	Frequency Display	Serring/ Adjusting Point	Instrument Connection
FM Band Coverage	—	87.50 MHz	T301(fL): 3.4 V ± 0.1V	*1
FM RF	98.00 MHz (10-30 dB)	98.00 MHz	L312	*2

*1. Input: Antenna, Output: TP301
*2. Input: Antenna, Output: Speaker terminal

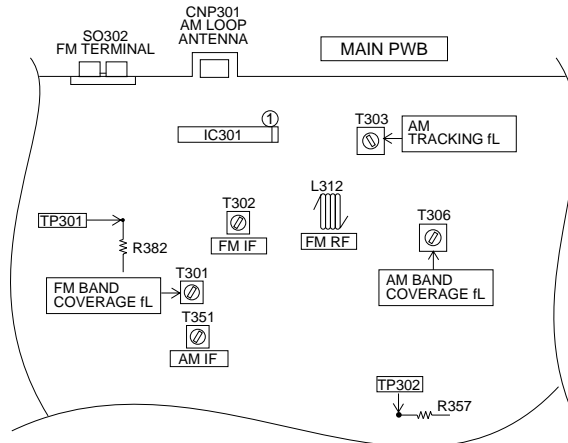


Figure 13-1 ADJUSTMENT POINTS

CD SECTION

• **Adjustment**

Since this CD system incorporates the following automatic adjustment functions, readjustment is not needed when replacing the pickup. Therefore, different PWBs and pickups can be combined freely.

Each time a disc is changed, these adjustments are performed automatically. Therefore, playback of each disc can be performed under optimum conditions.

Items adjusted automatically

- Offset adjustment (The offset voltage between the head amplifier output and the VREF reference voltage is compensated inside the IC.)
 - * Focus offset adjustment
 - * Tracking offset adjustment
- Tracking balance adjustment (waveform drawing 13-2 EFBL)
- Gain adjustment (The gain is compensated inside the IC so that the loop gain at the gain crossover frequency will be 0dB.)
 - * Focus gain adjustment
 - * Tracking gain adjustment

CD ERROR CODE DESCRIPTION

Error	State Code
0001 0002	[Servo System Error] Cannot detect Pickup-in SW DSP access error
0101 0103	[Error during close operation] Open/Close SW Low → High not functioning Open/Close SW High → Low not functioning
0201 0203	[Error during open operation] Open/Close SW Low → High not functioning Open/Close SW High → Low not functioning
0302 0306 0307 0308	[Error during skip operation] Pickup-in SW is not detected During Disc 1 search, Open/Close SW or Clamp SW or Disc SW do not change to low. Clamp SW Low → High not functioning Clamp SW High → Low not functioning

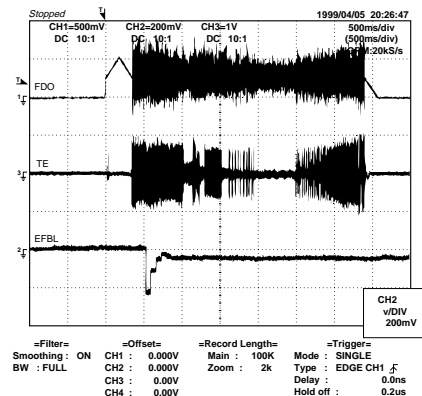


Figure 13-2


CD-BP160W/180W/1500W/1700W

• TEST MODE

Setting of test mode

Any one test mode can be set by pressing several keys as follows.

<X-BASS> + <CD> + <POWER> TEST: CD operation test

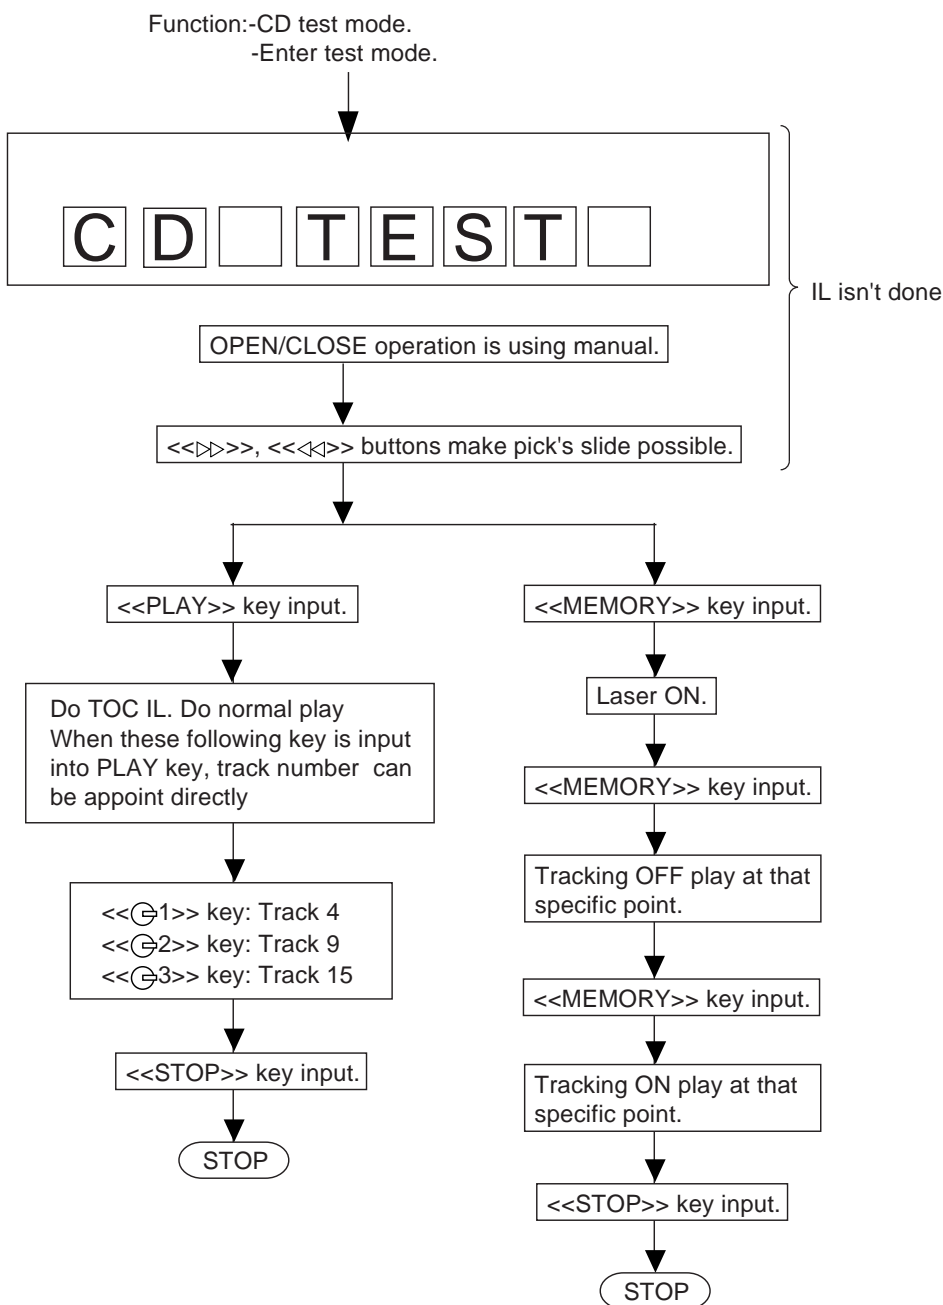

VOL — Last memory
BAL — CENTER
P.GEQ — FLAT
X-BASS — OFF

To cancel : Power OFF

Sliding the PICKUP with
<<▶▶>>, <<◀◀>> button
must only be in STOP mode.

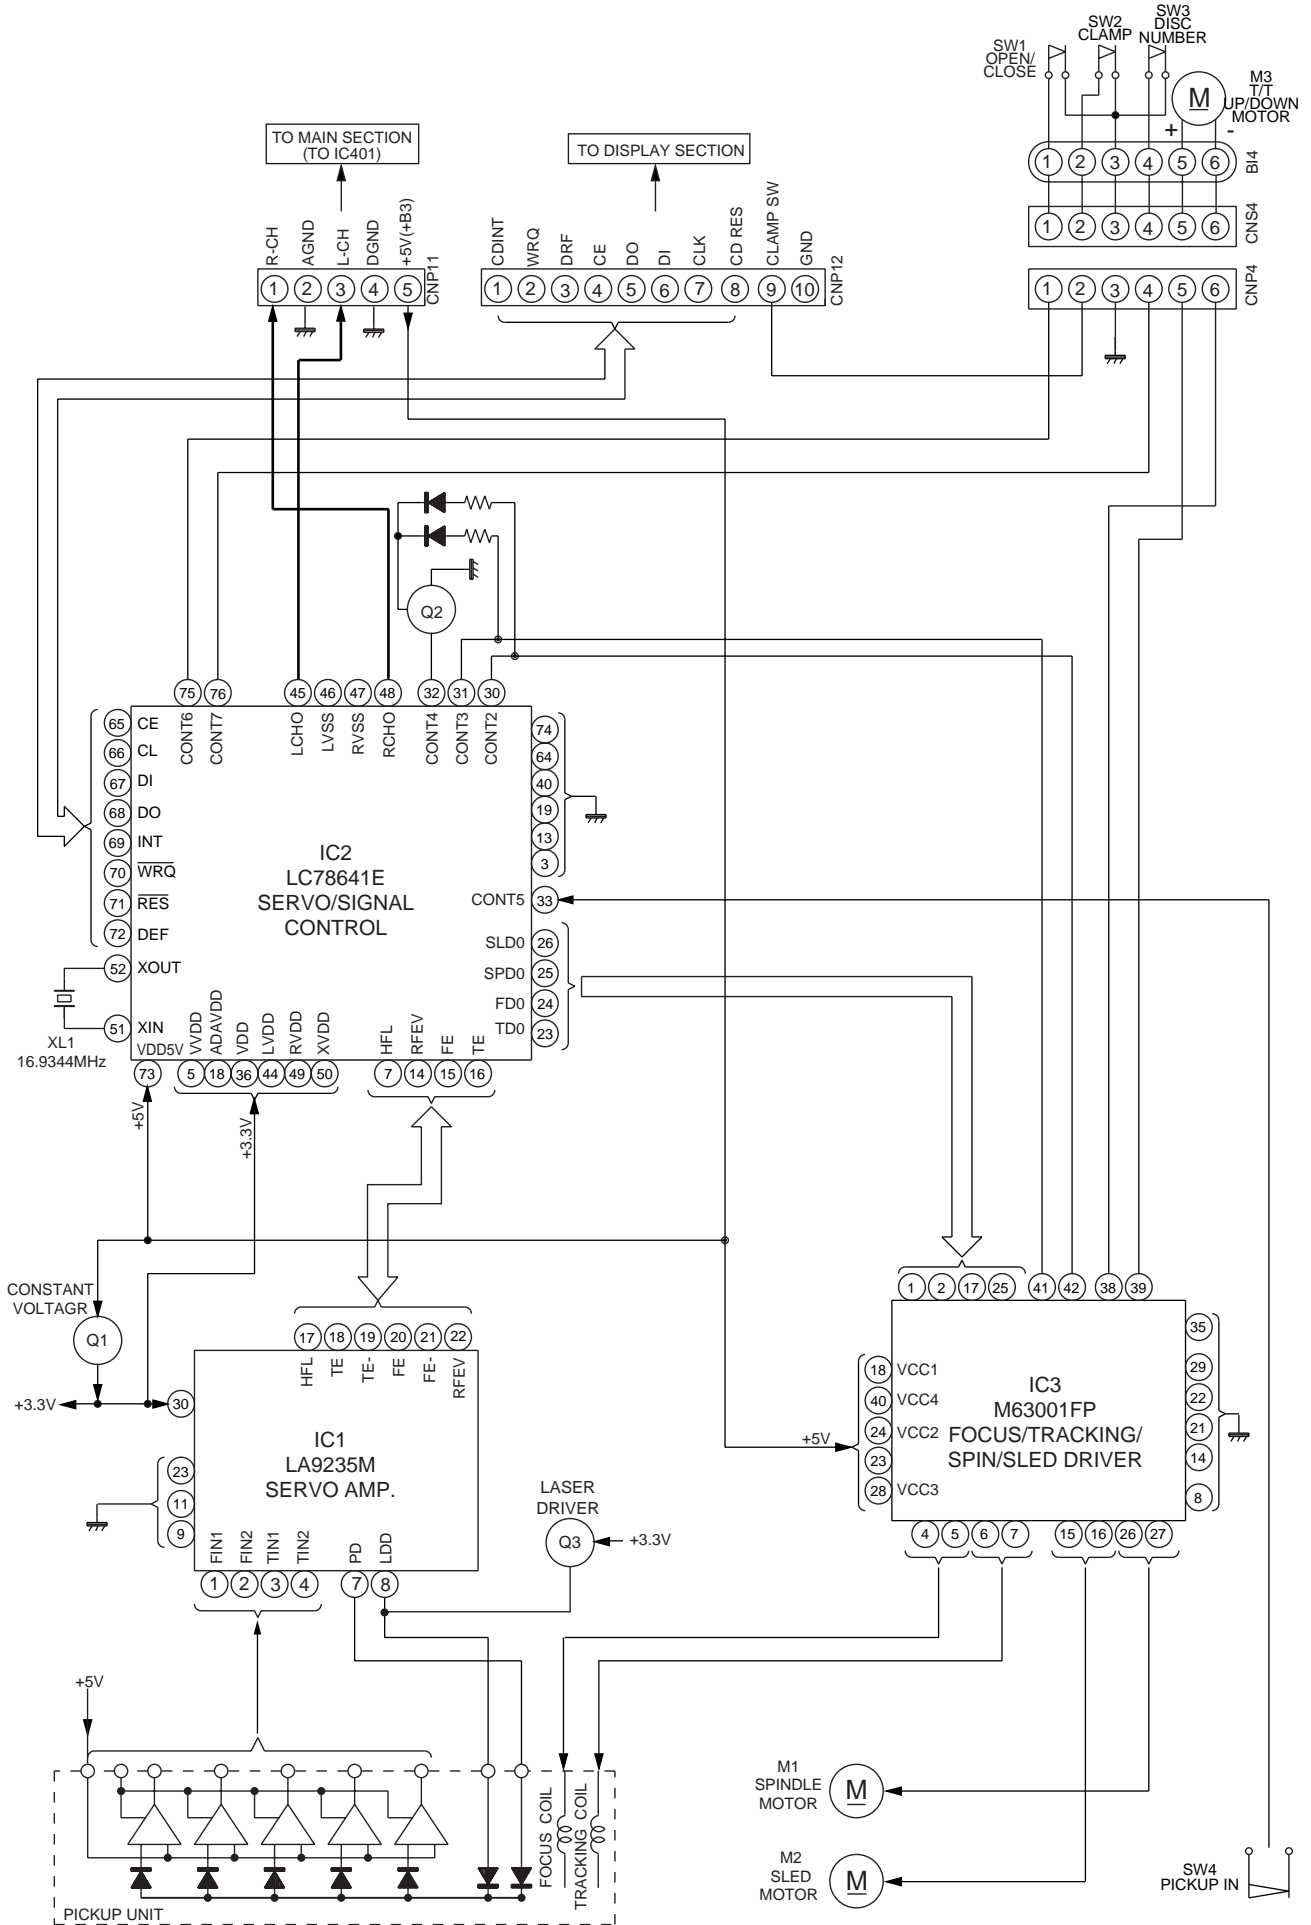


Figure 15 BLOCK DIAGRAM (1/3)

CD-BP160W/180W/1500W/1700W

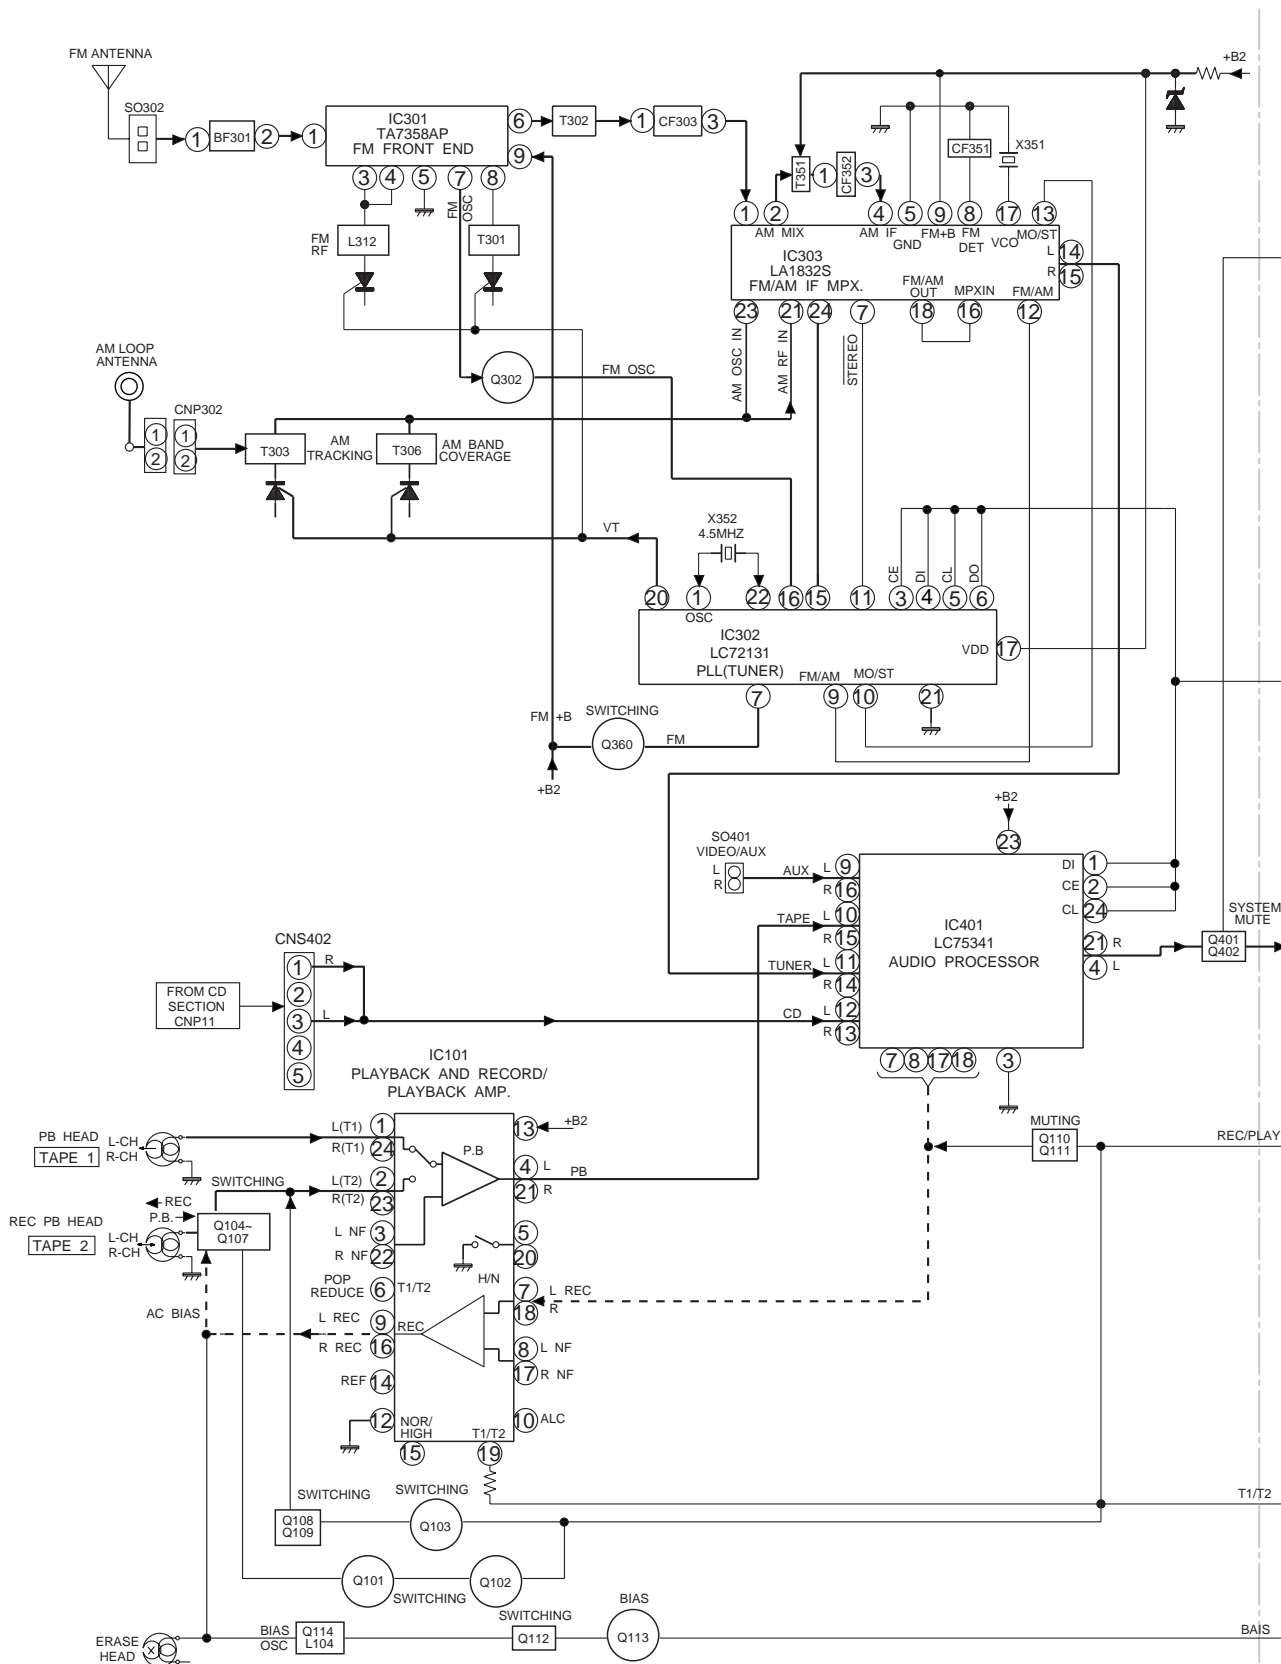


Figure 16 BLOCK DIAGRAM (2/3)

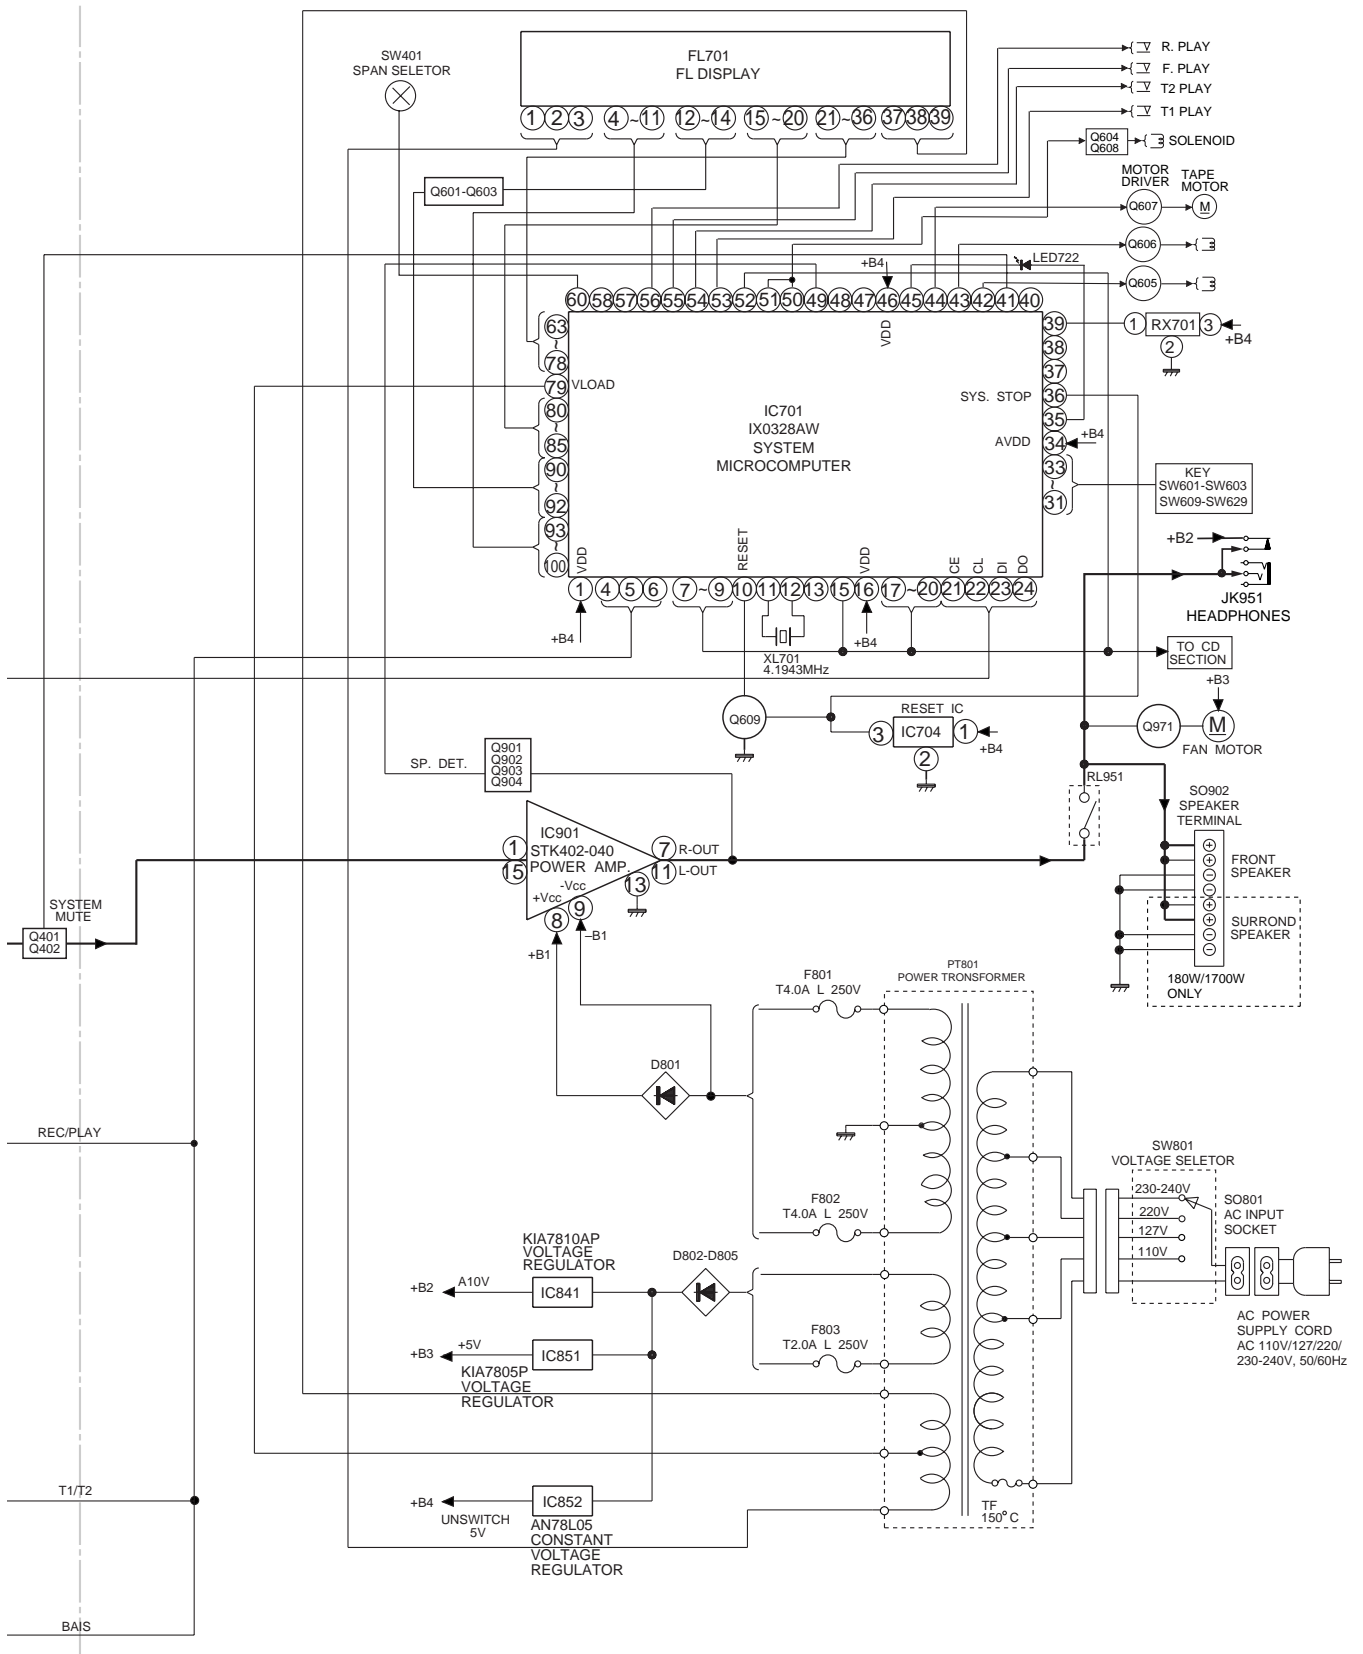


Figure 17 BLOCK DIAGRAM (3/3)

CD-BP160W/180W/1500W/1700W


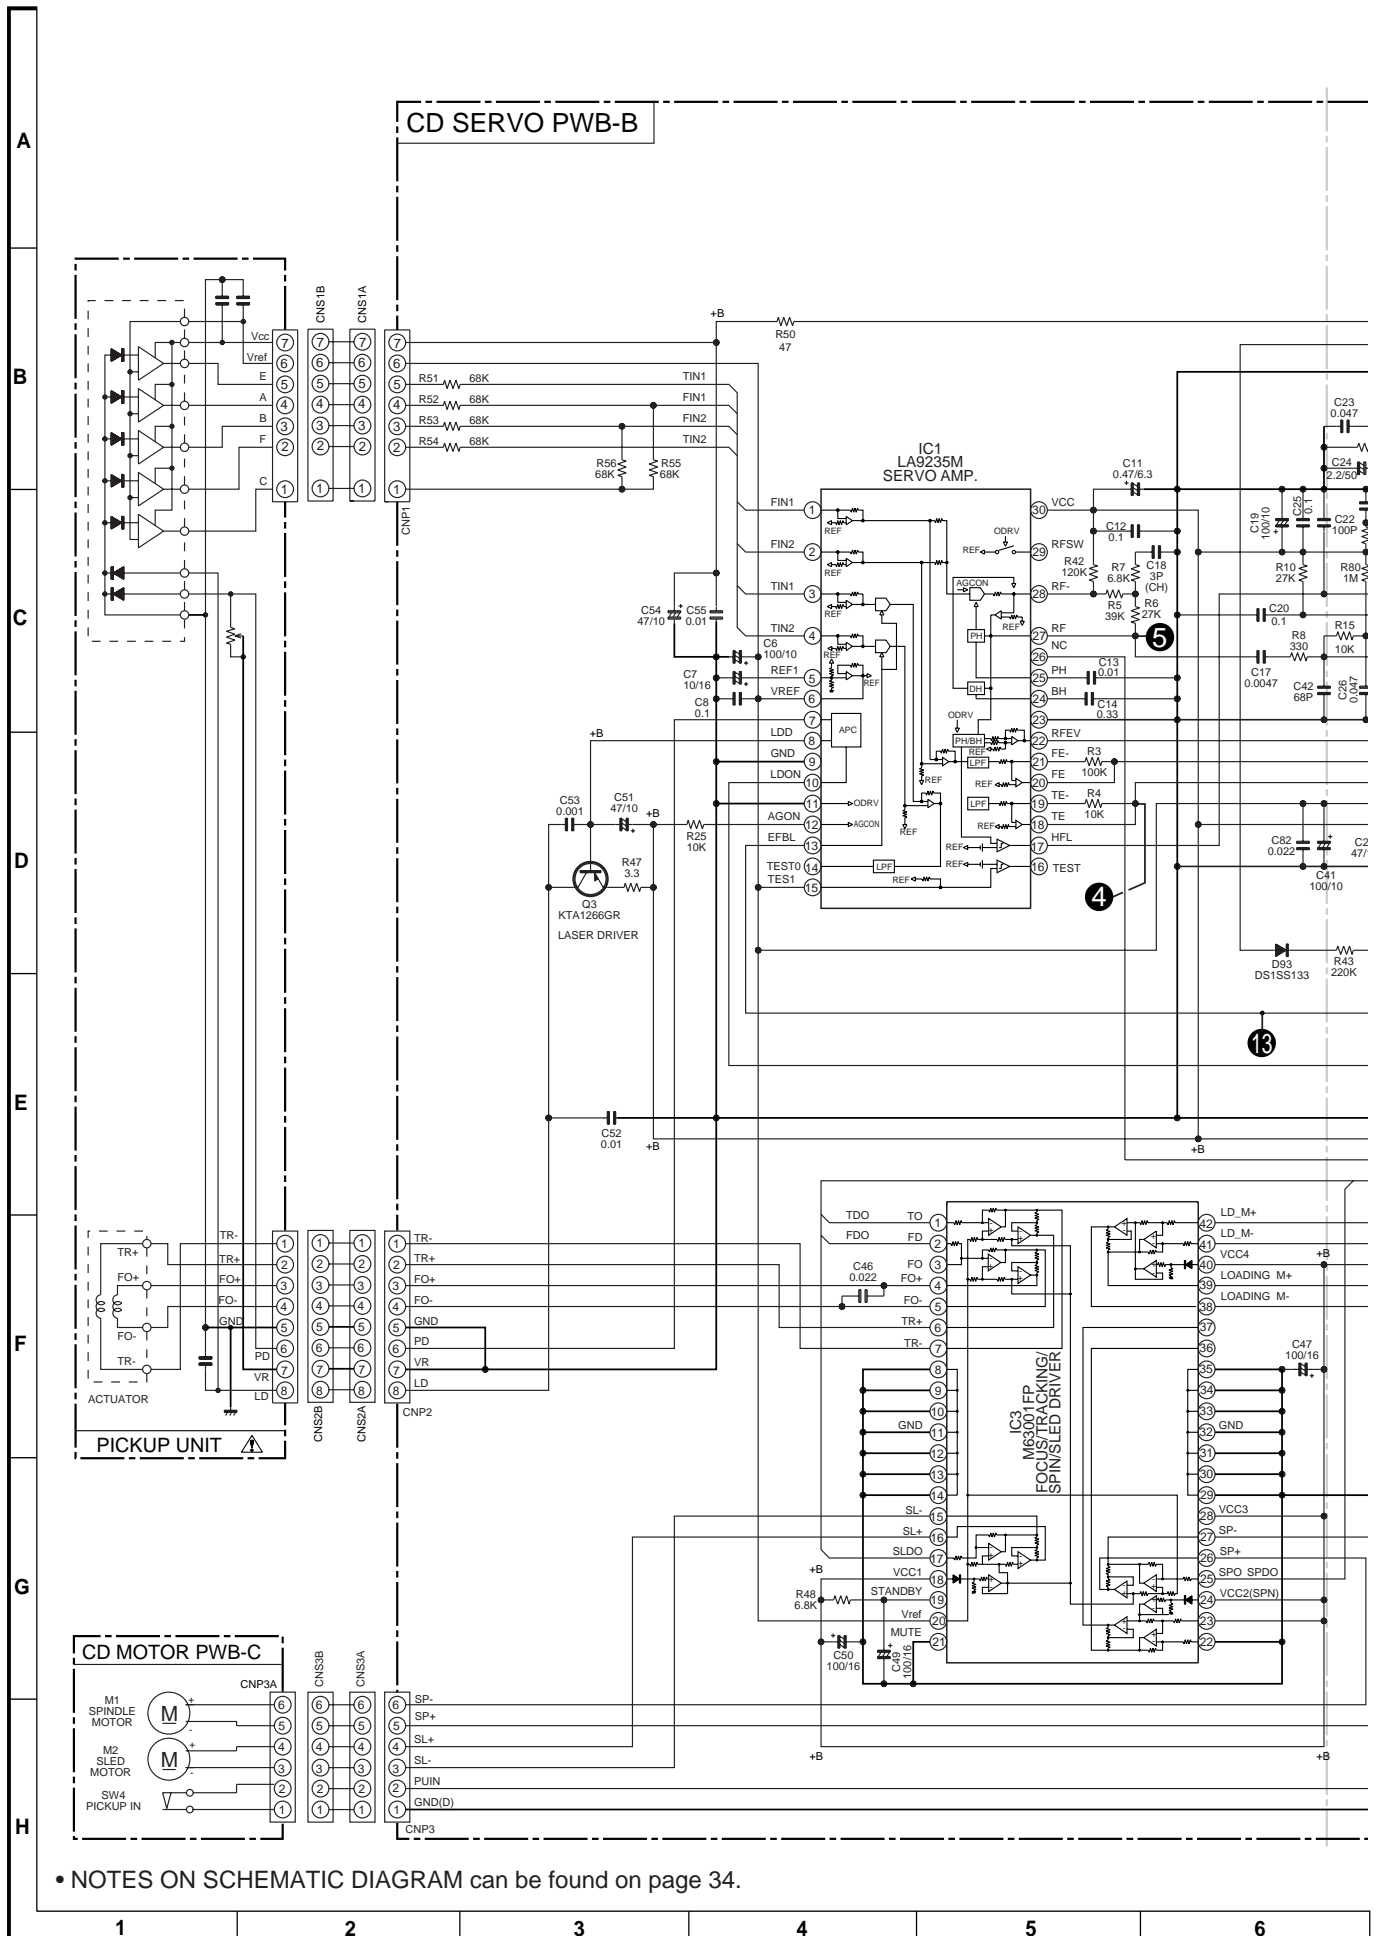


Figure 18 SCHEMATIC DIAGRAM (1/9)

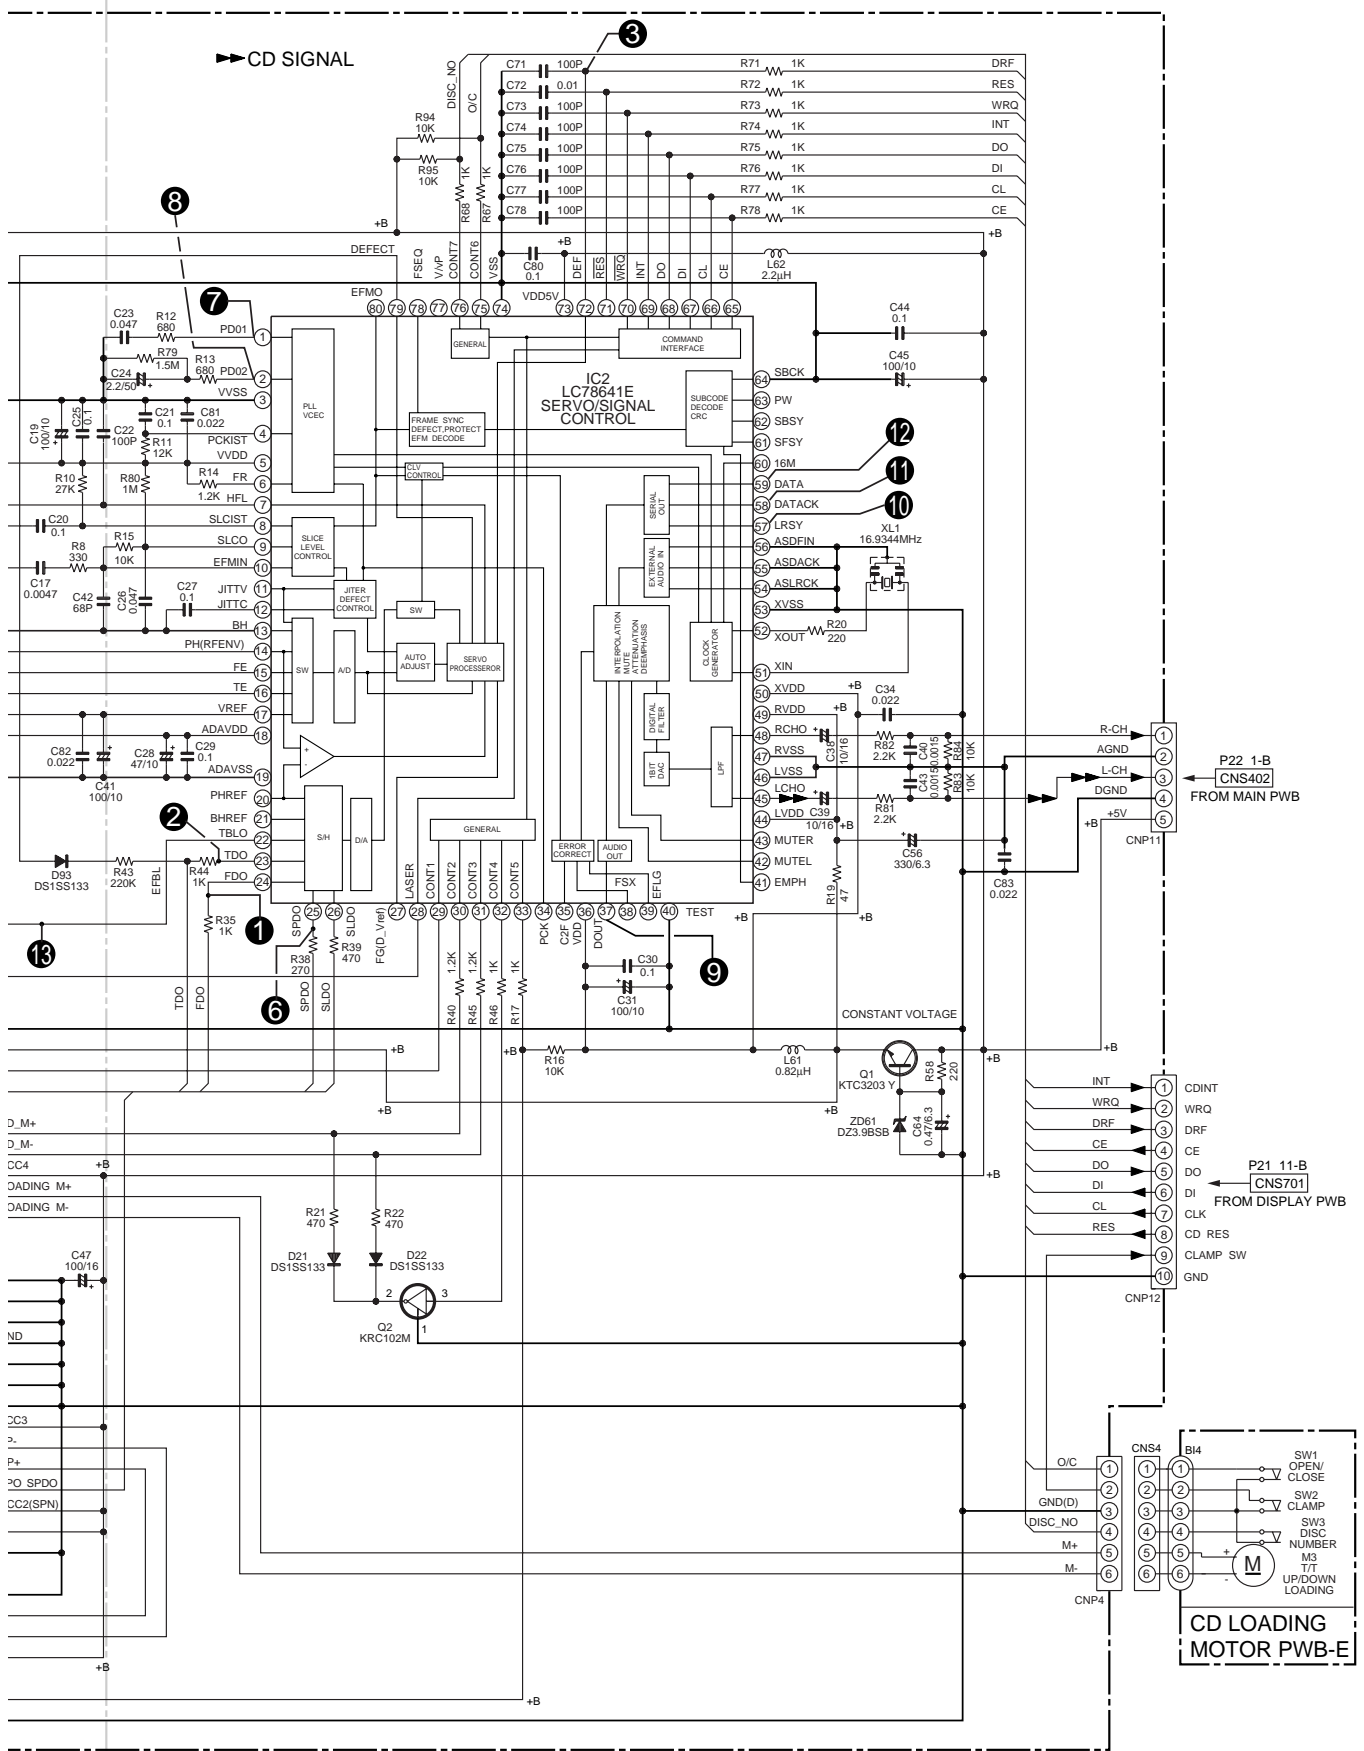

• The numbers 1 to 13 are waveform numbers shown in page 35.

7	8	9	10	11	12
---	---	---	----	----	----

Figure 19 SCHEMATIC DIAGRAM (2/9)


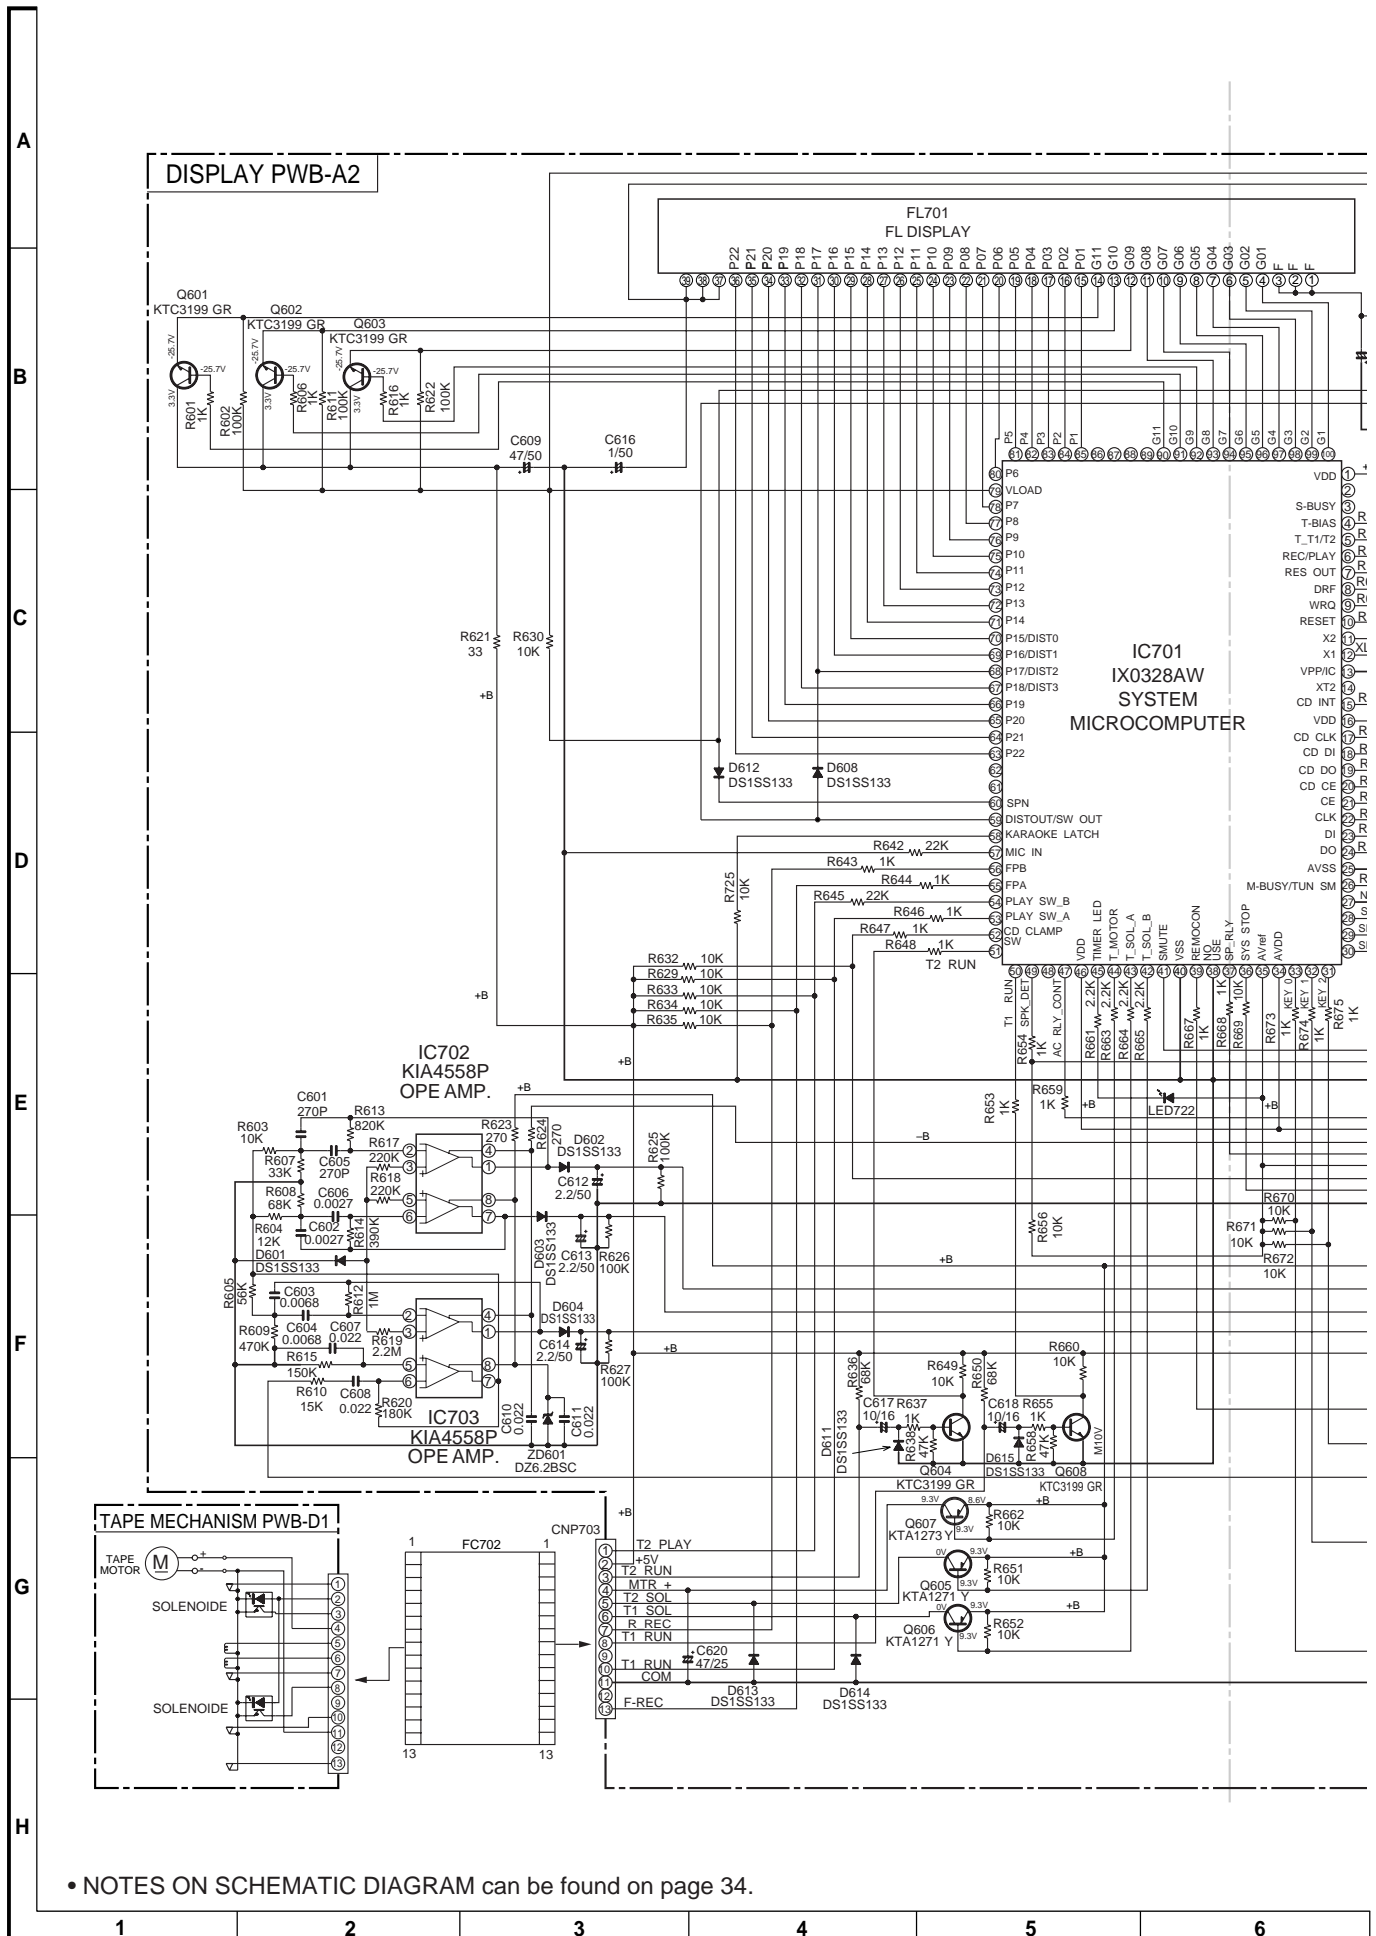



Figure 20 SCHEMATIC DIAGRAM (3/9)

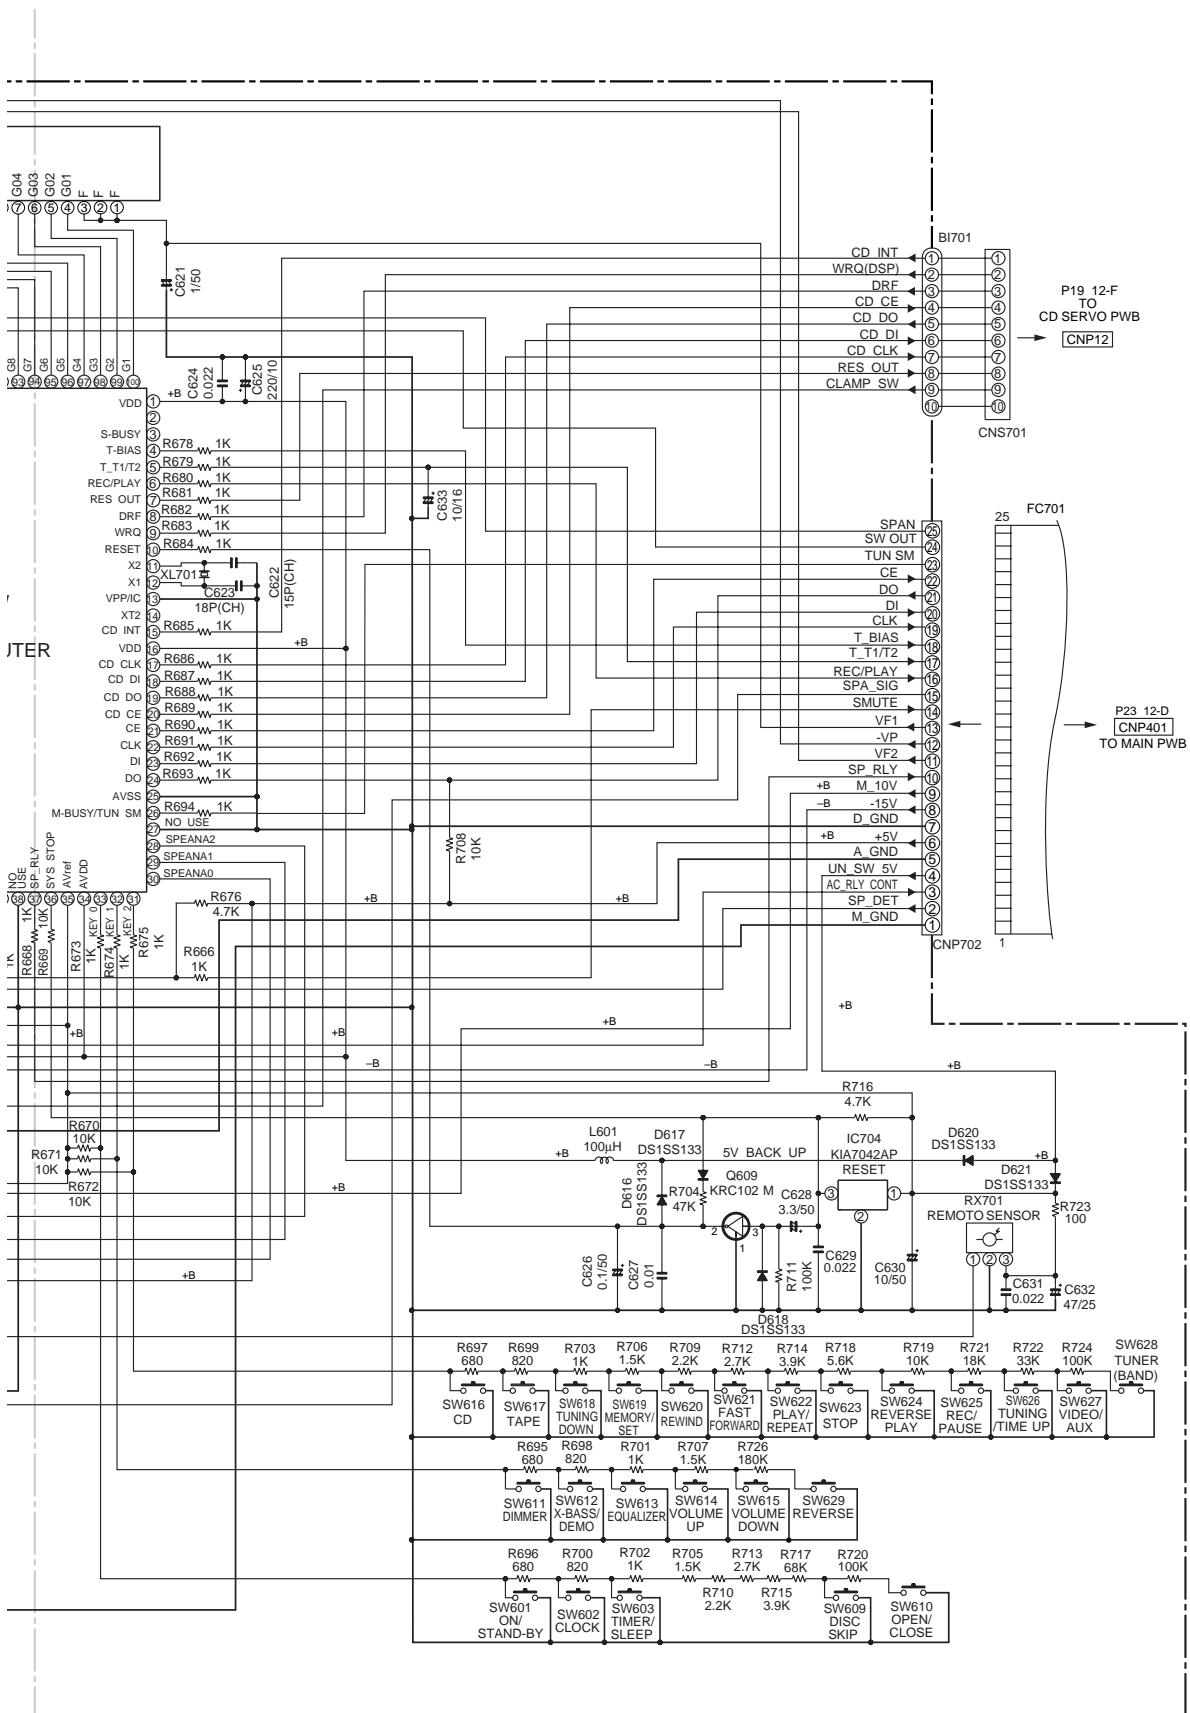

7	8	9	10	11	12
---	---	---	----	----	----


Figure 21 SCHEMATIC DIAGRAM (4/9)

CD-BP160W/180W/1500W/1700W

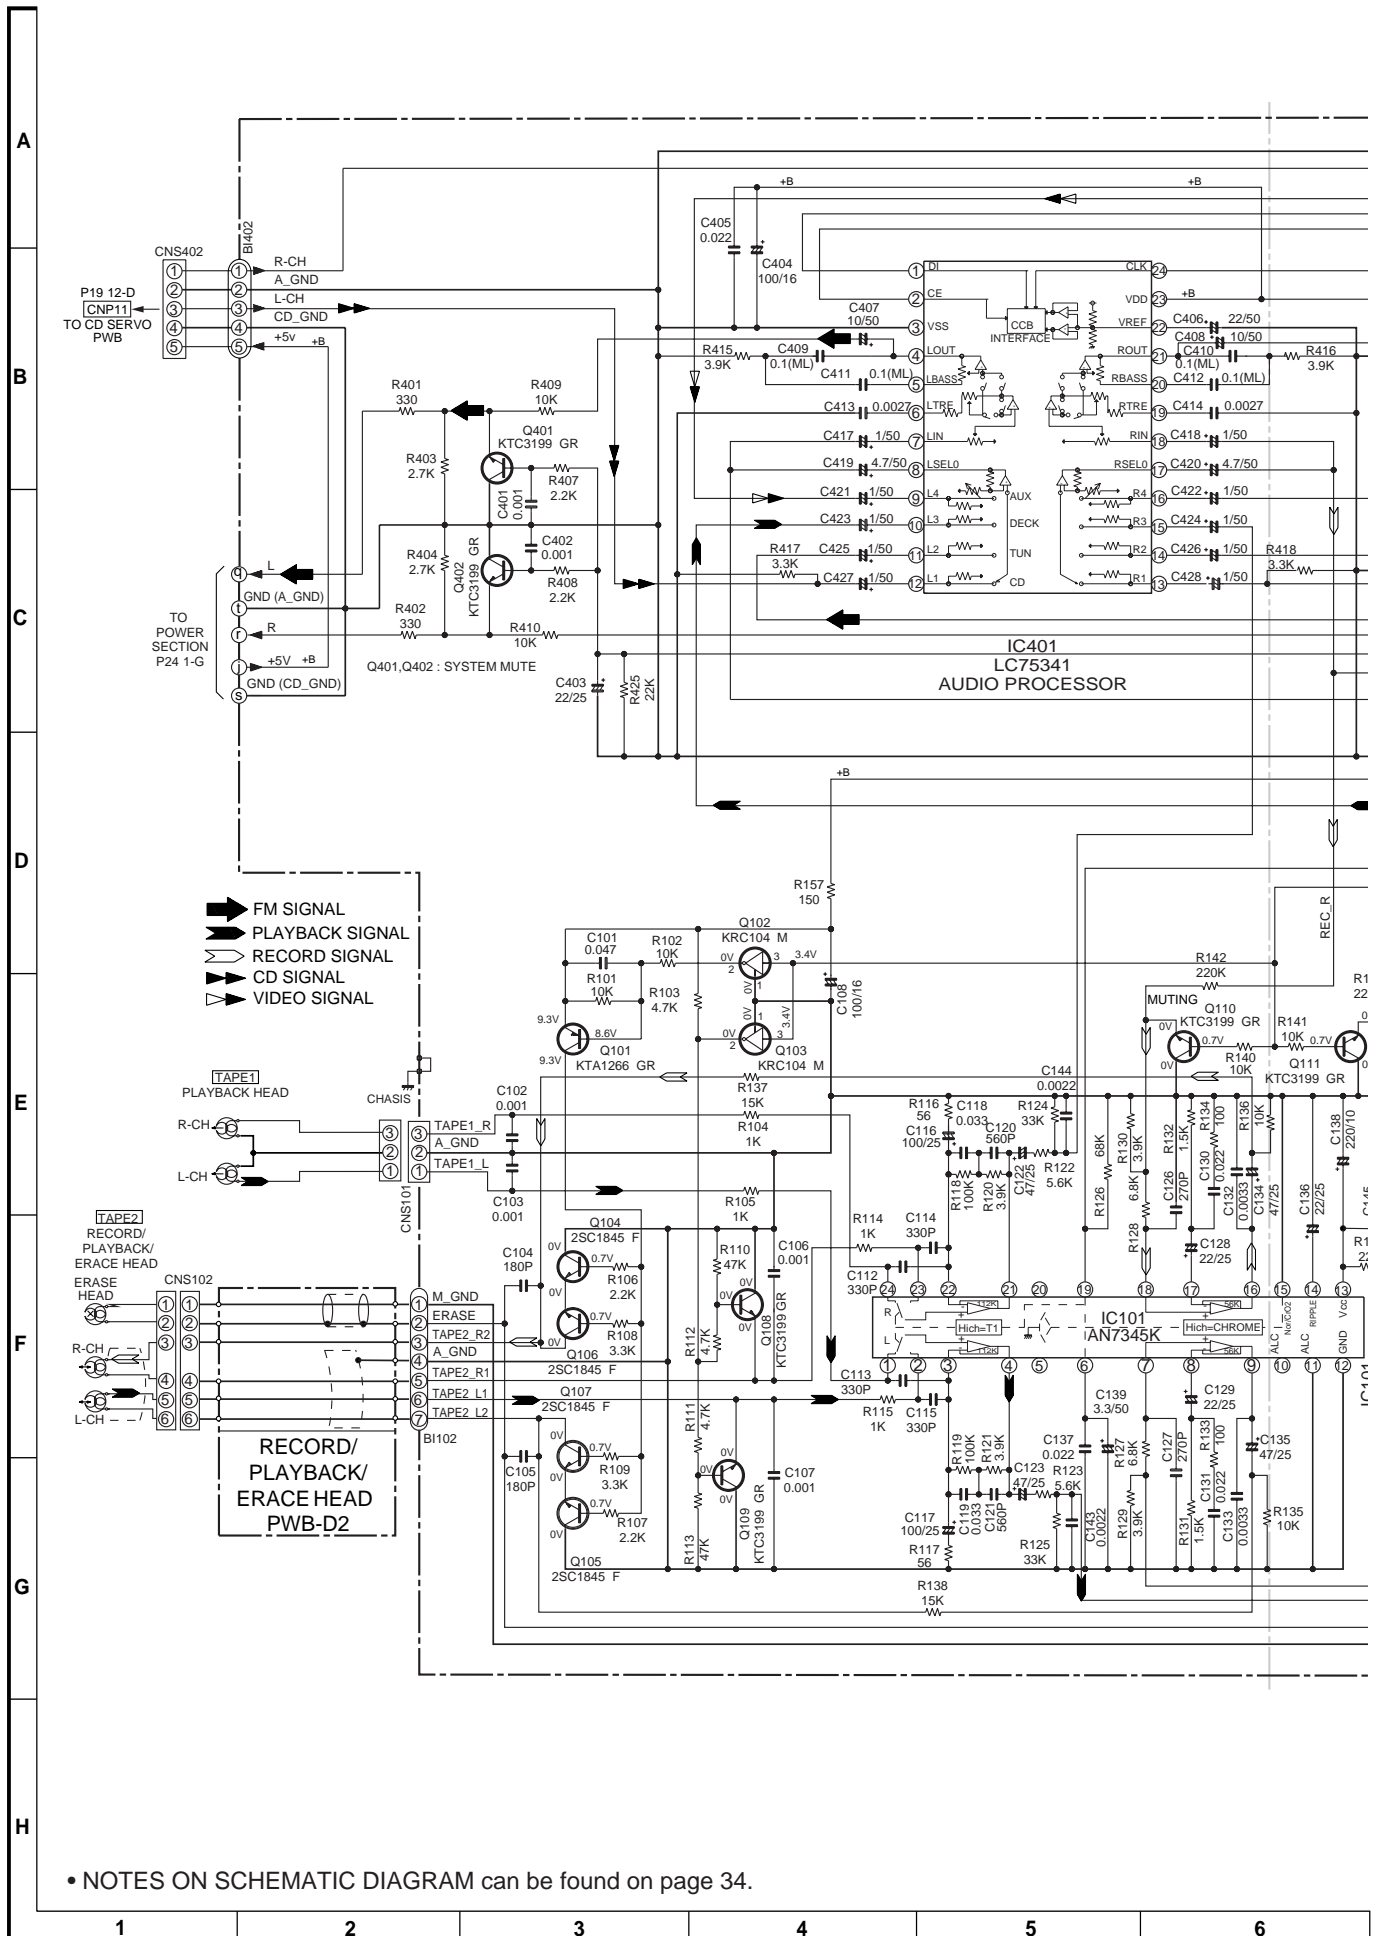

• NOTES ON SCHEMATIC DIAGRAM can be found on page 34.


Figure 22 SCHEMATIC DIAGRAM (5/9)

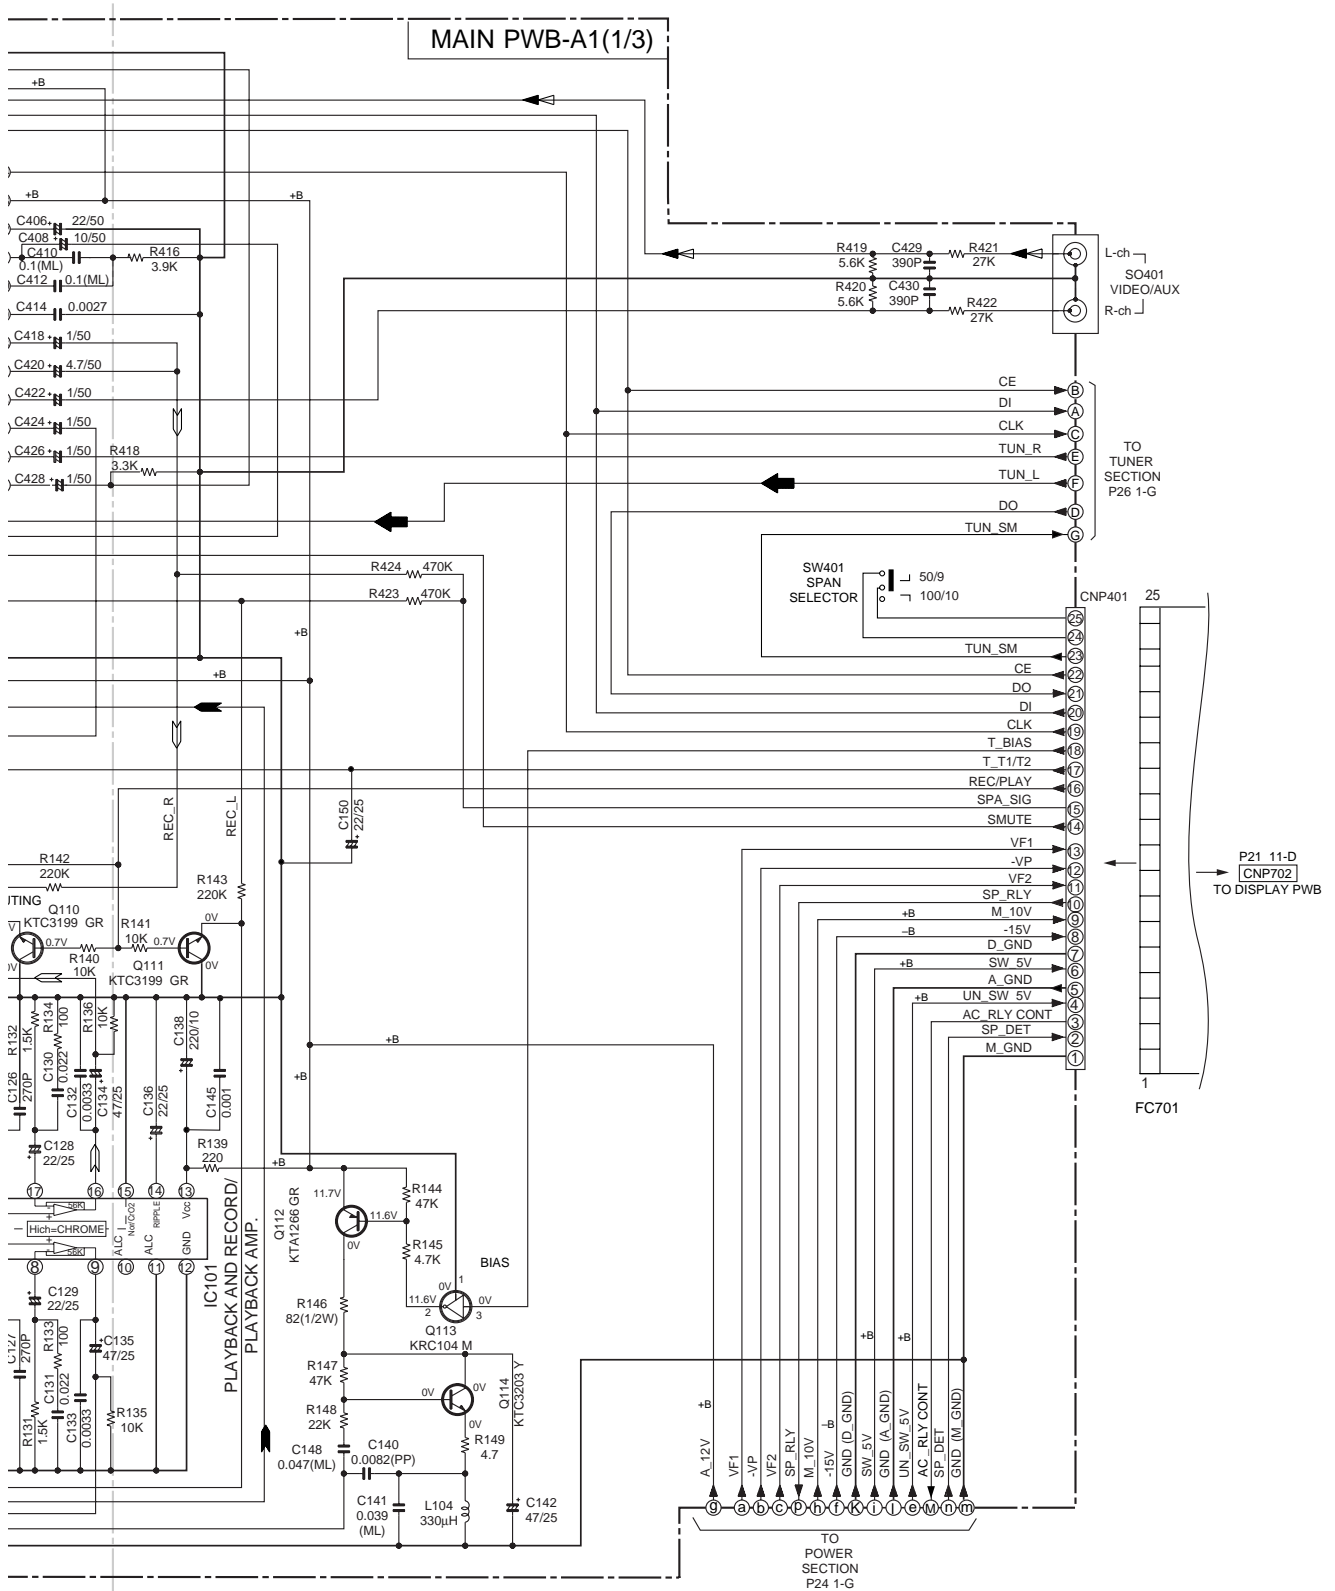

7	8	9	10	11	12
---	---	---	----	----	----


Figure 23 SCHEMATIC DIAGRAM (6/9)

CD-BP160W/180W/1500W/1700W

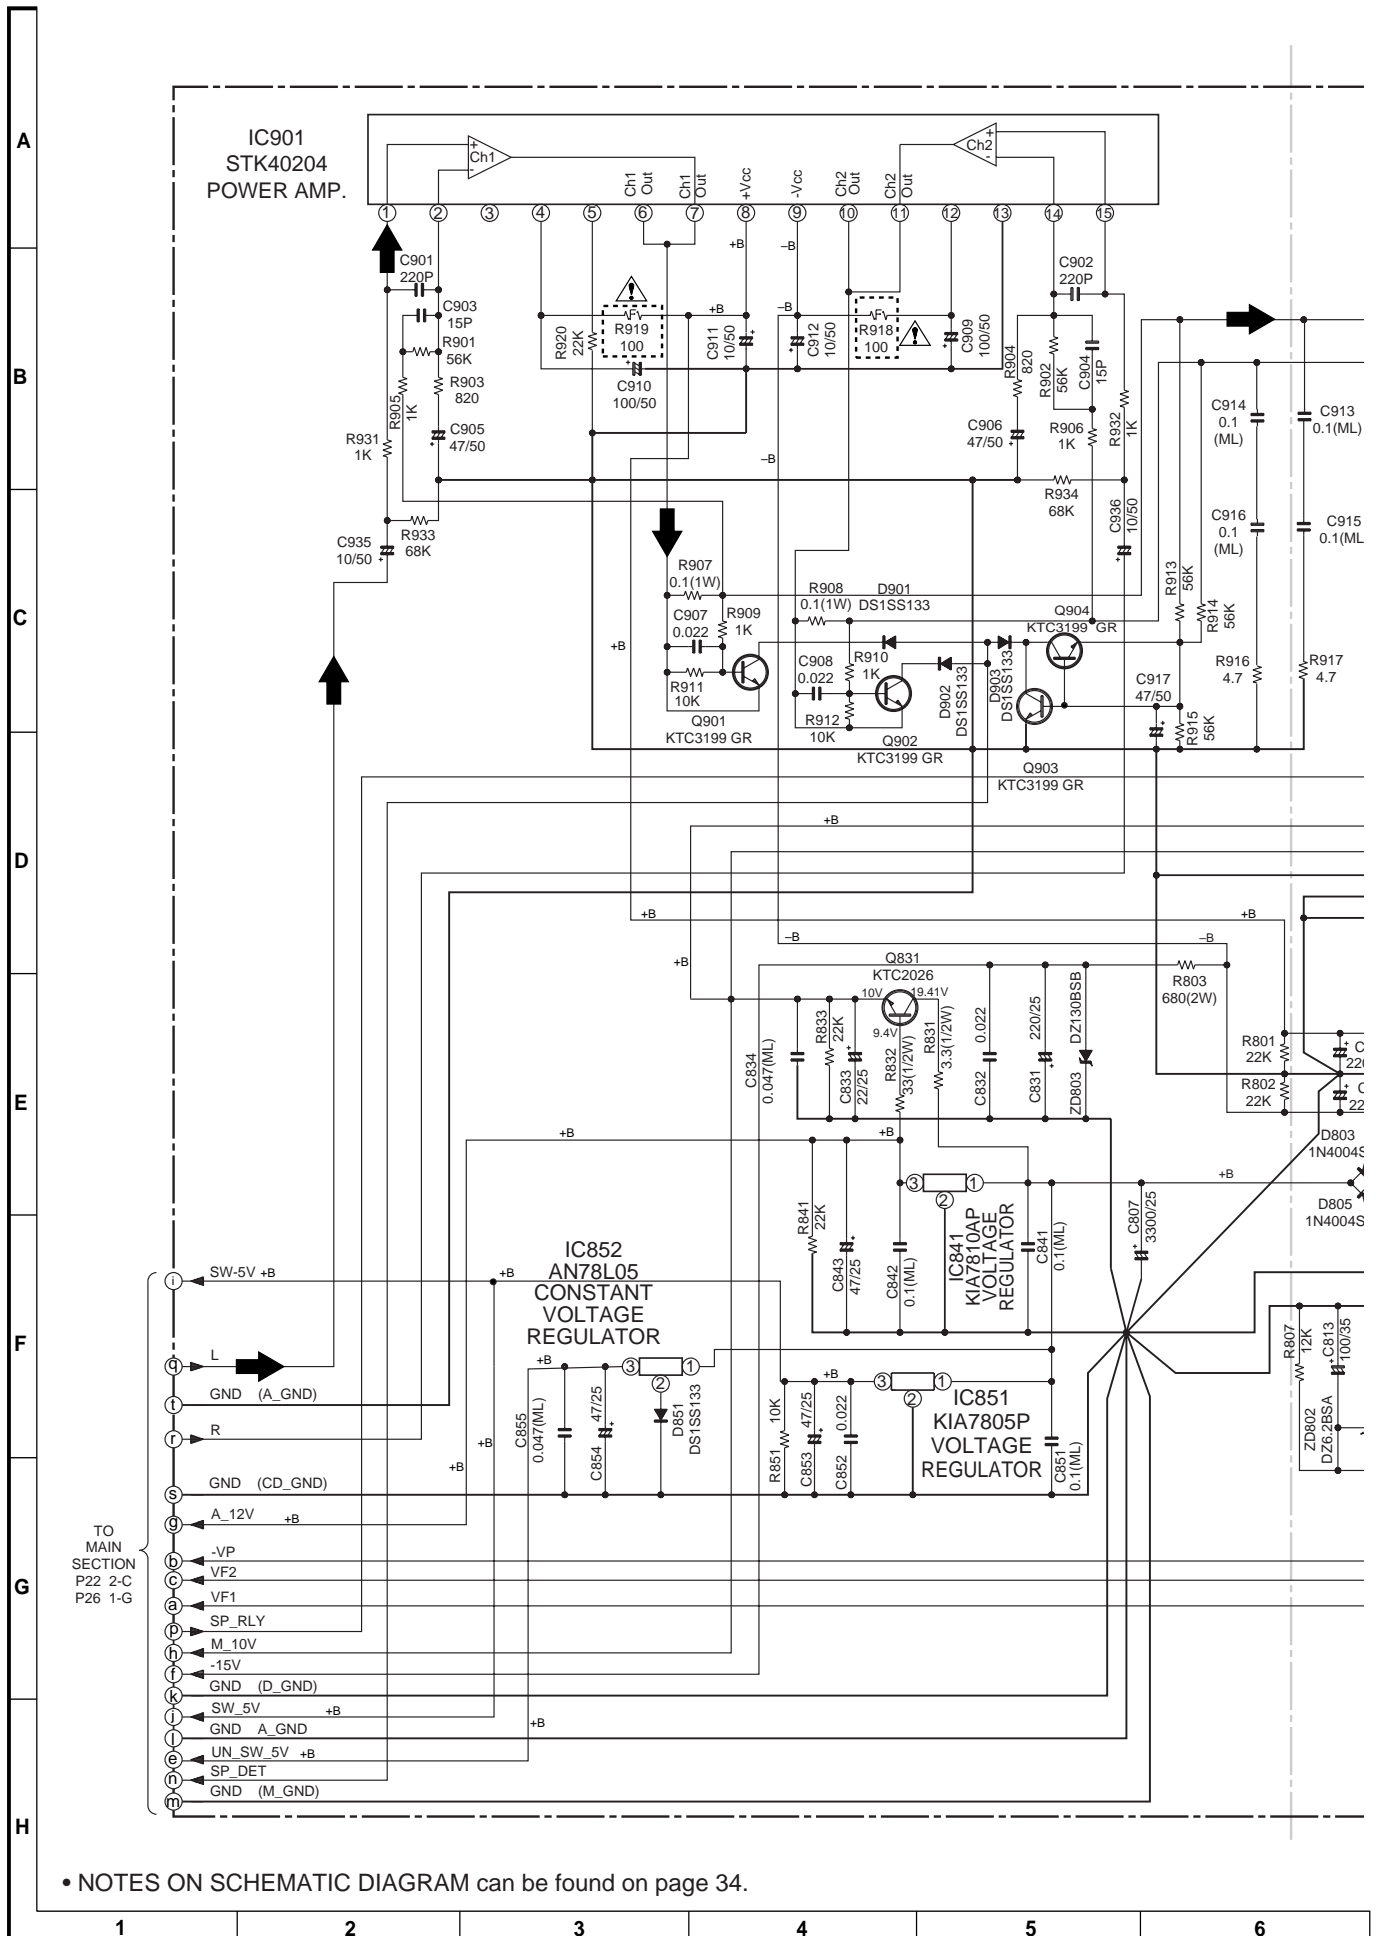

• NOTES ON SCHEMATIC DIAGRAM can be found on page 34.

Figure 24 SCHEMATIC DIAGRAM (7/9)

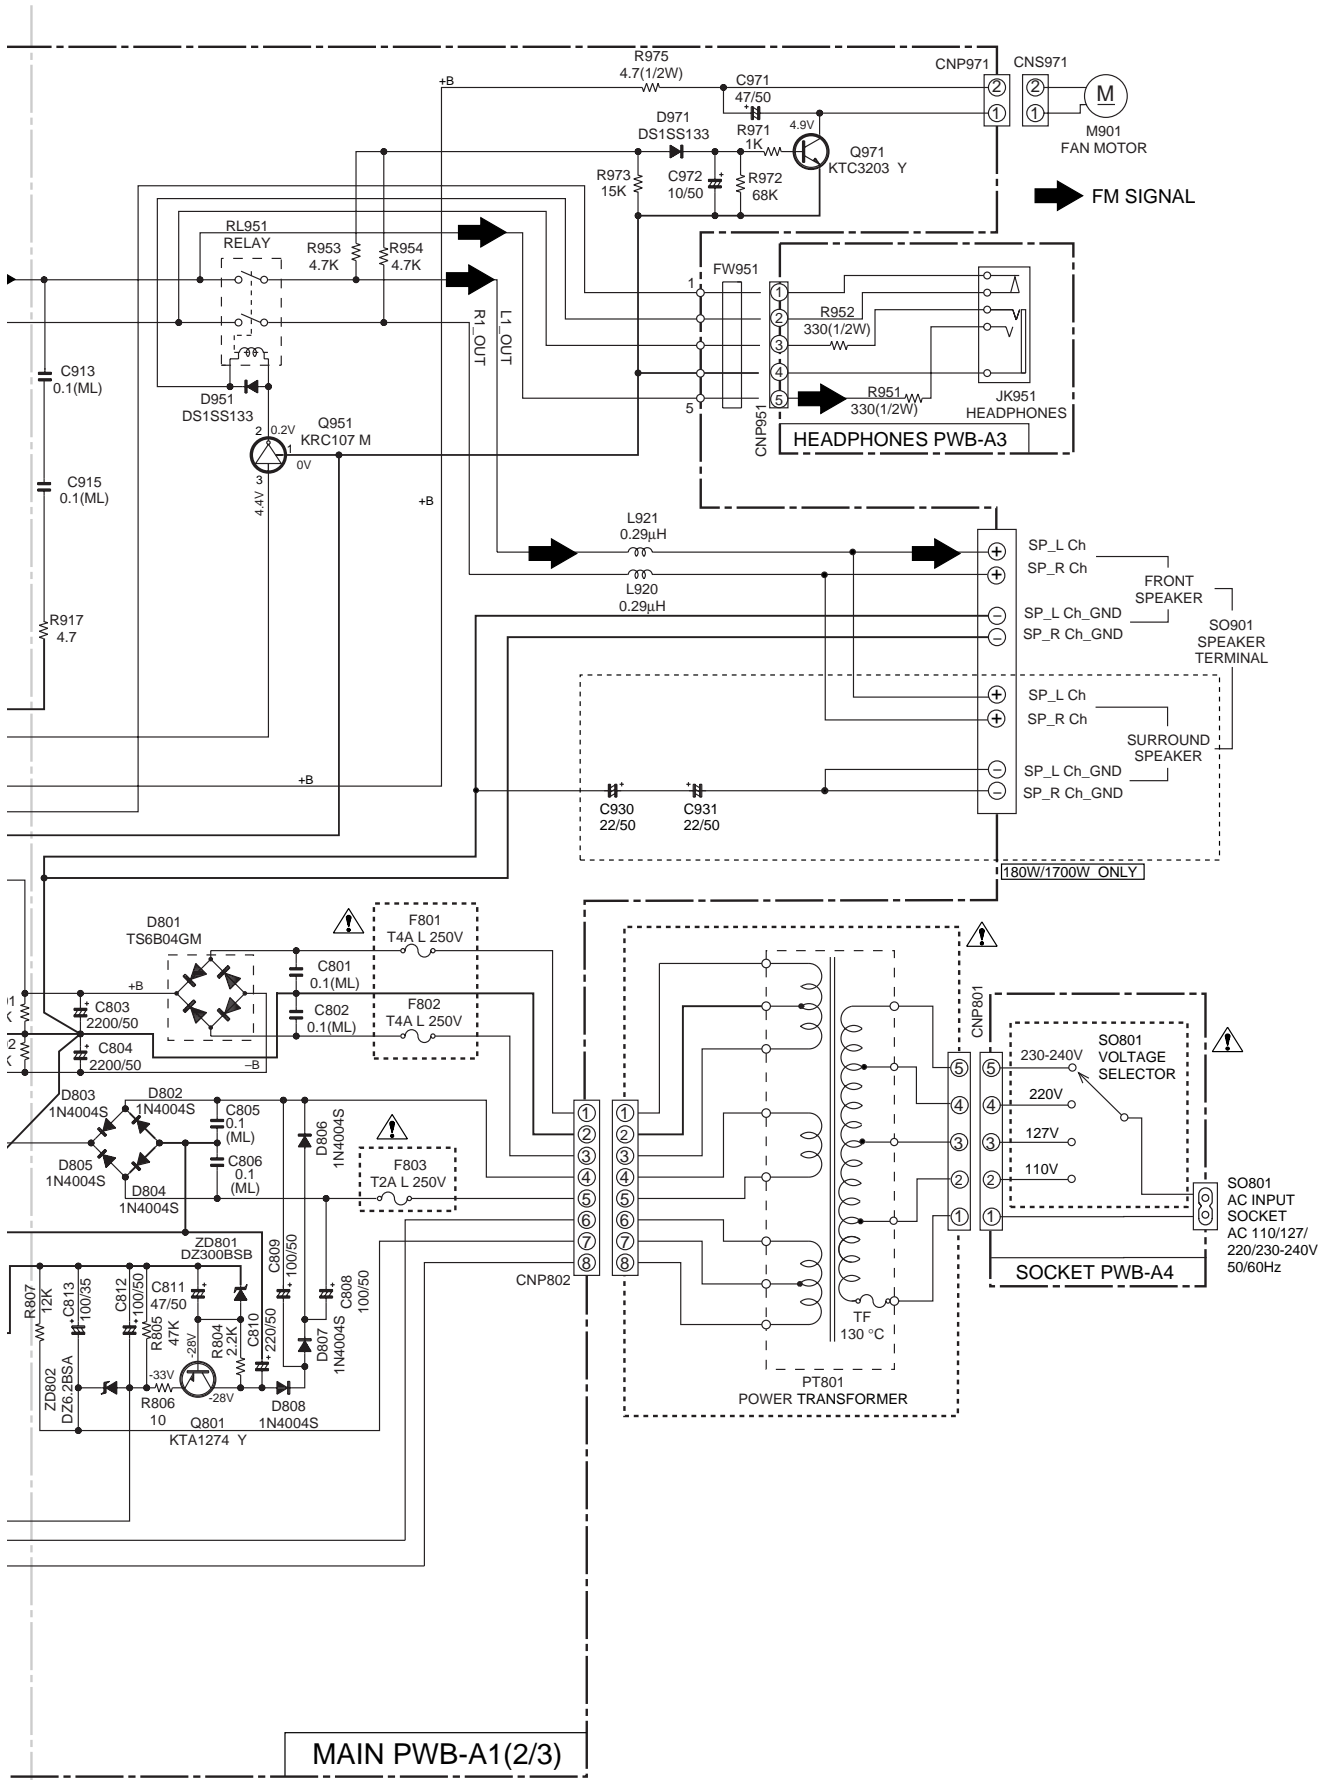

7	8	9	10	11	12
---	---	---	----	----	----

Figure 25 SCHEMATIC DIAGRAM (8/9)

CD-BP160W/180W/1500W/1700W

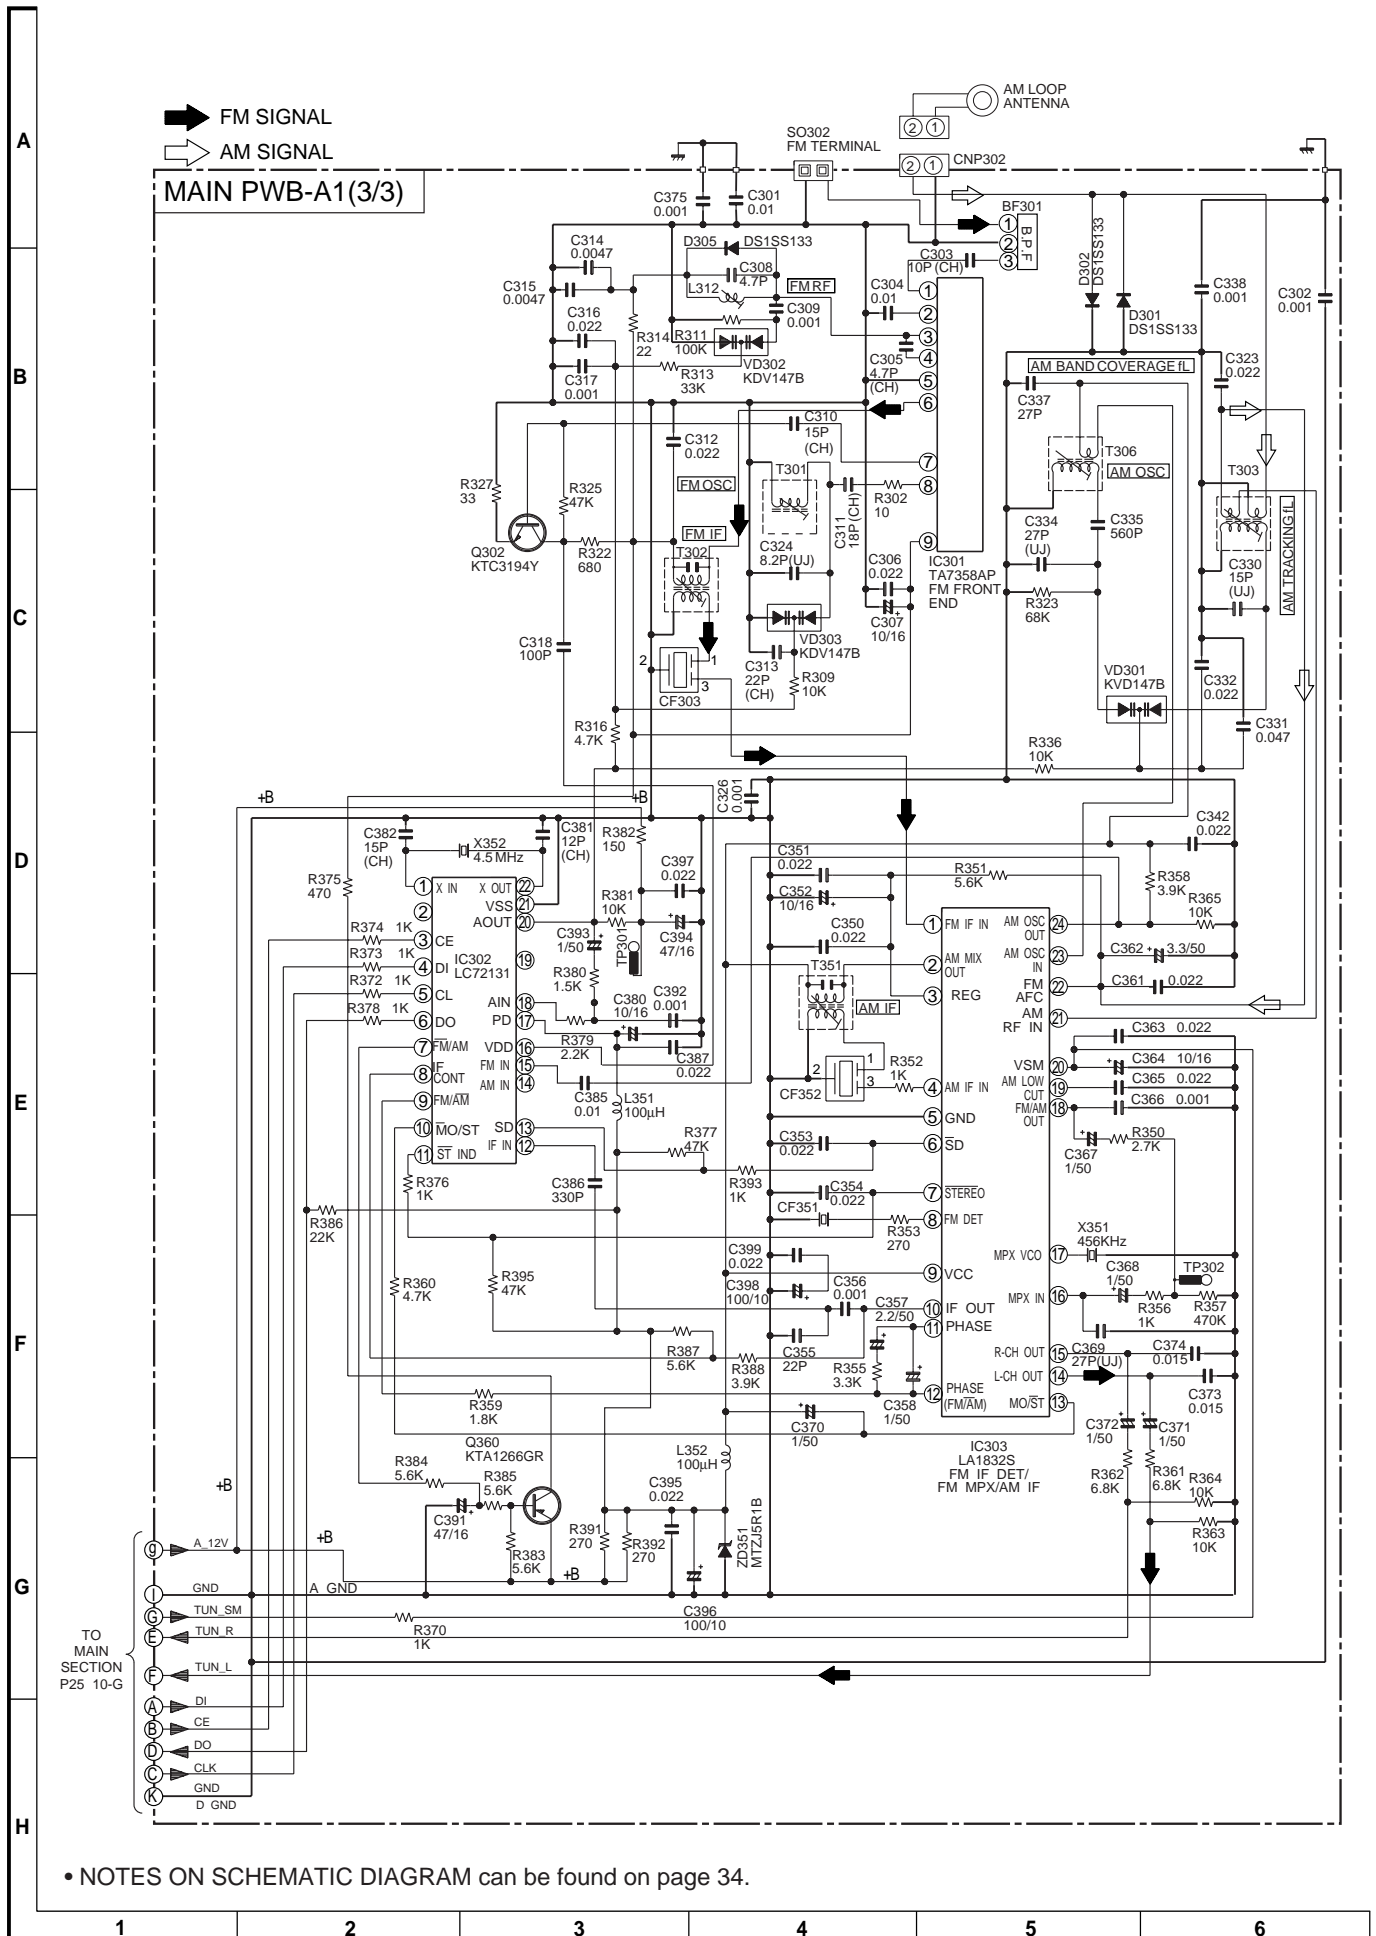


Figure 26 SCHEMATIC DIAGRAM (9/9)

VOLTAGE

IC1	
PIN NO.	VOLTAGE
1	1.6V
2	1.6V
3	1.6V
4	1.6V
5	1.6V
6	1.6V
7	0V
8	2.6V
9	0V
10	0V
11	0V
12	3.3V
13	1.6V
14	1.6V
15	1.6V
16	0V
17	0V
18	1.6V
19	1.6V
20	1.6V
21	1.6V
22	1.6V
23	0V
24	1.6V
25	0V
26	0V
27	0V
28	1.6V
29	1.6V
30	3.3V

IC3	
PIN NO.	VOLTAGE
1	1.6V
2	1.6V
3	1.8V
4	2.1V
5	2.1V
6	2.1V
7	2.1V
8	0V
9	0V
10	0V
11	0V
12	0V
13	0V
14	0V
15	2.1V
16	2.1V
17	1.6V
18	4.9V
19	3.5V
20	1.6V
21	0V
22	0V
23	4.9V
24	4.9V
25	1.6V
26	2.1V
27	2.1V
28	1.9V
29	0V
30	0V
31	0V
32	0V
33	0V
34	0V
35	0V
36	4.2V
37	0V
38	2.1V
39	2.1V
40	4.9V
41	2.1V
42	2.1V

IC2	
PIN NO.	VOLTAGE
1	0.7V
2	0V
3	0V
4	0V
5	3.3V
6	2.4V
7	0V
8	0V
9	1.6V
10	0V
11	4.7V
12	1.7V
13	0V
14	1.6V
15	1.6V
16	1.6V
17	1.6V
18	3.3V
19	0V
20	1.6V
21	1.6V
22	1.6V
23	1.6V
24	1.6V
25	1.6V
26	1.6V
27	1.6V
28	0V
29	0V
30	2.1V
31	2.1V
32	0V
33	3.3V
34	3.5V
35	3.3V
36	3.3V
37	3.3V
38	1.6V
39	1.6V
40	0V
41	0V
42	3.3V
43	3.3V
44	3.0V
45	1.5V
46	0V
47	0V
48	1.5V
49	3.0V
50	3.3V
51	1.8V
52	3.0V
53	0V
54	0V
55	0V
56	0V
57	1.7V
58	3.3V
59	0V
60	3.0V
61	1.6V
62	0V
63	2.4V
64	0V
65	0V
66	0V
67	0V
68	4.8V
69	4.9V
70	4.9V
71	4.6V
72	0V
73	4.9V
74	0V
75	0V
76	0V
77	3.2V
78	0V
79	0V
80	3.4V

IC101	
PIN NO.	VOLTAGE
1	0V(0V)
2	0V(0V)
3	0.5V(0.5V)
4	1.9V(1.9V)
5	0V(0V)
6	0V(0V)
7	0V(0V)
8	0.6V(0.6V)
9	3.3V(3.3V)
10	3.3V(3.3V)
11	0V(0V)
12	0V(0V)
13	6.7V(6.7V)
14	4.0V(4.0V)
15	0V(0V)
16	3.3V(3.3V)
17	0.6V(0.6V)
18	0V(0V)
19	0V(0V)
20	0V(0V)
21	1.9V(1.9V)
22	0.5V(0.5V)
23	0V(0V)
24	0V(0V)

IC301	
PIN NO.	VOLTAGE
1	0.8V(0V)
2	1.5V(0V)
3	3.6V(0.4V)
4	1.5V(0V)
5	0V(0V)
6	3.6V(0.4V)
7	2.8V(0.2V)
8	3.5V(0.3V)
9	3.6V(0.3V)

IC302	
PIN NO.	VOLTAGE
1	2.4V(2.4V)
2	0V(0V)
3	0V(0V)
4	0V(0V)
5	4.6V(4.7V)
6	4.8V(4.9V)
7	0.1V(9.9V)
8	4.2V(0V)
9	3.3V(0V)
10	3.4V(0V)
11	4.6V(4.9V)
12	2.2V(0V)
13	4.6V(4.9V)
14	0V(0V)
15	0V(2.4V)
16	2.3V(0V)
17	4.6V(4.9V)
18	0.8V(4.9V)
19	0.8V(4.9V)
20	1.1V(0V)
21	0V(0V)
22	2.5V(3.0V)

IC704	
PIN NO.	VOLTAGE
1	5.0V
2	0V
3	5.0V

IC303	
PIN NO.	VOLTAGE
1	2.1V(2.1V)
2	4.5V(4.8V)
3	2.1V(2.1V)
4	2.1V(2.1V)
5	0V(0V)
6	4.6V(4.9V)
7	4.6V(4.9V)
8	2.4V(3.2V)
9	4.5V(4.8V)
10	3.9V(0V)
11	3.3V(1.8V)
12	3.3V(1.1V)
13	3.5V(2.0V)
14	1.2V(1.2V)
15	1.2V(1.2V)
16	2.0V(2.0V)
17	2.7V(0V)
18	2.1V(0.9V)
19	0V(1.9V)
20	0.3V(0.9V)
21	2.6V(2.0V)
22	2.6V(2.0V)
23	4.5V(4.8V)
24	3.0V(3.3V)

IC401	
PIN NO.	VOLTAGE
1	0V
2	0V
3	0V
4	5V
5	5V
6	5V
7	5V
8	5V
9	5V
10	5V
11	5V
12	5V
13	5V
14	5V
15	5V
16	5V
17	5V
18	5V
19	5V
20	5V
21	5V
22	5V
23	10V
24	0V

IC702	
PIN NO.	VOLTAGE
1	0V
2	0V
3	0V
4	-11.0
5	0V
6	0V
7	0V
8	5.58V

IC703	
PIN NO.	VOLTAGE
1	0V
2	0V
3	0V
4	-11.0
5	0V
6	0V
7	0V
8	5.58V

IC701			
PIN NO.	VOLTAGE	PIN NO.	VOLTAGE
1	5V	51	4.29V
2	0V	52	4.29V
3	5V	53	4.29V
4	0V	54	4.29V
5	5V	55	4.29V
6	5V	56	4.29V
7	5V	57	0V
8	1.2V	58	0V
9	0.87V	59	-27.8V
10	4.84V	60	-27.8V
11	2.38V	61	0V
12	2.06V	62	0V
13	0V	63	-27.7V
14	0V	64	-27.7V
15	1.4V	65	-27.7V
16	4.89V	66	-27.7V
17	4.8V	67	-27.7V
18	0V	68	-27.7V
19	2.3V	69	-20.4V
20	0V	70	-22.1V
21	0V	71	-25.9V
22	0V	72	-27.7V
23	0V	73	-24.1V
24	4.44V	74	-24.4V
25	0V	75	-25.9V
26	0.3V	76	-22.2V
27	0V	77	-22.2V
28	0V	78	-22.3V
29	0V	79	-27.8V
30	0V	80	-27.7V
31	5.1V	81	-27.7V
32	5.1V	82	-27.7V
33	5.1V	83	-20.3V
34	4.9V	84	-24.0V
35	5.0V	85	-20.3V
36	4.9V	86	2.38
37	4.9V	87	2.58V
38	0V	88	-25.8V
39	5V	89	-25.8V
40	0V	90	-25.7V
41	1.7V	91	-25.7V
42	8.0V	92	-25.7V
43	7.9V	93	-25.7V
44	8.0V	94	-25.7V
45	3.8V	95	-25.7V
46	4.89V	96	-25.7V
47	4.89V	97	-25.7V
48	4.89V	98	-25.7V
49	4.29V	99	-25.7V
50	4.29V	100	-25.7V

IC852	
PIN NO.	VOLTAGE
1	19.4V
2	0V
3	5.76V

IC851	
PIN NO.	VOLTAGE
1	19.4V
2	0V
3	5V

IC841	
PIN NO.	VOLTAGE
1	19.41V
2	0V
3	10V

IC901	
PIN NO.	VOLTAGE
1	0V
2	0V
3	0V
4	34.4V
5	-32.9V
6	0V
7	0V
8	35.4V
9	-35.4V
10	0V
11	0V
12	-34.0V
13	0V
14	0V
15	0V


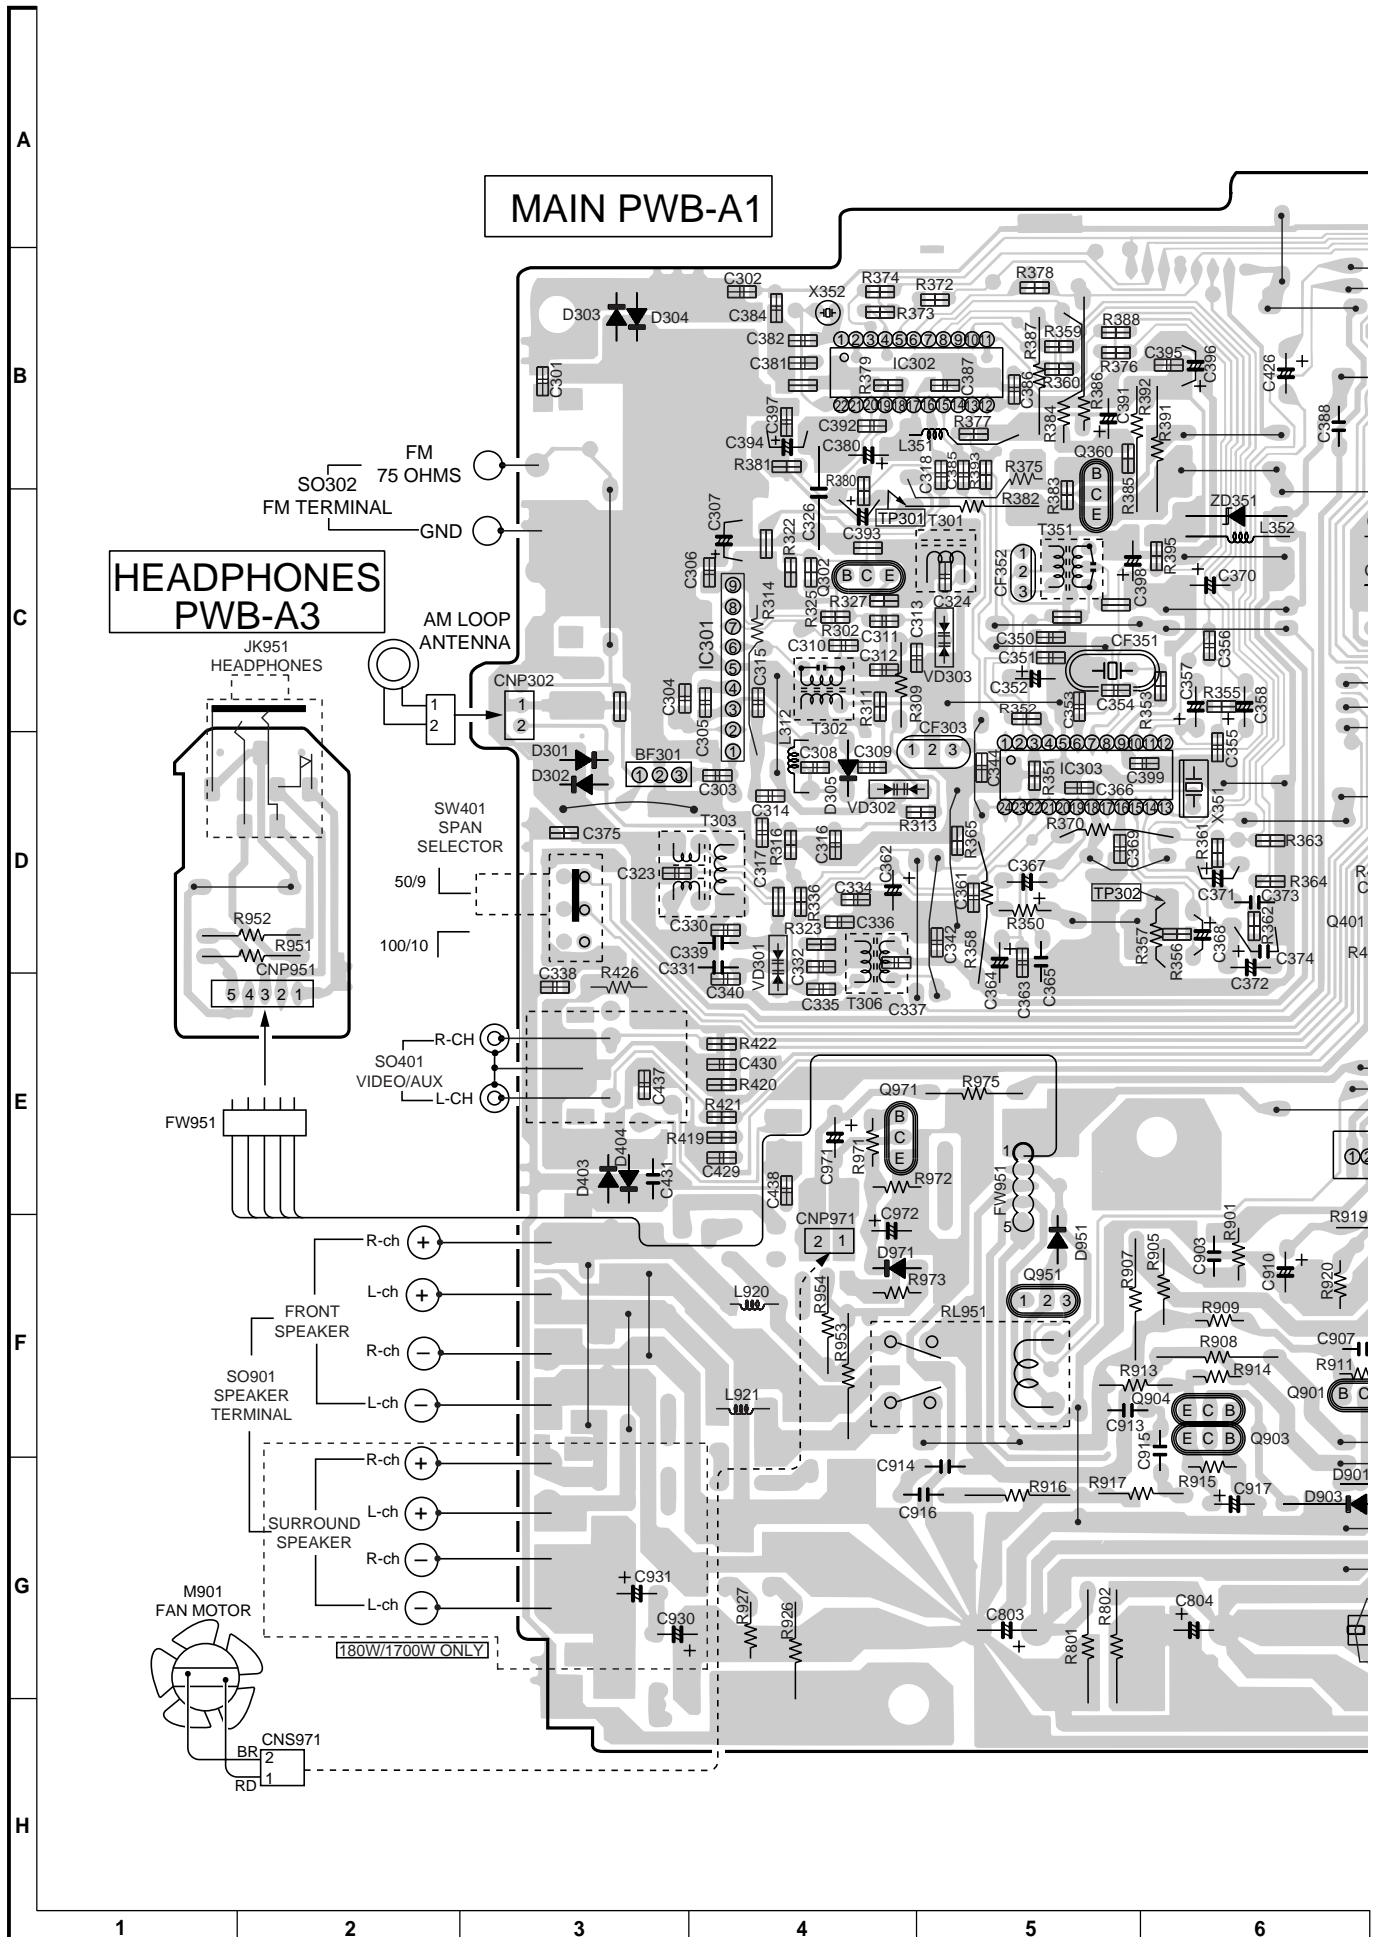


Figure 28 WIRING SIDE OF P.W.BOARD (1/6)

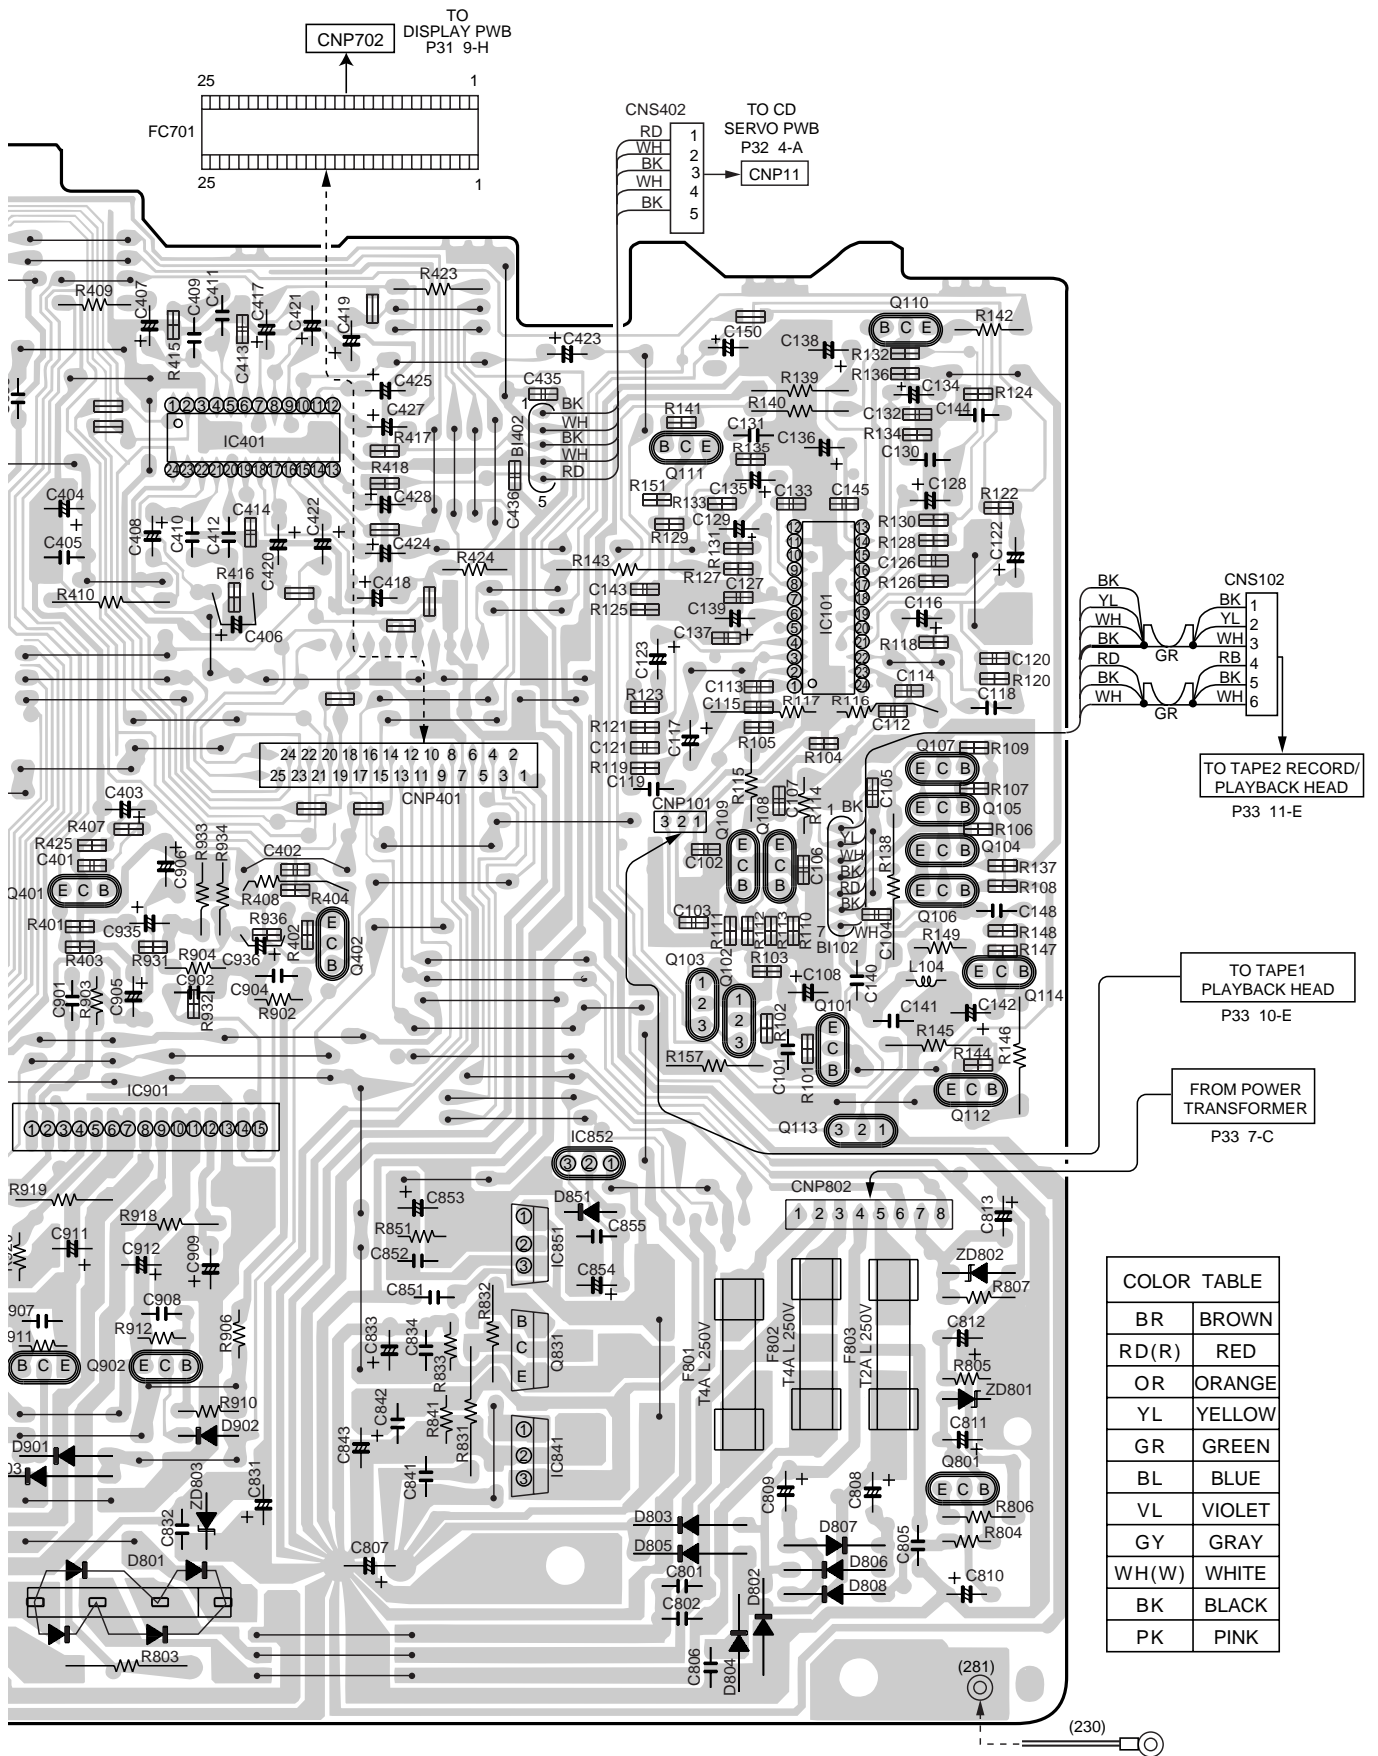

COLOR TABLE	
BR	BROWN
RD(R)	RED
OR	ORANGE
YL	YELLOW
GR	GREEN
BL	BLUE
VL	VIOLET
GY	GRAY
WH(W)	WHITE
BK	BLACK
PK	PINK





Figure 29 WIRING SIDE OF P.W.BOARD (2/6)

DISPLAY PWB-A2

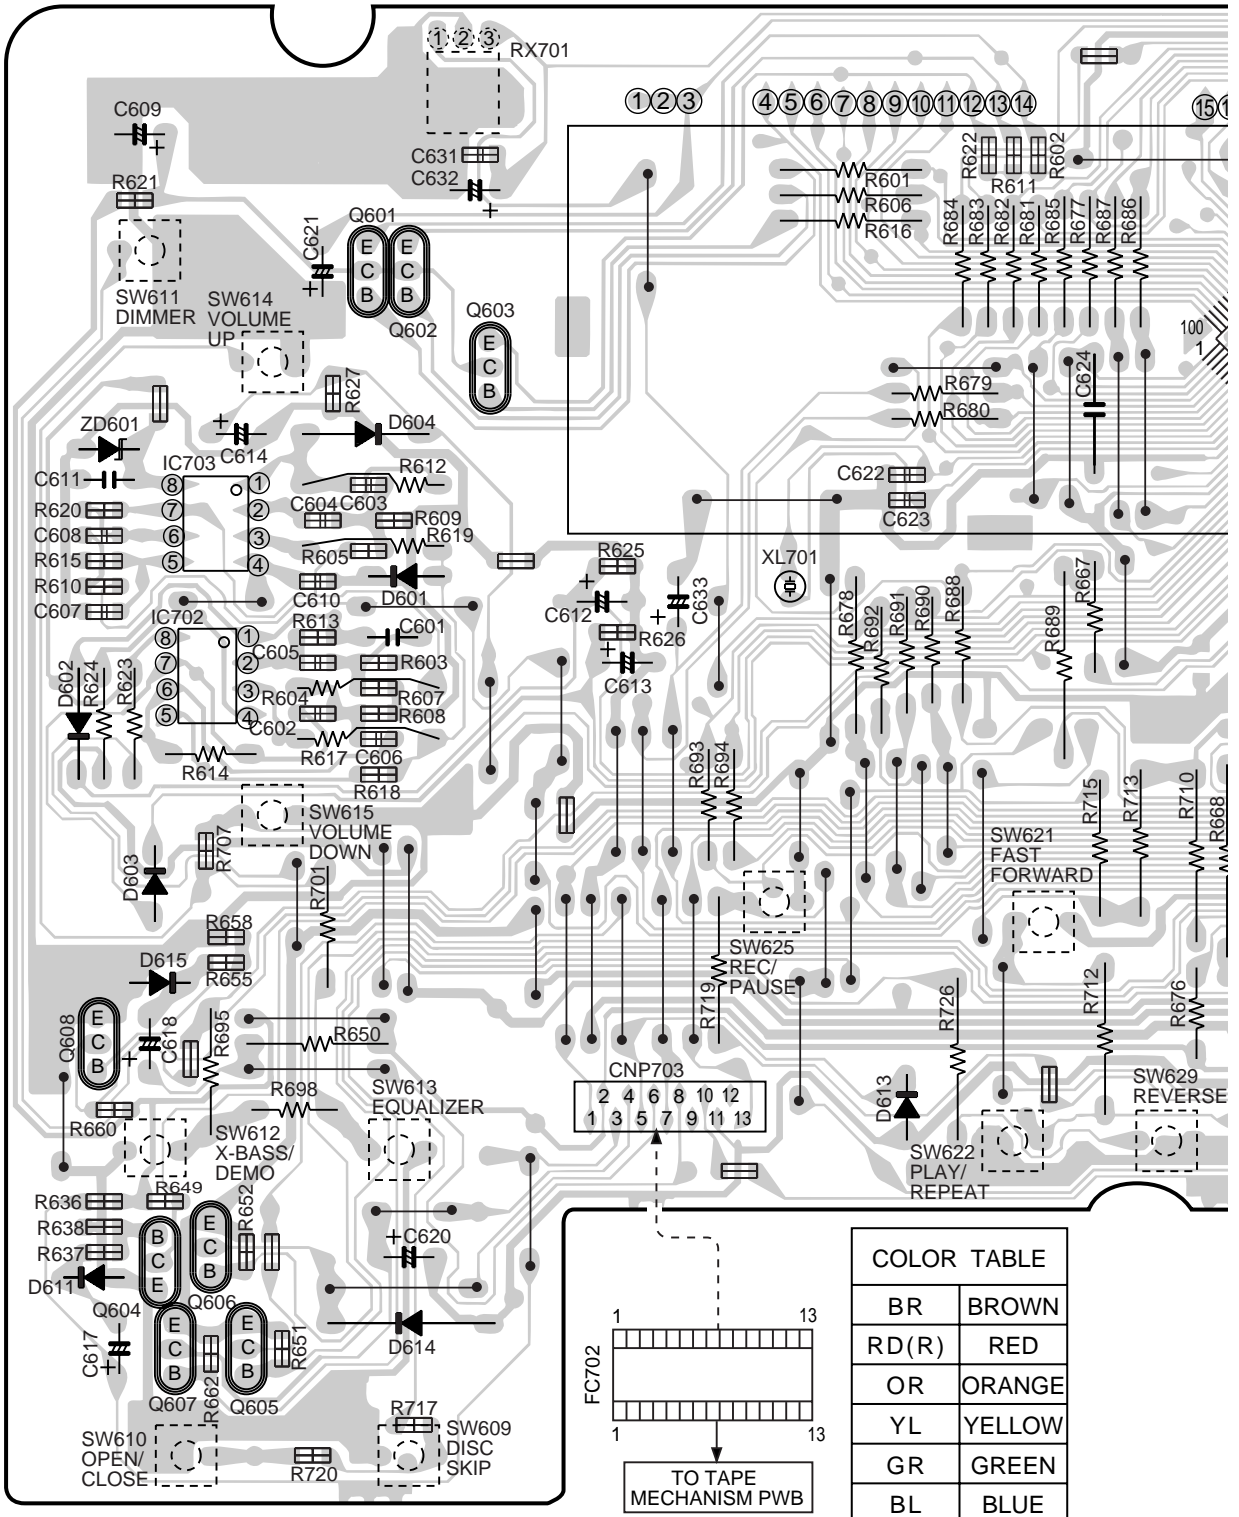

COLOR TABLE

BR	BROWN
RD(R)	RED
OR	ORANGE
YL	YELLOW
GR	GREEN
BL	BLUE
VL	VIOLET
GY	GRAY
WH(W)	WHITE
BK	BLACK
PK	PINK



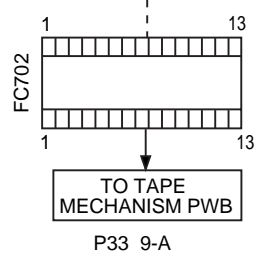


Figure 30 WIRING SIDE OF P.W.BOARD (3/6)

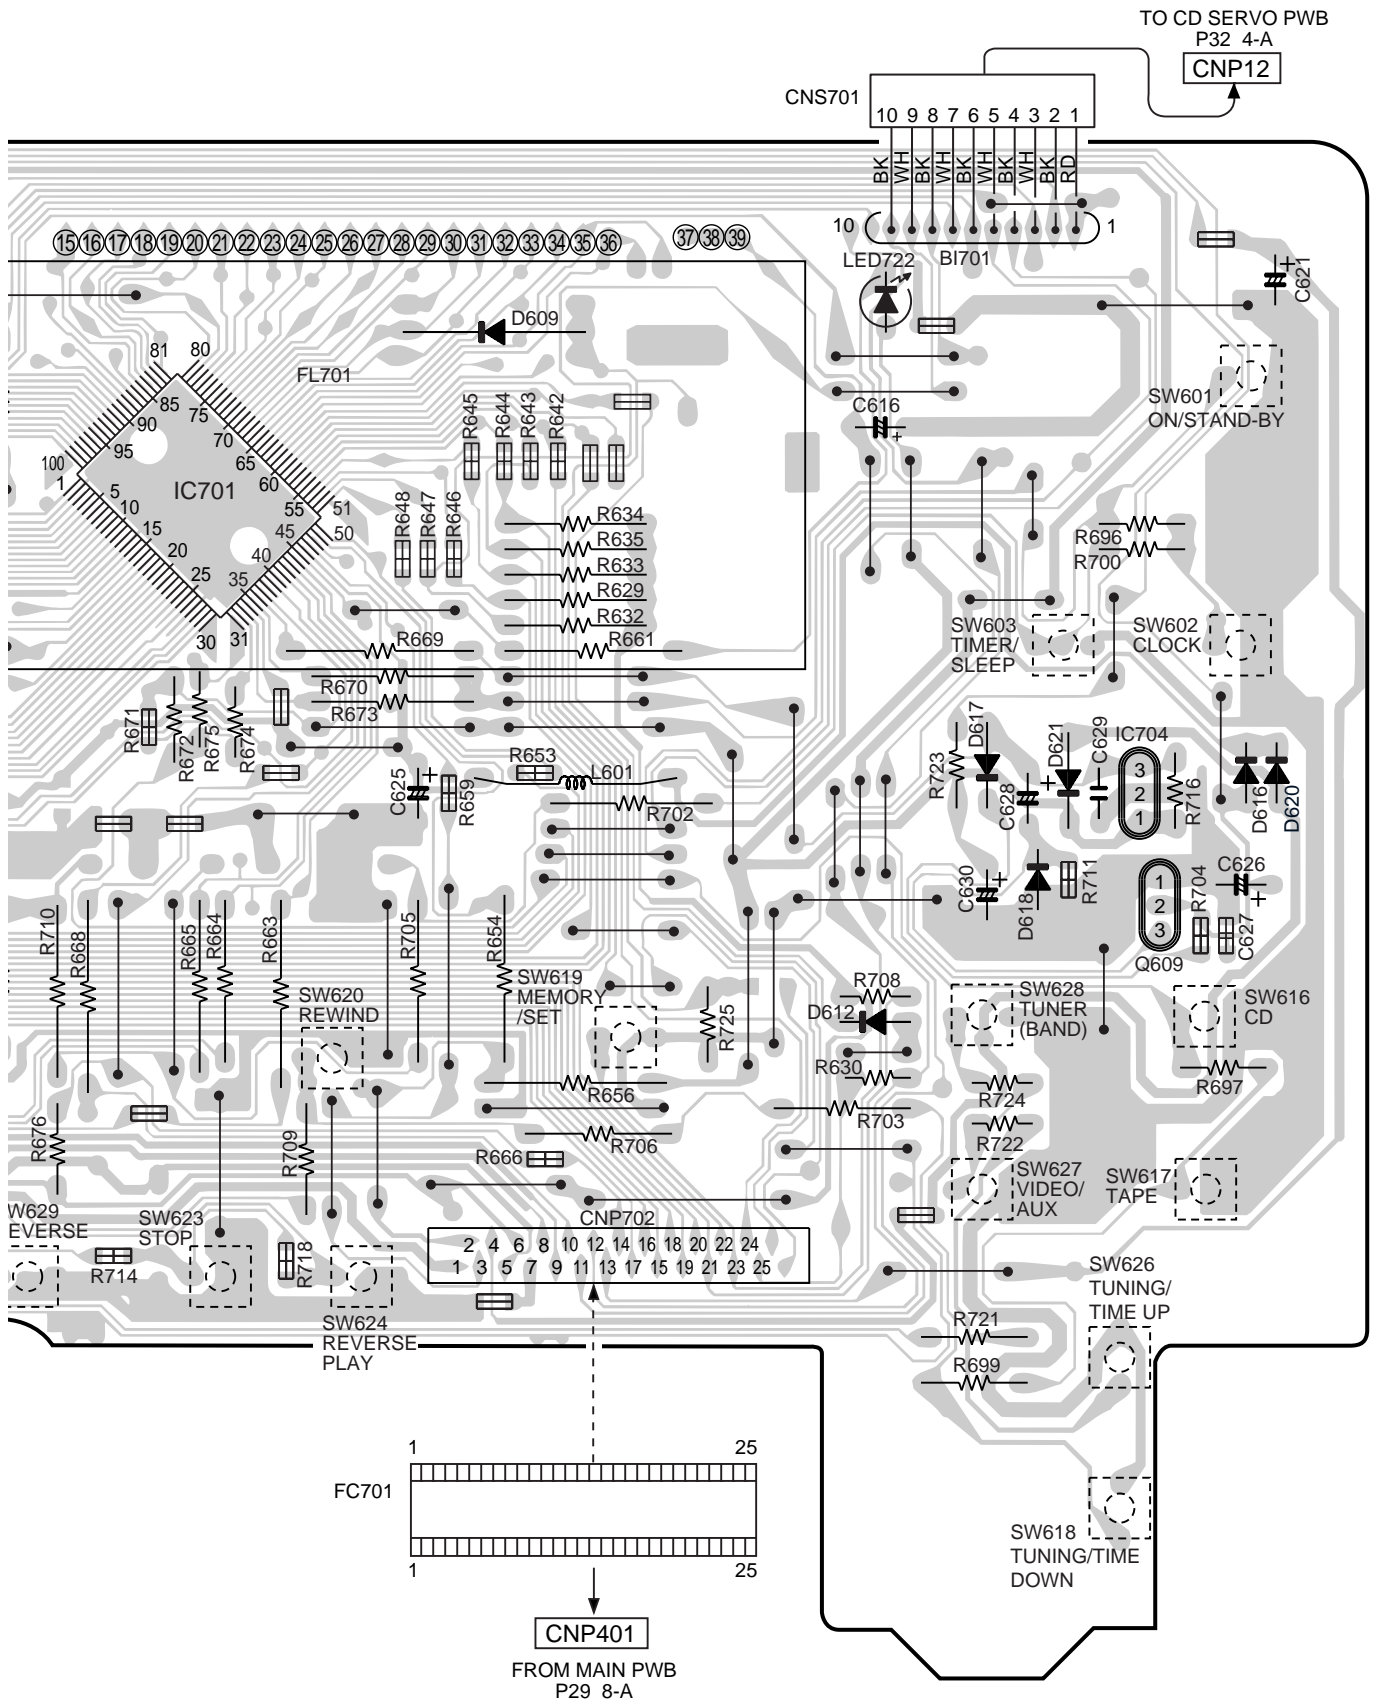


7	8	9	10	11	12
---	---	---	----	----	----

Figure 31 WIRING SIDE OF P.W.BOARD (4/6)

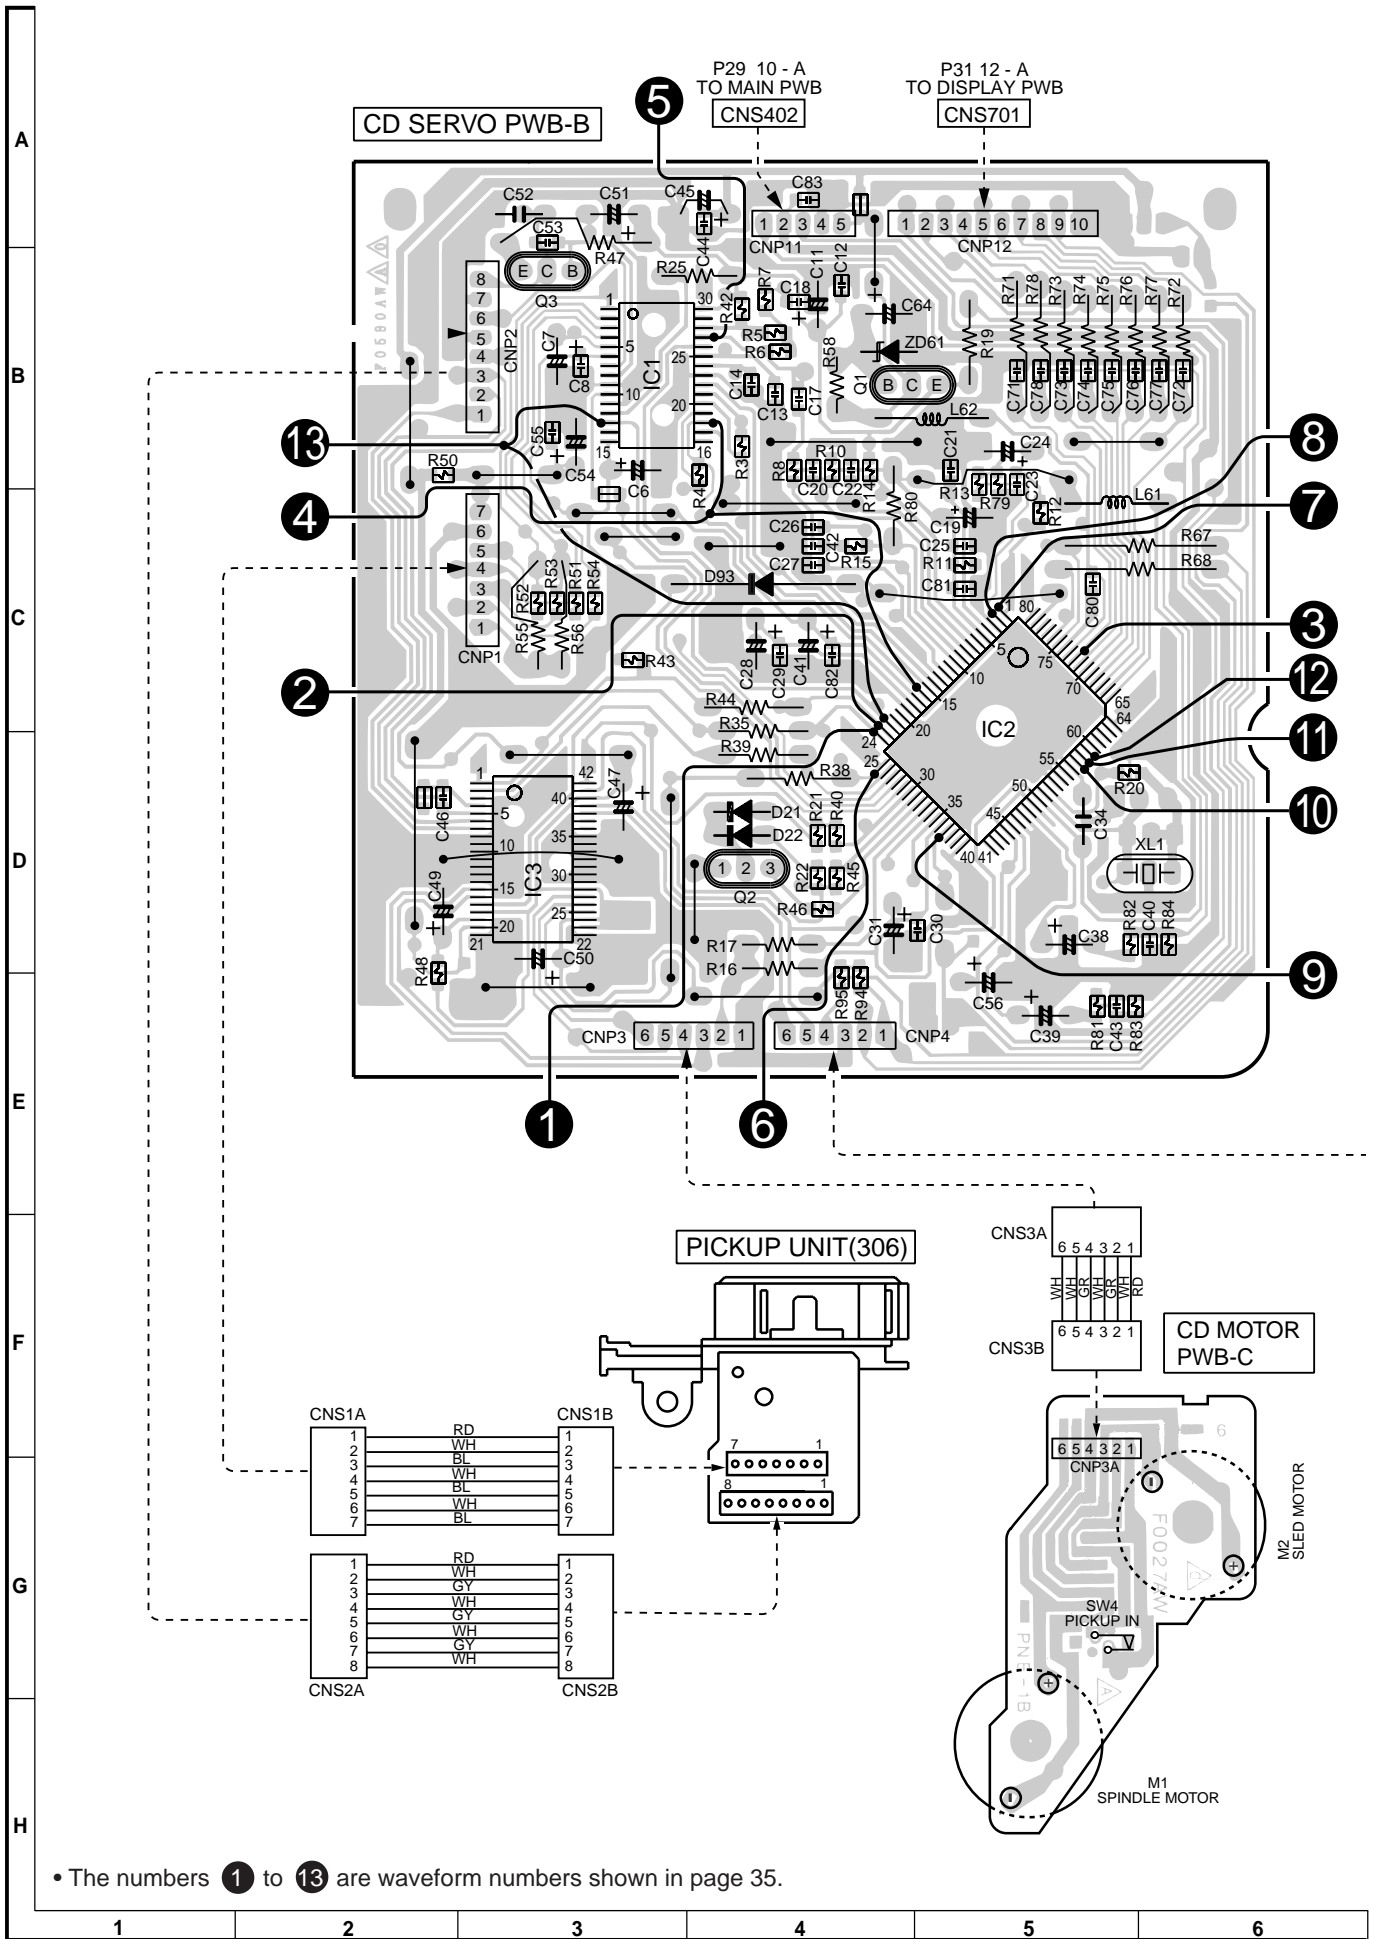

• The numbers 1 to 13 are waveform numbers shown in page 35.

Figure 32 WIRING SIDE OF P.W.BOARD (5/6)

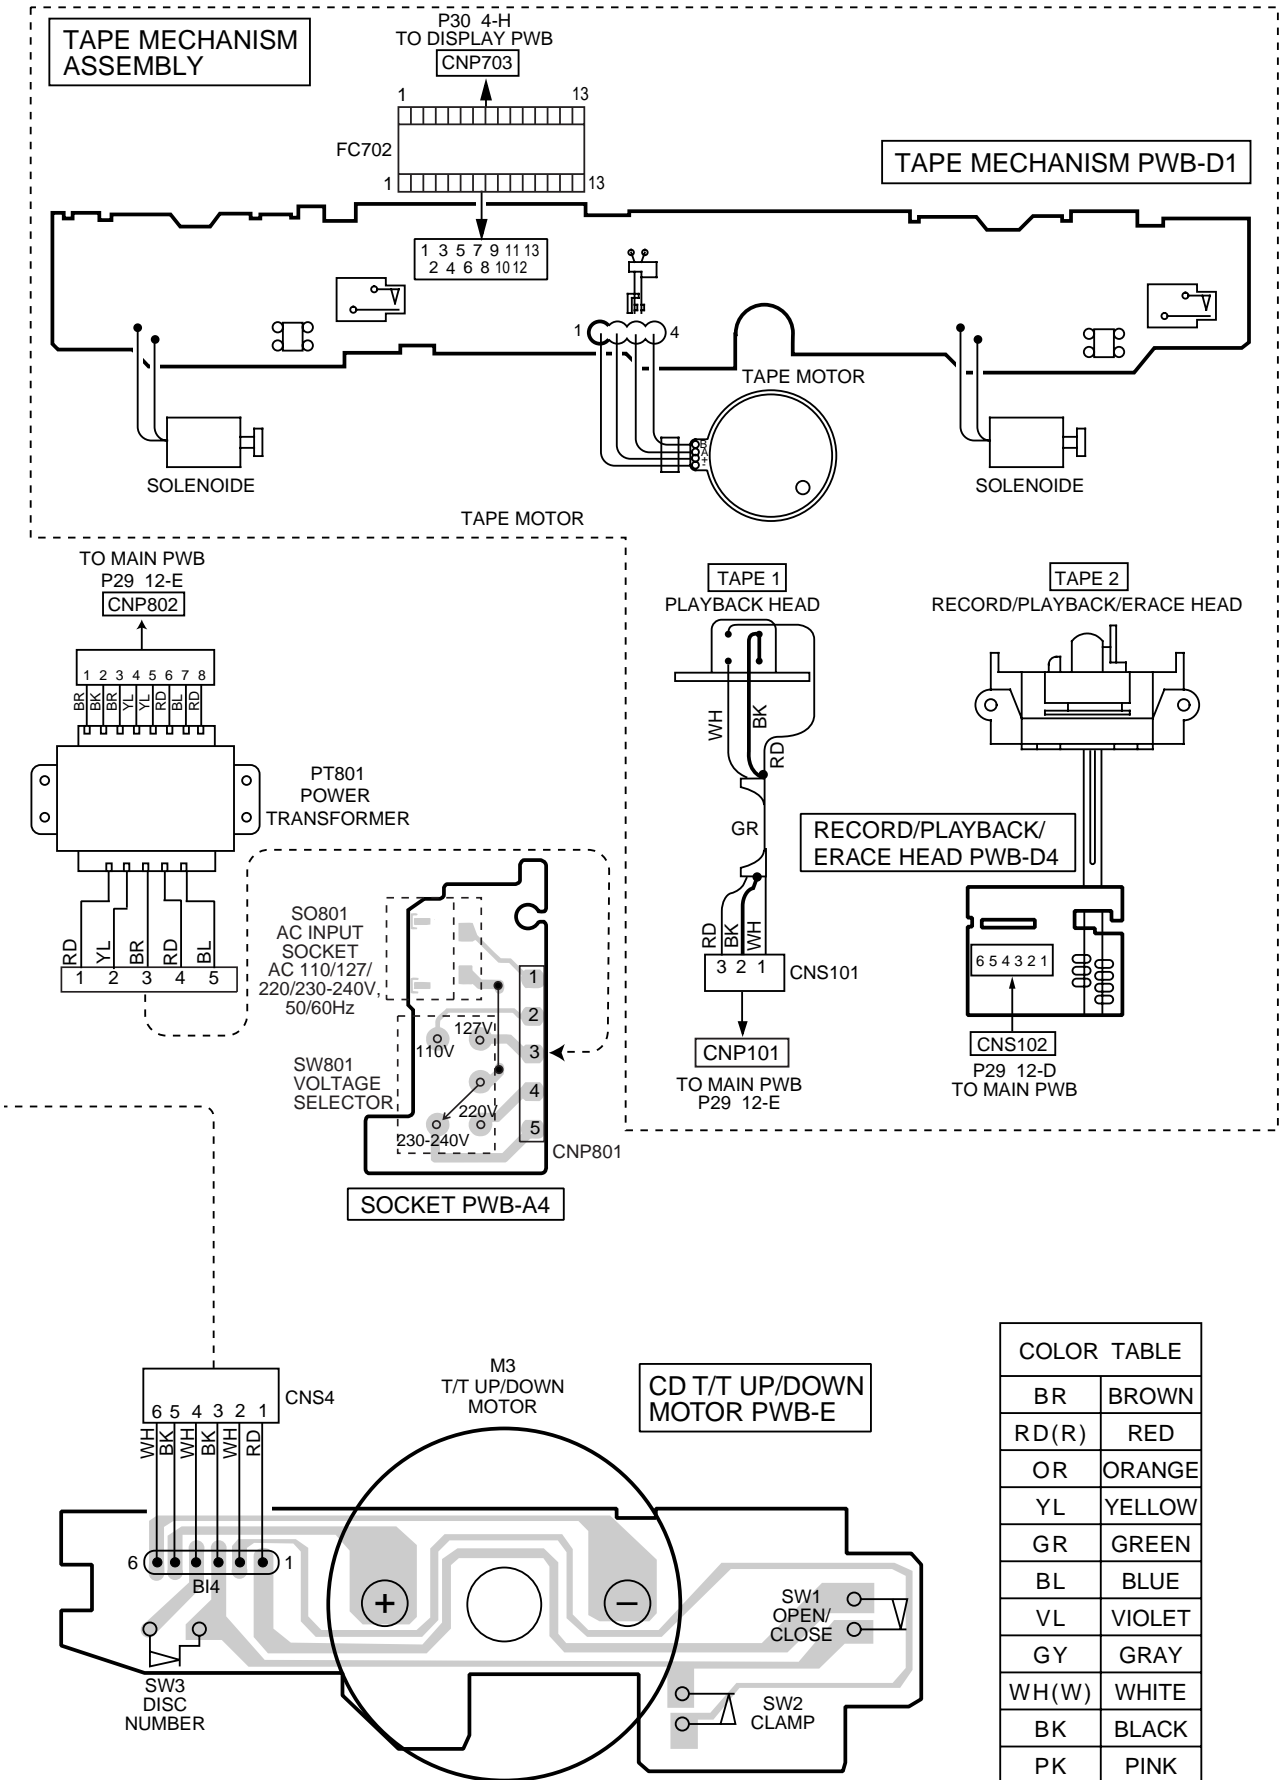

COLOR TABLE	
BR	BROWN
RD(R)	RED
OR	ORANGE
YL	YELLOW
GR	GREEN
BL	BLUE
VL	VIOLET
GY	GRAY
WH(W)	WHITE
BK	BLACK
PK	PINK

Figure 33 WIRING SIDE OF P.W.BOARD (6/6)

NOTES ON SCHEMATIC DIAGRAM

- Resistor:
To differentiate the units of resistors, such symbol as K and M are used: the symbol K means 1000 ohm and the symbol M means 1000 kohm and the resistor without any symbol is ohm-type resistor. Besides, the one with "Fusible" is a fuse type.
- Capacitor:
To indicate the unit of capacitor, a symbol P is used: this symbol P means micro-micro-farad and the unit of the capacitor without such a symbol is microfarad. As to electrolytic capacitor, the expression "capacitance/withstand voltage" is used.
(CH), (TH), (RH), (UJ): Temperature compensation
(ML): Mylar type
(P.P.): Polypropylene type
- Schematic diagram and Wiring Side of P.W.Board for this model are subject to change for improvement without prior notice.

- The indicated voltage in each section is the one measured by Digital Multimeter between such a section and the chassis with no signal given.
 1. In the tuner section,
() indicates AM
< > indicates FM stereo
 2. In the main section, a tape is being played back.
 3. In the deck section, a tape is being played back.
() indicates the record state.
 4. In the power section, a tape is being played back.
 5. In the CD section, the CD is stopped.
- Parts marked with "△" (□ = = = □) are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

REF. NO	DESCRIPTION	POSITION
SW1	OPEN/CLOSE	ON—OFF
SW2	CLAMP	ON—OFF
SW3	DISC NUMBER	ON—OFF
SW4	PICKUP IN	ON—OFF
SW401	SPAN SELECTOR	50/9—100/10
SW601	ON/STAND BY	ON—OFF
SW602	CLOCK	ON—OFF
SW603	TIMER/SLEEP	ON—OFF
SW609	DISC SKIP	ON—OFF
SW610	OPEN/CLOSE	ON—OFF
SW611	DIMMER	ON—OFF
SW612	X-BASS/DEMO	ON—OFF
SW613	EQUALIZER	ON—OFF
SW614	VOLUME UP	ON—OFF
SW615	VOLUME DOWN	ON—OFF

REF. NO	DESCRIPTION	POSITION
SW616	CD	ON—OFF
SW617	TAPE	ON—OFF
SW618	TUNING /TIME DOWN	ON—OFF
SW619	MEMORY/SET	ON—OFF
SW620	REWIND	ON—OFF
SW621	FAST FORWARD	ON—OFF
SW622	PLAY/REPEAT	ON—OFF
SW623	STOP	ON—OFF
SW624	REVERSE PLAY	ON—OFF
SW625	REC/PAUSE	ON—OFF
SW626	TUNING/TIME UP	ON—OFF
SW627	VIDEO/AUX	ON—OFF
SW628	TUNER (BAND)	ON—OFF
SW629	REVERSE MODE	ON—OFF
SW801	VOLTAGE SELECTOR	110—127— 220—230-240


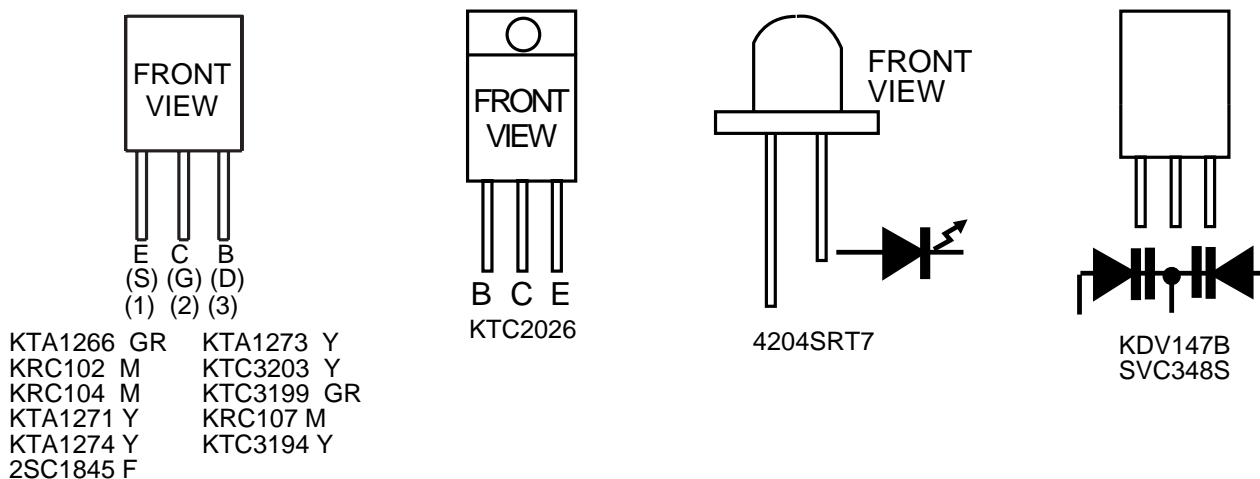



Figure 34 TYPES OF TRANSISTOR AND LED

WAVEFORMS OF CD CIRCUIT

1 IC2 (24)
FDO

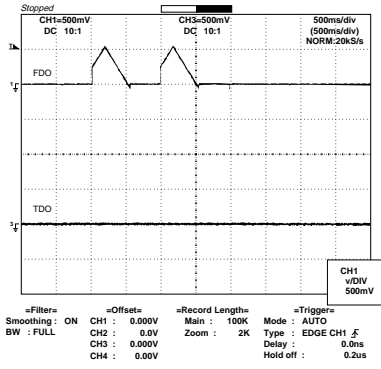


2 IC2 (23)
TDO

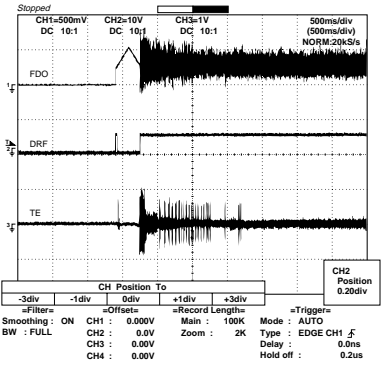


3 IC2 (72)
DEF

4 IC1 (18)
TE, IC2 (16)
TE

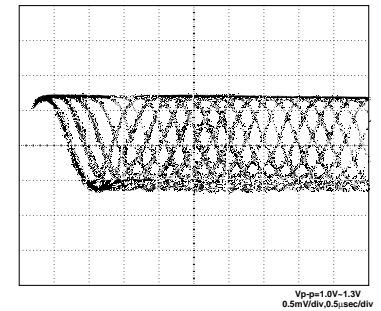


5 IC1 (27)
RF

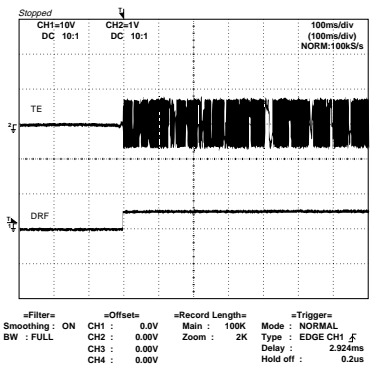

4 IC1 (18)
TE, IC2 (16)
TE


3 IC2 (72)
DEF

1 IC2 (24)
FDO

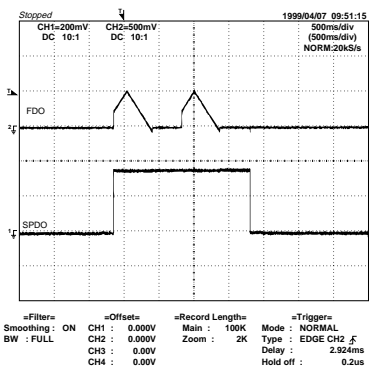

6 IC2 (25)
SPDO


7 IC2 (1)
PDO1

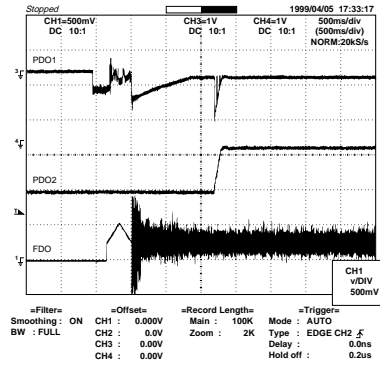

8 IC2 (2)
OD02

1 IC2 (24)
FDO


9 IC2 (37)
DOUT

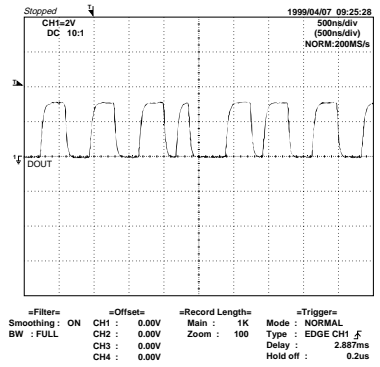

10 IC2 (57)
DATAACK

11 IC2 (58)
DATA


12 IC2 (59)
16M

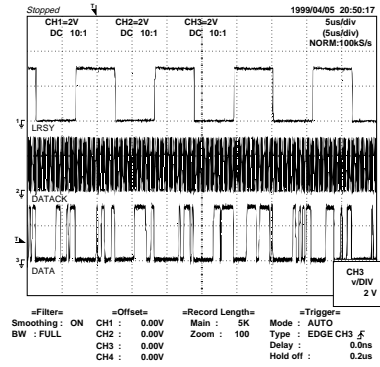

1 IC2 (24)
FDO

4 IC1 (18)
TE, IC2 (16)
TE

13 IC1 (13)
EFBL, IC2 (22)
TBLO

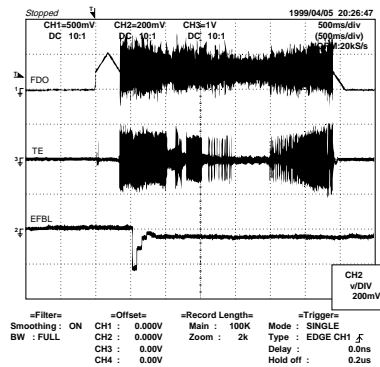

TROUBLE SHOOTING

When the CD does not function

When the CD section does not operate when the objective lens of the optical pickup is dirty, this section may not operate. Clean the objective lens, and check the playback operation. When this section does not operate even after the above step is taken, check the following items.

Remove the cabinet and follow the trouble shooting instructions.

"Track skipping and/or no TOC (Table Of Contents) may be caused by build up of dust other foreign matter on the laser pickup lens. Before attempting any adjustment make certain that the lens is clean. If not, clean it as mentioned below."

Turn the power off.

Gently clean the lens with a lens cleaning tissue and a small amount of isopropyl alcohol.

Do not touch the lens with the bare hand.


		Parts code
1.	CD optical pickup Lens cleaner disc	UDSKA0004AFZZ

HOW TO USE

- Using the brush in the cleaner cap, apply 1 or 2 drops of the cleaning fluid to the brush on the CD cleaner disc which has the mark next to it.
- Place the CD cleaner disc onto the CD disc tray with the brush side down, then press the play button.
- You will hear music for about 20 seconds and the CD player will automatically stop. If it continuous to tum, press the stop button.

CAUTION

- The CD lens cleaner should be effective for 30-50 operations, however if the brushes become worn out earlier then please the cleaner disc.
- If the CD cleaner brushes become very wet then wipe off any excess fluid with a soft cloth.
- Do not drink the cleaner fluid or allow it to come in contact with the eyes. In the event of this happening then drink and / or rines with clean water and seek medical advice.
- The CD cleaner disk must not be used on car CD players or on computer CD ROM drives.
- All rights reserved.Unauthorized duplicating, broadcasting and renting this product is

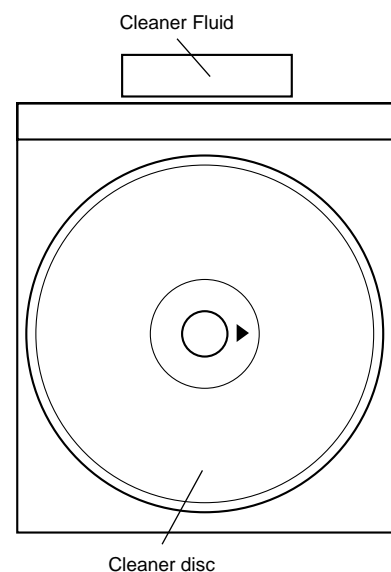

When a CD cannot be played

1. "E-CD01" is displayed.

- (1) Check the power to IC2 (LC78641E), the presence of the clock signal (16.93 MHz) and the status of the RESET terminal (pin 71 on IC2).
- (2) Did the pickup move to the PICKUP-IN Switch (SW4) position?

If (1) and (2) are OK, check the system microcomputer (especially the communication line with the DSP).

2. Pressing the CD operation key is accepted, but playback does not occur.

- (1) Focus-HF system check
- (2) Tracking system check
- (3) Spin system check
- (4) PLL system check
- (5) Others

(1) Focus-HF system check
 Although a CD is inserted and the cover is closed, "NO DISC" is displayed.
 Press the OPEN/CLOSE switch (SW1) without inserting a disc, and try starting the playback operation.


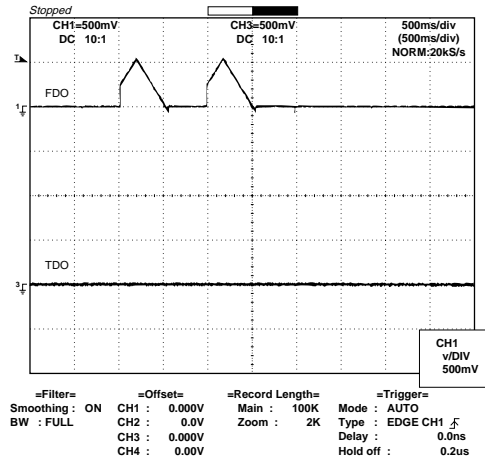


Figure 37-1

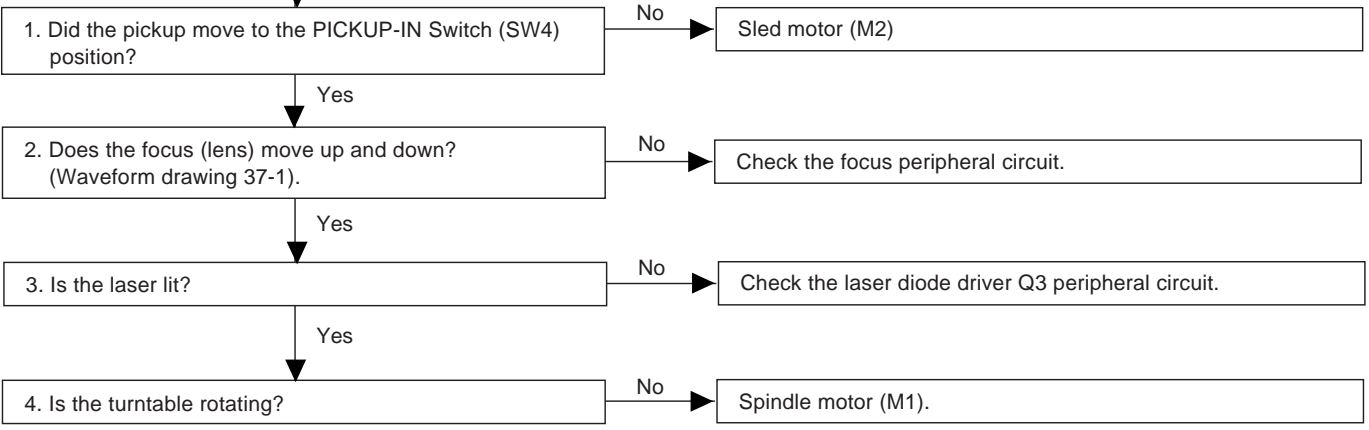

When a disc is loaded, start playback operation.

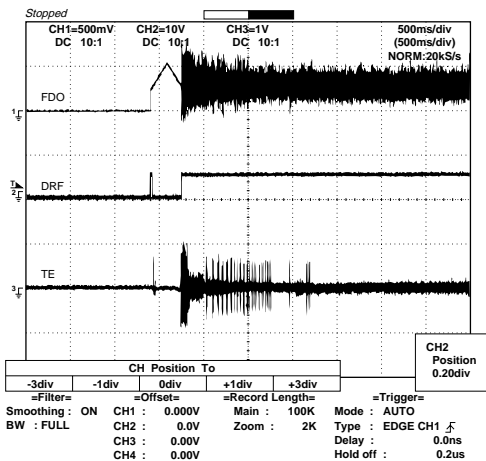
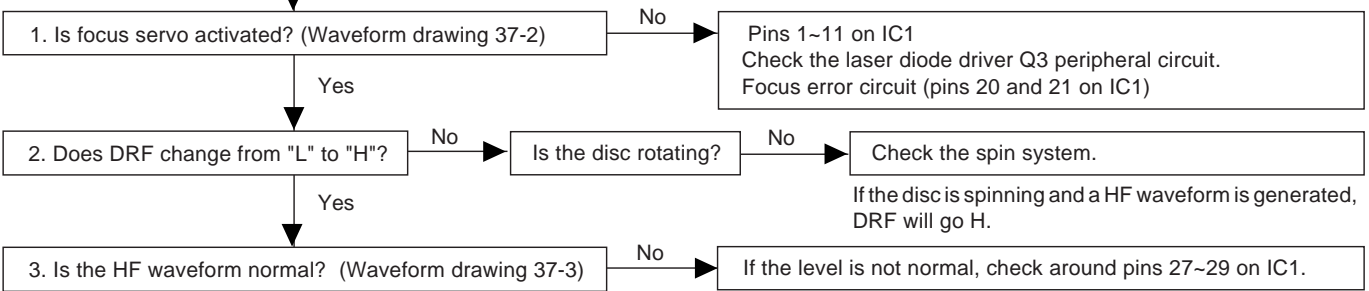


Figure 37-2

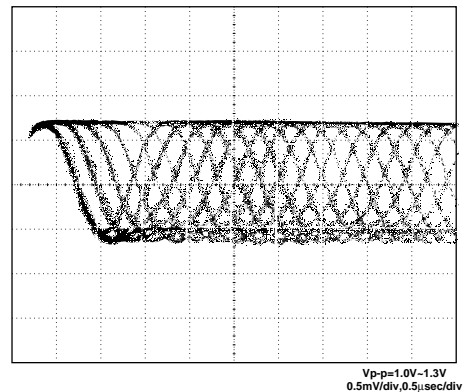


Figure 37-3

CD-BP160W/180W/1500W/1700W

(2) Tracking system check

Check the TE waveform at pin 18 on IC1.

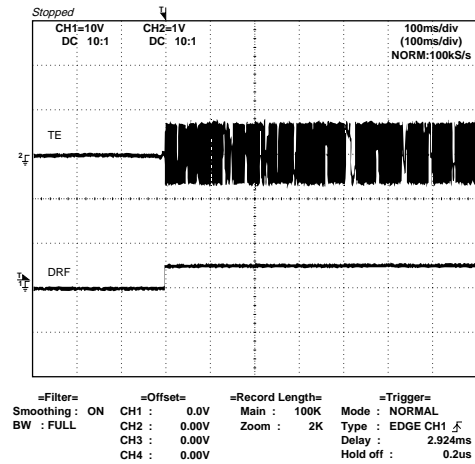
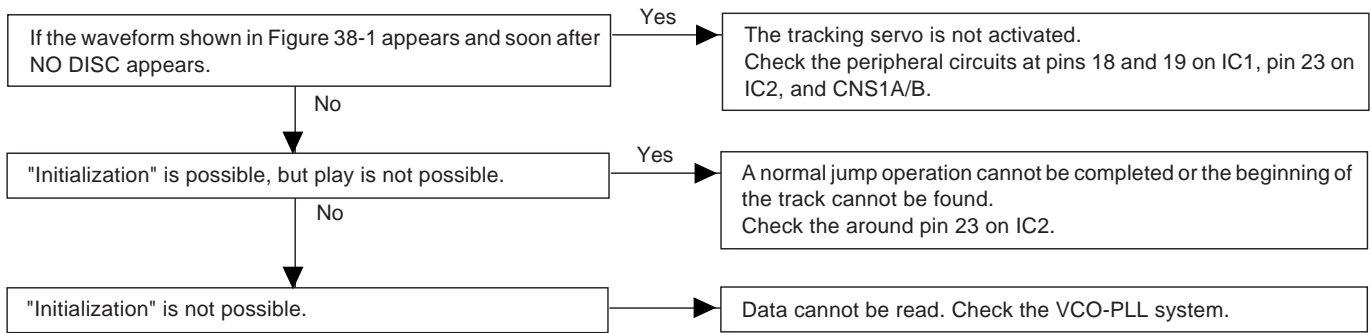


Figure 38-1

(3) Spin system check

Press the OPEN/CLOSE switch without inserting a disc, and then try starting the play operation.

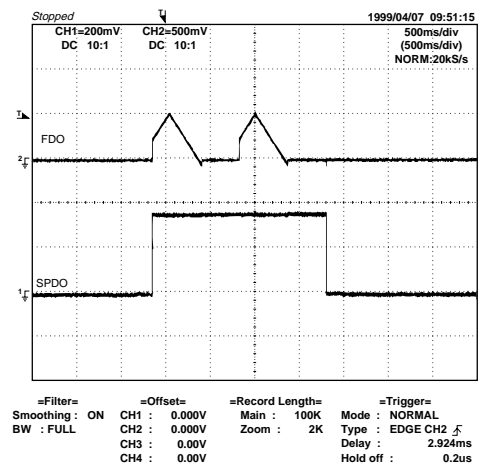
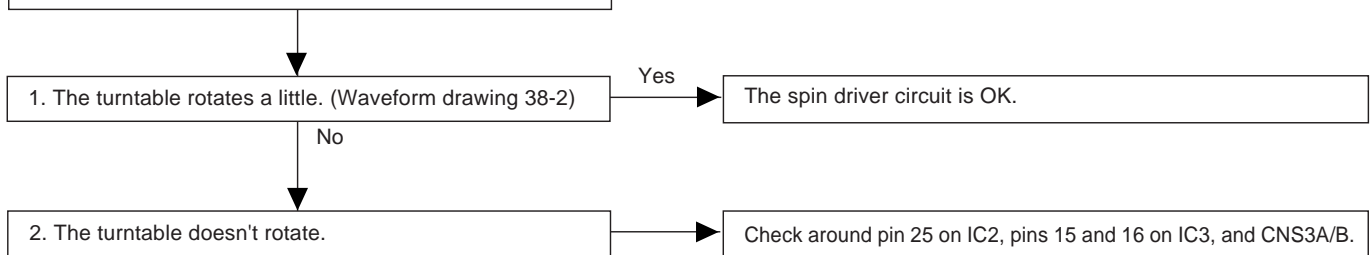


Figure 38-2

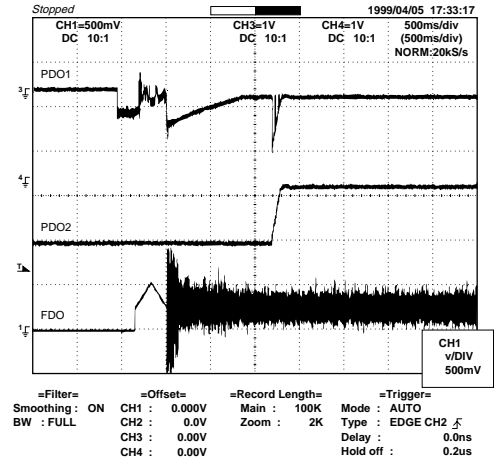
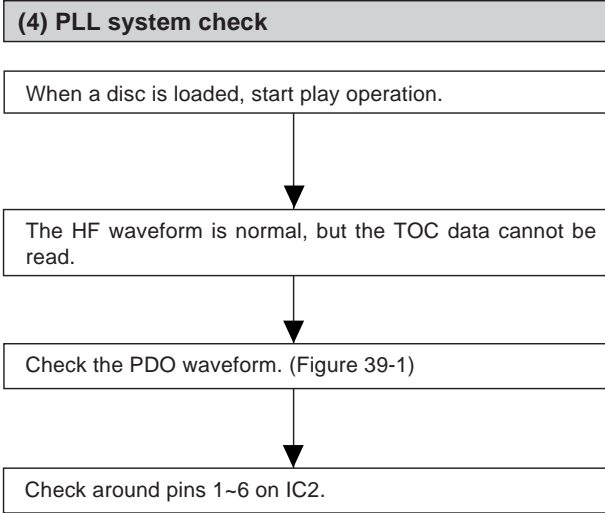


Figure 39-1

(5) Others

The HF waveform is normal and the time is displayed normally, but no sound is produced. Or the sound has dropouts.



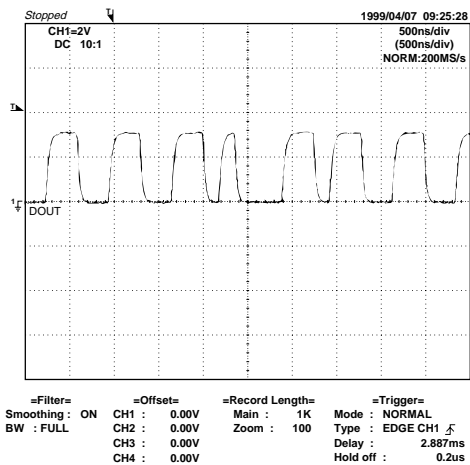


Figure 39-2

FUNCTION TABLE OF IC

IC1 VHiLA9235M/-1: Servo Amp. (LA9235M)

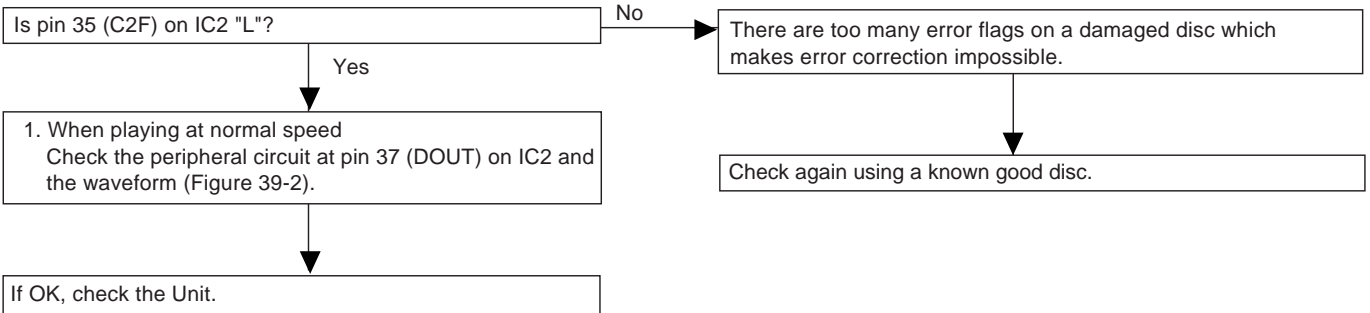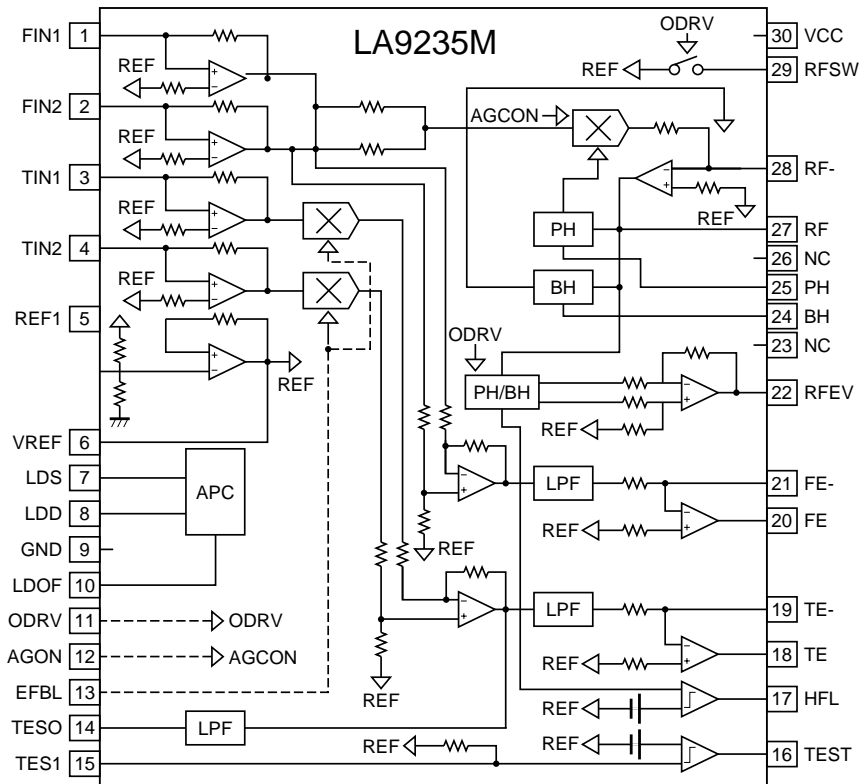

IC2 VHiLC78641E/-1: Servo/Signal Control (LC78641E)

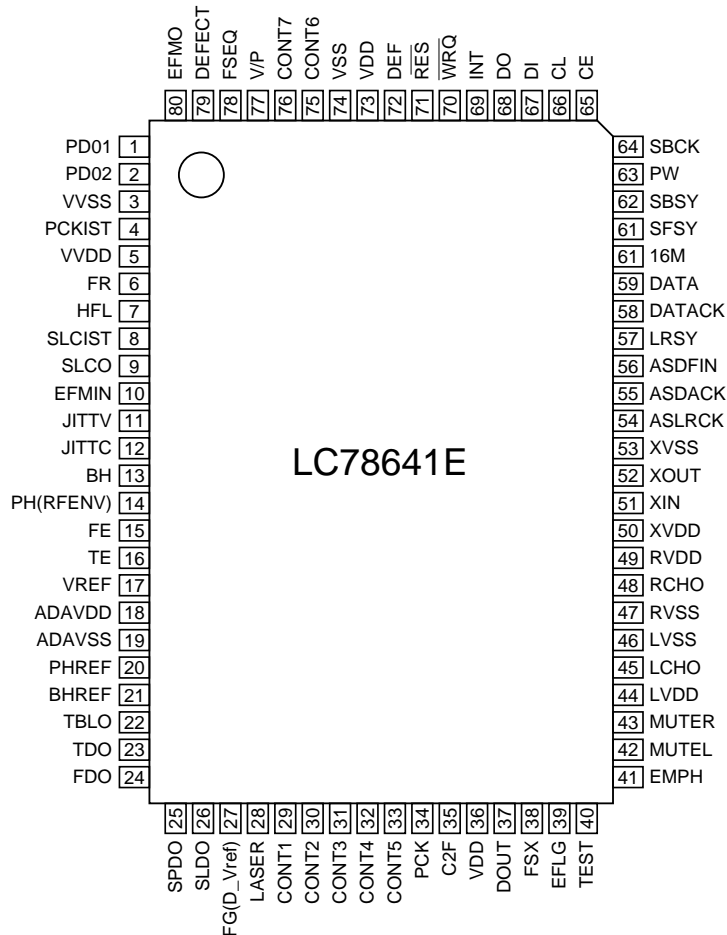


Figure 40 BLOCK DIAGRAM OF IC

IC2 VHiLC78641E-1: Servo/Signal Control (LC78641E) (1/2)

Pin No.	Terminal Name	Input/Output	Setting in Reset	Function	
1	PD01	Output	–	For PULL	Phase-comparison output terminal for built-in VOC control.
2	PD02	Output	–		Phase-comparison output terminal for built-in VOC control. Rough servo : OFF, phase servo : ON.
3	VVSS	–	–		Ground terminal for built-in VCO.
4	PCKIST	AI	–		Resistor terminal for setting the PDO output current.
5	VVDD	–	–		Power terminal for built-in VCO.
6	FR	AI	–		Resistor terminal for setting the VCO frequency range.
7	HFL	Input	–	Mirror detection signal input terminal.	
8	SLCIST	AI	–	For slice level control	Resistance connection terminal for current adjustment of SLCO output.
9	SLCO	Output	–		Control output.
10	EFMIN	Input	–		EFM signal input terminal.
11*	JITTV	Output	Unfixed	Jitter detection/monitor terminal.	
12	JITTC	Output	–	Jitter detection/adjustment terminal.	
13	BH	Input	–	BH signal input terminal. A/D input.	
14	PH(RFENV)	Input	–	PH signal or RFENV signal input terminal. A/D input.	
15	FE	Input	–	FE signal input terminal. A/D input.	
16	TE	Input	–	TE signal input terminal. A/D input.	
17	VREF	Input	–	VREF signal input terminal. A/D input.	
18	ADAVDD	–	–	AD for servo, D/A power terminal.	
19	ADAVSS	–	–	AD for servo, D/A ground terminal.	
20*	PHREF	Output	(1/2VDD)	PH reference output terminal. D/A output.	
21*	BHREF	Output	(1/2VDD)	BH reference output terminal. D/A output.	
22	TBLO	Output	(1/2VDD)	Output terminal for tracking balance. D/A output.	
23	TDO	Output	(1/2VDD)	Output terminal for tracking control. D/A output.	
24	FDO	Output	(1/2VDD)	Output terminal for focus control. D/A output.	
25	SPDO	Output	(1/2VDD)	Output terminal for spindle control. D/A output.	
26	SLDO	Output	(1/2VDD)	Output terminal for sled control. D/A output.	
27*	FG(D_Vref)	Input	–	FG signal input terminal. (When not used, connect to 0V)	
28	LASER	Output	L	LASER ON/OFF control terminal.	
29	CONT1	In/Output	Input mode	General purpose input/output terminal 1.	Controlled with serial data command from microcomputer. When not used, set it as the input terminal and open it by connecting to 0V, or set it as the output terminal and open it.
30	CONT2	In/Output	Input mode	General purpose input/output terminal 2.	
31	CONT3	In/Output	Input mode	General purpose input/output terminal 3.	
32	CONT4	In/Output	Input mode	General purpose input/output terminal 4.	
33	CONT5	In/Output	Input mode	General purpose input/output terminal 5.	
34*	PCK	Output	H	Clock monitor terminal for EFM data replay. 4.3218MHz as phase clock.	
35*	C2F	Output	H	C2 flag output terminal.	
36	VDD	–	–	Power terminal of digital system.	
37*	DOUT	Output	L	Output terminal of digital OUT. (EIAJ format)	
38*	FSX	Output	L	Output terminal of synchronous signal of 7.35kHz divided from quartz oscillation.	
39*	EFLG	Output	L	C1,C2 correct monitor terminal.	
40	TEST	Input	–	Input terminal for test. Surely connected to 0V.	
41*	EMPH	In/Output	Input mode	Emphasis terminal. After resetting, it is configured as an input terminal. It can be controlled from the outside. It is also becomes a emphasis monitor terminal under command control.	
42*	MUTEL	Output	H	Mute output terminal for L channel.	
43*	MUTER	Output	H	Mute output terminal for R channel.	

In this unit, the terminal with asterisk mark (*) is (open) terminal which is not connected to the outside.

CD-BP160W/180W/1500W/1700W

IC2 VHiLC78641E-1: Servo/Signal Control (LC78641E) (2/2)

Pin No.	Terminal Name	Input/Output	Setting in Reset	Function	
44	LVDD	–	–	L channel	Power terminal for L channel.
45	LCHO	Output	1/2VDD	D/A converter	L channel output terminal.
46	LVSS	–	–		Ground terminal for L channel. Surely connected to 0V.
47	RVSS	–	–		R channel
48	RCHO	OUTPUT	1/2VDD	D/A converter	R channel output terminal.
49	RVDD	–	–		Power terminal for R channel.
50	XVDD	–	–	For quartz oscillation	Power terminal for quartz oscillation.
51	XIN	Input	Oscillation		Ground terminal of 16.9344MHz quartz oscillation.
52	XOUT	Output	Oscillation		Ground terminal for quartz oscillation. Surely connected to 0V.
53	XVSS	–	–		
54	ASLRCK	Input	–	For anti shock mode	L/R clock input terminal. (When not used,connect to 0V)
55	ASDACK	Input	–		Bit clock input terminal. (When not used,connect to 0V)
56	ASDFIN	Input	–		L/R channel data input terminal. (When not used,connect to 0V)
57*	LRSY	Output	L	For digital data output	L/R clock output terminal.
58*	DATAACK	Output	L		Bit clock output terminal.
59*	DATA	Output	L		L/R channel data output terminal.
60*	16M	Output	Clock output	16.9344MHz output terminal.	
61*	SFSY	Output	L	Output terminal of synchronous signal of subcode frame. It drops when subcode stand by.	
62*	SBSY	Output	L	Output terminal of synchronous signal of subcode block.	
63*	PW	Output	L	Output terminal of subcodes P,A,R,S,T,U and W.	
64	SBCK	Input	–	Clock input terminal to read subcode. (When not used,connect to 0V)	
65	CE	Input	–	For microcomputer interface	Chip enable signal input terminal.
66	CL	Input	–		Data transmission clock input terminal.
67	DI	Input	–		Data input terminal.
68	DO	Output	L		Data output terminal.
69	INT	Output	H		Interruption signal output terminal.
70	WRQ	Output	H		Interruption signal output terminal.
71	RES	Input	–	Reset input terminal of LC78640. When turning on power, set it at "L".	
72	DEF	Output	L	Focus ON detection terminal.	
73	VDD5V	–	–	Power terminal for microcomputer interface.	
74	VSS	–	–	Ground terminal of digital system. Surely connected to 0V.	
75	CONT6	In/Output	Input mode	General purpose input/output terminal 6.	Controlled with serial data command from microcomputer. When not used, set it as the input terminal and open it by connecting to 0V, or set it as the output terminal and open it.
76	CONT7	In/Output	Input mode	General purpose input/output terminal 7.	
77*	V/P	Output	H	Monitor output terminal for automatic switch of rough servo/phase control. "H" for rough servo, and "L" for phase servo.	
78*	FSEQ	Output	L	Output terminal synchronous signal detection. "H" is output when synchronous signal detected by EFM signal matches synchronous signal internally generated.	
79	DEFECT	In/Output	Input mode	Defect terminal. After resetting, it is configured as an input terminal. It can be controlled from the outside. It also becomes a defect monitor terminal under command control	
80*	EFMO	Output	Unfixed	EFM signal output terminal.	

In this unit, the terminal with asterisk mark (*) is (open) terminal which is not connected to the outside.

Be sure to supply the same potential to each power terminal. (VDD,ADAVDD,VDD,LVDD,RVDD,XVDD)

Terminal witch is controlled by the power terminal (VDD5V) for a microcomputer interface :

CE (65pin), CL (66pin), DI (67pin), DO (68pin), INT (69pin), WRQ (70pin), RES (71pin), DRF (72pin), CONT6 (75pin), CONT7 (76pin)

IC701 RH-iX0328AWZZ: System Microcomputer (IX0328AW) (1/2)

Pin No.	Port Name	Terminal Name	Input/Output	Function
1	VDD	VDD	—	(+) Power supply
2*	P37	—	—	GND
3*	P36	S-BUSY	Output	Commintcate to mpeg ucom
4	P35	T-BTAS	Output	Tape record bias
5	P34	T-T1/T2	Output	Tape T1/T2 change
6	P33	REC/PLAY	Output	Tape rec/play change
7	P32	RES OUT	Output	CD DSP reset & mpeg ucom reset
8	P31	DRF	Input	CD RF level detection
9	P30	WRQ	Input	CD DSP write requset
10	RESET	RESET	Input	Reset
11	X2	X2	Output	Main clock
12	X1	X1	Input	Main clock
13	Vpp/IC	VPP/IC	—	GND
14*	XT2	XT2	—	Open
15	P04	CD INT	Input	CD DSP interrupt
16	VDD	VDD	—	(+) Power supply
17	P27	CD CLK	Output	CD DSP clock/mpeg ucom clock
18	P26	CD DI	Outout	CD DSP command/mpeg ucom comma
19	P25	CD DO	Input	CD DSP code Q out/mpeg ucom data input
20	P24	CD CE	Output	CD DSP CE output
21	P23	CE	Output	CE output
22	P22	CLK	Output	Clockoutput
23	P21	DI	Output	Data output
24	P20	DO	Output	Data input
25	AVss	AVSS	—	Analog ground
26	ANI7 P17	TUN SM M-BUSY	Input Input	Tuner signal meter input Commintcate to mpeg ucom m_busy
27	ANI6	NO USE	Input	GND
28	ANI5	SPEANA 2	Input	Speana data input 16 KHz
29	ANI4	SPEANA 1	Input	Speana data input 1 KHz
30	ANI3	SPEANA 0	Input	Speana data input 63 KHz
31-33	ANI2-ANI0	KEY2-KEY0	Input	Key input
34	AVDD	AVDD	—	Analog VDD
35	AVREF	AVref	—	Analog ref voltage
36	INTP3	SYS STOP	Input	System stop input
37	P02	SP_RLY	Output	Speaker output relay control
38	INTP1	NO USE	Input	GND
39	INTP0	REMOCON	Input	Remocon input
40	Vss	VSS	—	Ground voltage
41	P74	SMUTE	Output	System mute control
42	P73	T_SOL_B	Output	Tape2 solenoid control
43	P72	T_SOL_A	Output	Tape1 solenoid control
44	P71	T_MOTOR	Output	Tape motor control
45	P70	TIMER LED	Output	Timer LED control
46	VDD	VDD	—	(+) Power supply
47	P127	AC RLY_CONT	Output	AC relay control
48*	P126	SPRLY	Output	Speaker output relay control
49	P125	SPK_DET	Input	Speaker output detdction
50	P124	T1 RUN	Input	Tape1 run pulse input
51	P123	T2 RUN	Input	Tape2 run pulse input
52	P122	CD CLAMP	Intput	CD changer clamp switch
53	P121	PLAY SW_A	Input	Play switch for Tape1

In this unit, the terminal with asterisk mark (*) is (open) terminal which is not connected to the outside.

CD-BP160W/180W/1500W/1700W

IC701 RH-iX0328AWZZ: System Microcomputer (IX0328AW) (2/2)

Pin No.	Port Name	Terminal Name	Input/Output	Function
54	P120	PLAY SW_B	Input	Play switch for Tape2
55	P119	PPA	Input	Tape2 A-side full proof
56	P118	FPB	Input	Tape2 B_side full proof
57	P117	MIC IN	Input	MIC switch
58	P116	KARAOKE LATCH	Output	Karaoke latch
59	P115	DISTOUT/SW OUT	Output	Distnation output
60*	FIP39	SPN	Input	Tuner span change
61*,62*	FIP38-FIP37	NO USE	Input	Open
63-66	FIP36-FIP33	P22-P19	Output	FL display driver
67-70	FIP32-FIP29 P103-P100	P18-P15 DIST3-DIST0	Output Input	FL display driver Distination input
71-78	FIP28-FIP21	P14-P7	Output	FL display driver
79	VLOAD	VLOAD	—	FL driver (-) power supply.-30V
80-85	FIP20-FIP15	P6-P1	Output	FL display segment
86*-89*	FIP14-FIP11	—	Input	Open
90-100	FIP30-FIP0	G11-G1	Output	FL diaplay segment driver

In this unit, the terminal with asterisk mark (*) is (open) terminal which is not connected to the outside.

IC3 VHiM63001FP-1: Focus/Tracking/Spin/Sled Driver (M63001FP)

Pin No.	Terminal Name	Function
1	TO	CH2 inverted input.
2	FD	CH1 inverted input.
3*	FO	CH1 output offset control.
4	FO+	CH1 inverted output.
5	FO-	CH1 non-inverted output.
6	TR+	CH2 inverted output.
7	TR-	CH2 non-inverted output.
8-14	GND	GND
15	SL-	CH3 non-inverted output.
16	SL+	CH3 inverted output.
17	SLDO	CH3 inverted input.
18	VCC1	Power supply 1 (CH1, CH2, CH3)
19	STANDBY	STANDBY signal input.
20	VRFE	CH1-CH4 Reference voltage input.
21	MUTE	Mute signal input (CH6).
22	IN5-	CH5 inverted input.
23	IN5+	CH5 non-inverted input.
24	VCC2	Power supply 2 (CH4).
25	SPO SPDO	CH4 inverted input.
26	SP+	CH4 inverted output.
27	SP-	CH4 non-inverted output.
28	VCC3	Power supply 3 (CH5).
29-35	GND	GND
36*	OUT5+	CH5 non-inverted output.
37*	OUT5-	CH5 inverted output.
38	LOADIING M+	CH6 non-inverted output.
39	LOADIING M-	CH6 inverted output.
40	VCC4	Power supply 4 (CH6).
41	LD_M-	CH6 inverted input.
42	LD_M+	CH6 non-inverted input.

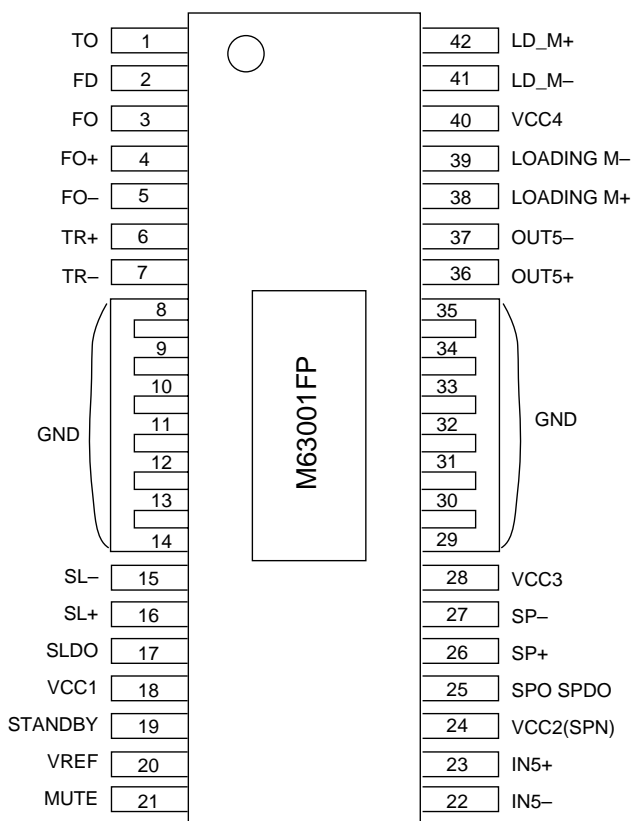


Figure 44 BLOCK DIAGRAM OF IC

In this unit, the terminal with asterisk mark (*) is (open) terminal which is not connected to the outside.

IC401 VHiLC75341/-1: Audio Processor (LC75341)




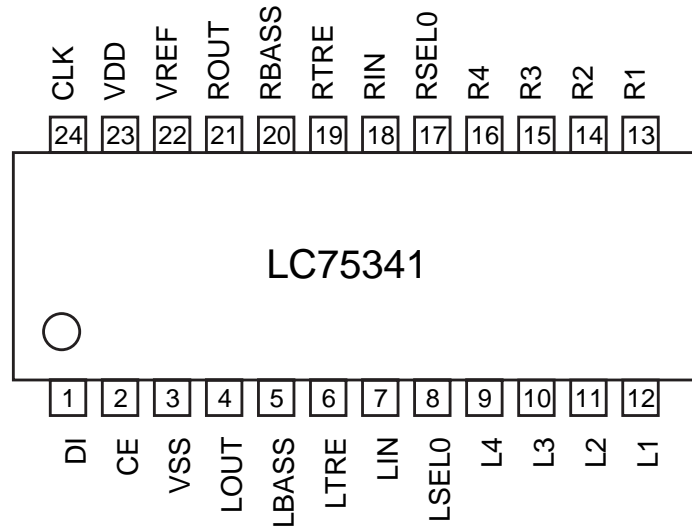


Figure 45 BLOCK DIAGRAM OF IC

CD-BP160W/180W/1500W/1700W

FL701 VVKBJ749GNK-1: FL Display

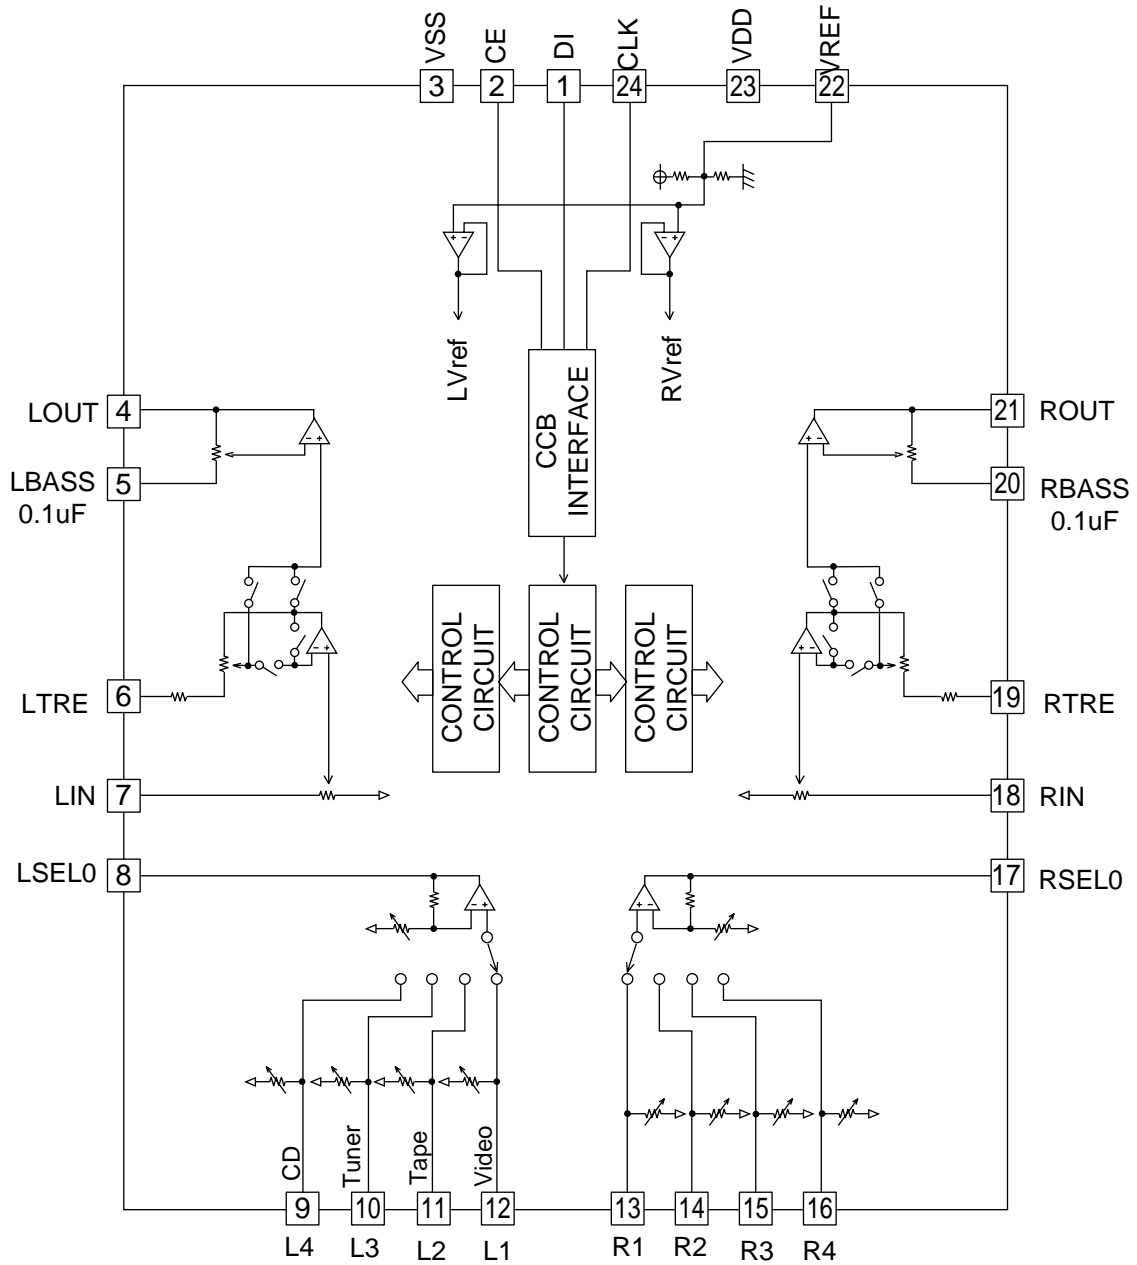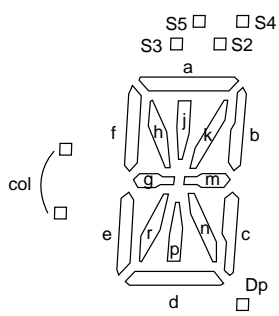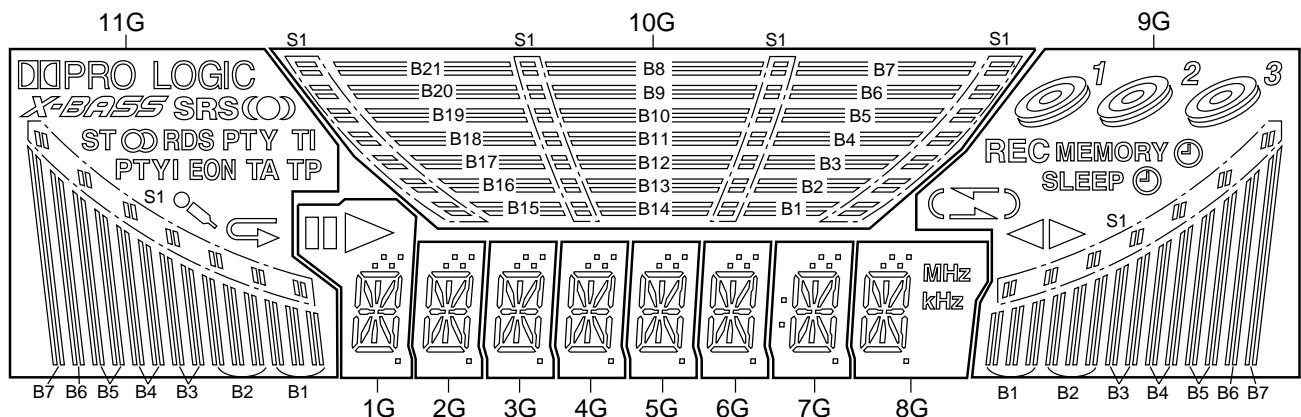

	11G	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
P1	S1	S1	S1	Dp	Dp	Dp	Dp	Dp	Dp	Dp	Dp
P2	B1	B1	B1	d	d	d	d	d	d	d	d
P3	B2	B2	B2	c	c	c	c	c	c	c	c
P4	B3	B3	B3	n	n	n	n	n	n	n	n
P5	B4	B4	B4	p	p	p	p	p	p	p	p
P6	B5	B5	B5	r	r	r	r	r	r	r	r
P7	B6	B6	B6	e	e	e	e	e	e	e	e
P8	B7	B7	B7	m	m	m	m	m	m	m	m
P9	DIPRO LOGIC	B8		g	g	g	g	g	g	g	g
P10	X-BASE	B9		/	col	/	/	/	/	/	/
P11	SRS	B10		b	b	b	b	b	b	b	b
P12	ST	B11	REC	k	k	k	k	k	k	k	k
P13		B12	MEMORY	j	j	j	j	j	j	j	j
P14	RDS	B13		h	h	h	h	h	h	h	h
P15	PTY	B14		f	f	f	f	f	f	f	f
P16	TI	B15	SLEEP	a	a	a	a	a	a	a	a
P17	TP	B16		S2	S2	S2	S2	S2	S2	S2	S2
P18	TA	B17		S3	S3	S3	S3	S3	S3	S3	S3
P19	PTYI	B18		S4	S4	S4	S4	S4	S4	S4	S4
P20	EON	B19		S5	S5	S5	S5	S5	S5	S5	S5
P21		B20		MHz	/	/	/	/	/	/	
P22		B21	/	kHz	/	/	/	/	/	/	

Figure 46 FL DISPLAY

SHARP PARTS GUIDE

MODEL **CD-BP160W**

CD-BP160W Mini Component System consisting of CD-BP160W (main unit) and CP-BP160 (speaker system).

CD-BP180W

CD-BP180W Mini Component System consisting of CD-BP180W (main unit), CP-BP180 (front speaker) and GBOXS0041AWM1 (surround speaker).

CD-BP1500W

CD-BP1500W Mini Component System consisting of CD-BP1500W (main unit) and CP-BP1500 (speaker system).

CD-BP1700W

CD-BP1700W Mini Component System consisting of CD-BP1700W (main unit), CP-BP1700 (front speaker) and GBOXS0041AWM1 (surround speaker).

“HOW TO ORDER REPLACEMENT PARTS”

To have your order filled promptly and correctly, please furnish the following information.

- | | |
|-----------------|----------------|
| 1. MODEL NUMBER | 2. REF. No. |
| 3. PART NO. | 4. DESCRIPTION |

★ MARK: SPARE PARTS-DELIVERY SECTION

For U.S.A. only

Contact your nearest SHARP Parts Distributor to order.

For location of SHARP Parts Distributor,
Please call Toll-Free;
1-800-BE-SHARP

Explanation of capacitors/resistors parts codes

Capacitors

VCC Ceramic type
 VCK Ceramic type
 VCT Semiconductor type
 VC •• MF Cylindrical type (without lead wire)
 VC •• MN Cylindrical type (without lead wire)
 VC •• TV Square type (without lead wire)
 VC •• TQ Square type (without lead wire)
 VC •• CY Square type (without lead wire)
 VC •• CZ Square type (without lead wire)
 VC •••••••• J .. The 13th character represents capacity difference.
 ("J" ±5%, "K" ±10%, "M" ±20%, "N" ±30%,
 "C" ±0.25 pF, "D" ±0.5 pF, "Z" +80-20%.)

If there are no indications for the electrolytic capacitors, error is ±20%.

Resistors

VRD Carbon-film type
 VRS Carbon-film type
 VRN Metal-film type
 VR •• MF Cylindrical type (without lead wire)
 VR •• MN Cylindrical type (without lead wire)
 VR •• TV Square type (without lead wire)
 VR •• TQ Square type (without lead wire)
 VR •• CY Square type (without lead wire)
 VR •• CZ Square type (without lead wire)
 VR •••••••• J .. The 13th character represents error.
 ("J" ±5%, "F" ±1%, "D" ±0.5%.)

If there are no indications for other parts, the resistors are ±5% carbon-film type.

NOTE:

Parts marked with “⚠” are important for maintaining the safety of the set.
 Be sure to replace parts with specified ones for maintaining the safety and performance of the set.

CD-BP160W/180W/1500W/1700W

NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION
CD-BP160W/180W/1500W/1700W			
INTEGRATED CIRCUITS			
IC1	VHILA9235M/-1	J AQ	Servo Amp.,LA9235M
IC2	VHILC78641E-1	J AV	Servo/Signal Control,LC78641E
IC3	VHIM63001FP-1	J AX	Focus/Tracking/Spin/Sled Driver,M63001FP
IC101	VHIAN7345K/-1	J AM	Playback and Record/Playback Amp.,AN7345K
IC301	VHITA7358AP-1	J AG	FM Front End,TA7358AP
IC302	VHILC72131/-1	J AP	PLL (Tuner),LC72131
IC303	VHILA1832S/-1	J AN	FM IF Det./FM Mpx./AM IF,LA1832S
IC401	VHILC75341/-1	J AM	Audio Processor,LC75341
IC701	RH-IX0328AWZZ	J AX	System Microcomputer, IX0328AW
IC702,703	VHIKIA4558P-1	J AC	Ope Amp.,KIA4558P
IC704	VHIKIA7042AP1	J AC	Reset,KIA7042AP
IC841	VHIKIA7810AP1	J AF	Voltage Regulator,KIA7810AP
IC851	VHIKIA7805P-1	J AF	Voltage Regulator,KIA7805P
IC852	VHIAN78L05/-1	J AE	Constant Voltage Regulator, AN78L05
IC901	VHISTK40204-1	J AX	Power AMP.,STK40204
TRANSISTORS			
Q1	VSKTC3203Y/-1	J AC	Silicon,NPN,KTC3203 Y
Q2	VSKRC102M/-1	J AC	Digital,NPN,KRC102 M
Q3	VSKTA1266GR-1	J AB	Silicon,PNP,KTA1266 GR
Q101	VSKTA1266GR-1	J AB	Silicon,PNP,KTA1266 GR
Q102,103	VSKRC104M/-1	J AC	Digital,NPN,KRC104 M
Q104-107	VS2SC1845F/-1	J AC	Silicon,NPN,2SC1845 F
Q108-111	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
Q112	VSKTA1266GR-1	J AB	Silicon,PNP,KTA1266 GR
Q113	VSKRC104M/-1	J AC	Digital,NPN,KRC104 M
Q114	VSKTC3203Y/-1	J AC	Silicon,NPN,KTC3203 Y
Q302	VSKTC3194Y/-1	J AD	Silicon,NPN,KTC3194 Y
Q360	VSKTA1266GR-1	J AB	Silicon,PNP,KTA1266 GR
Q401,402	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
Q601-604	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
Q605,606	VSKTA1271Y/-1	J AC	Silicon,PNP,KTA1271 Y
Q607	VSKTA1273Y/-1	J AE	Silicon,PNP,KTA1273 Y
Q608	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
Q609	VSKRC102M/-1	J AC	Digital,NPN,KRC102 M
Q801	VSKTA1274Y/-1	J AE	Silicon,PNP,KTA1274 Y
Q831	VSKTC2026/-1	J AF	Silicon,NPN,KTC2026
Q901-904	VSKTC3199GR-1	J AB	Silicon,NPN,KTC3199 GR
Q951	VSKRC107M/-1	J AC	Digital,NPN,KRC107 M
Q971	VSKTC3203Y/-1	J AC	Silicon,NPN,KTC3203 Y
DIODES			
D21,22	VHDDS1SS133-1	J AB	Silicon,DS1SS133
D93	VHDDS1SS133-1	J AB	Silicon,DS1SS133
D301,302	VHDDS1SS133-1	J AB	Silicon,DS1SS133
D305	VHDDS1SS133-1	J AB	Silicon,DS1SS133
D403,404	VHDDS1SS133-1	J AB	Silicon,DS1SS133
D601-604	VHDDS1SS133-1	J AB	Silicon,DS1SS133
D608	VHDDS1SS133-1	J AB	Silicon,DS1SS133
D611-618	VHDDS1SS133-1	J AB	Silicon,DS1SS133
D620,621	VHDDS1SS133-1	J AB	Silicon,DS1SS133
D801	VHDS6B04GM-1	J AP	Silicon,TS6B04GM
D802-808	VHD1N4004S/-1	J AB	Silicon,1N4004S
D851	VHDDS1SS133-1	J AB	Silicon,DS1SS133
D901-903	VHDDS1SS133-1	J AB	Silicon,DS1SS133
D951	VHDDS1SS133-1	J AB	Silicon,DS1SS133
D971	VHDDS1SS133-1	J AB	Silicon,DS1SS133
LED722	VHP4204SRT7-1	J AD	LED,Red,4204SRT7
ZD61	VHEDZ3R9BSB-1	J AC	Zener,3.9V,DZ3.9BSB
ZD351	VHEDZ5R1BSB-1	J AC	Zener,5.1V,DZ5.1BSB
ZD601	VHEDZ6R2BSC-1	J AB	Zener,DZ6.2BSC
ZD801	VHEDZ300BSB-1	J AB	Zener,30V,DZ300BSB
ZD802	VHEDZ6R2BSA-1	J AB	Zener,6.2V,DZ6.2BSA
ZD803	VHEDZ130BSB-1	J AB	Zener,DZ130BSB
VARIABLE CAPACITORS			
VD301	VHCSVC348S/-1	J AK	Variable Capacitance,SVC348S
VD302,303	VHCKDV147B/-1	J AH	Variable Capacitance,KDV147B

NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION
FILTERS			
CF303	RFILF0124AFZZ	J AD	FM IF,10.7 MHz
CF351	RFILF0003AWZZ	J AK	FM IF
CF352	RFILA0009AWZZ	J AE	AM IF
TRANSFORMERS			
△PT801	RTRNP0296AWZZ	J BE	Power
T301	RCILB0065AWZZ	J AC	OSC,FM
T302	RCILIO017AWZZ	J AB	FM IF
T303	RCILA0052AWZZ	J AE	AM Antenna
T306	RCILB0058AWZZ	J AC	OSC,AM
T351	RCILIO019AWZZ	J AD	AM IF
COILS			
L61	VP-XHR82K0000	J AC	0.82 μH
L62	VP-XH2R2K0000	J AB	2.2 μH,Choke
L104	VP-MK331K0000	J AB	330 μH,Choke
L312	RCILR0056AWZZ	J AB	FM RF
L351,352	VP-DH101K0000	J AB	100 μH,Choke
L601	VP-DH101K0000	J AB	100 μH,Choke
L920,921	RCILZ0137AFZZ	J AA	0.29 μH
VIBRATORS			
X351	92LCRSTL1425A	J AF	Crystal,456 kHz
X352	RCRSP0002AWZZ	J AH	Crystal,4.5 MHz
XL1	92LCRSTL1746A	J AC	Crystal,16.93 MHz
XL701	RCRSP0003AWZZ	J AH	Crystal,4.1943 MHz
CAPACITORS			
C6	VCEAZA1AW107M	J AB	100 μF,10V,Electrolytic
C7	VCEAZA1CW106M	J AC	10 μF,16V,Electrolytic
C8	VCKYTV1HB104K	J AB	0.1 μF,50V
C11	RC-EZY474AF0J	J	0.47 μF,6.3V,Electrolytic
C12	VCKYTV1HB104K	J AB	0.1 μF,50V
C13	VCKYTV1HB103K	J AA	0.01 μF,50V
C14	VCKYTV1EF334Z	J AB	0.33 μF,25V
C16	VCCSPA1HL6R0J	J AA	6 pF,50V
C17	VCKYTV1HB472K	J AA	0.0047 μF,50V
C18	VCCCTV1HH3R0C	J AA	3 pF (CH),50V
C19	VCEAZA1AW107M	J AB	100 μF,10V,Electrolytic
C20,21	VCKYTV1HB104K	J AB	0.1 μF,50V
C22	VCKYTV1HB101K	J AA	100 pF,50V
C23	VCKYTV1HB473K	J AA	0.047 μF,50V
C24	VCEAZA1HW225M	J AB	2.2 μF,50V,Electrolytic
C25	VCKYTV1HB104K	J AB	0.1 μF,50V
C26	VCKYTV1HB473K	J AA	0.047 μF,50V
C27	VCKYTV1HB104K	J AB	0.1 μF,50V
C28	VCEAZA1AW476M	J AB	47 μF,10V,Electrolytic
C29,30	VCKYTV1HB104K	J AB	0.1 μF,50V
C31	VCEAZA1AW107M	J AB	100 μF,10V,Electrolytic
C34	VCTYBT1EF223Z	J AA	0.022 μF,25V
C38,39	VCEAZA1CW106M	J AC	10 μF,16V,Electrolytic
C40	VCKYTV1HB152K	J AA	0.0015 μF,50V
C41	VCEAZA1AW107M	J AB	100 μF,10V,Electrolytic
C42	VCCSTV1HL680J	J AA	68 pF,50V
C43	VCKYTV1HB152K	J AA	0.0015 μF,50V
C44	VCKYTV1HB104K	J AB	0.1 μF,50V
C45	VCEAZA1AW107M	J AB	100 μF,10V,Electrolytic
C46	VCKYTV1EF223Z	J AA	0.022 μF,25V
C47	VCEAZA1CW107M	J AC	100 μF,16V,Electrolytic
C49,50	VCEAZA1CW107M	J AC	100 μF,16V,Electrolytic
C51	VCEAZA1AW476M	J AB	47 μF,10V,Electrolytic
C52	VCTYPA1CX103K	J AA	0.01 μF,16V
C53	VCKYTV1HB102K	J AA	0.001 μF,50V
C54	VCEAZA1AW476M	J AB	47 μF,10V,Electrolytic
C55	VCKYTV1HB103K	J AA	0.01 μF,50V
C56	VCEAZA0JW337M	J AC	330 μF,6.3V,Electrolytic
C64	RC-EZY474AF0J	J	0.47 μF,6.3V,Electrolytic
C71	VCKYTV1HB101K	J AA	100 pF,50V
C72	VCKYTV1HB103K	J AA	0.01 μF,50V
C73-78	VCKYTV1HB101K	J AA	100 pF,50V
C80	VCKYTV1HB104K	J AB	0.1 μF,50V
C81-83	VCKYTV1EF223Z	J AA	0.022 μF,25V
C98	VCKZPA1HF223Z	J AA	0.022 μF,50V
C99	VCEAZA1AW107M	J AB	100 μF,10V,Electrolytic
C101	VCKZPA1HF473Z	J AA	0.047 μF,50V

CD-BP160W/180W/1500W/1700W

NO.	PARTS CODE	★	PRICE RANK	DESCRIPTION	NO.	PARTS CODE	★	PRICE RANK	DESCRIPTION
C102,103	VCKYMN1HB102K	J	AA	0.001 μF,50V	C396	VCEAZA1AW107M	J	AB	100 μF,10V,Electrolytic
C104,105	VCKYMN1HB181K	J	AA	180 pF,50V	C397	VCTYMN1EF223Z	J	AA	0.022 μF,25V
C106,107	VCKYMN1HB102K	J	AA	0.001 μF,50V	C398	VCEAZA1AW107M	J	AB	100 μF,10V,Electrolytic
C108	VCEAZA1CW107M	J	AC	100 μF,16V,Electrolytic	C399	VCTYMN1EF223Z	J	AA	0.022 μF,25V
C112~115	VCKYMN1HB331K	J	AA	330 pF,50V	C401,402	VCKYMN1HB102K	J	AA	0.001 μF,50V
C116,117	VCEAZA1EW107M	J	AB	100 μF,25V,Electrolytic	C403	VCEAZA1EW226M	J	AB	22 μF,25V,Electrolytic
C118,119	VCTYPA1EX333K	J	AA	0.033 μF,25V	C404	VCEAZA1CW107M	J	AC	100 μF,16V,Electrolytic
C120,121	VCKYMN1HB561K	J	AA	560 pF,50V	C405	VCKZPA1HF223Z	J	AA	0.022 μF,50V
C122,123	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic	C406	VCEAZA1HW226M	J	AB	22 μF,50V,Electrolytic
C126,127	VCKYMN1HB271K	J	AA	270 pF,50V	C407,408	VCEAZA1HW106M	J	AB	10 μF,50V,Electrolytic
C128,129	VCEAZA1EW226M	J	AB	22 μF,25V,Electrolytic	C409~412	VCQYKA1HM104K	J	AB	0.1 μF,50V,Mylar
C130,131	VCTYPA1CX223K	J	AA	0.022 μF,16V	C413,414	VCTYMN1CX272K	J	AA	0.0027 μF,16V
C132,133	VCTYMN1CX332K	J	AA	0.0033 μF,16V	C417,418	VCEAEA1HW105M	J	AB	1 μF,50V,Electrolytic
C134,135	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic	C419,420	VCEAZA1HW475M	J	AB	4.7 μF,50V,Electrolytic
C136	VCEAZA1EW226M	J	AB	22 μF,25V,Electrolytic	C421~428	VCEAEA1HW105M	J	AB	1 μF,50V,Electrolytic
C137	VCTYMN1EF223Z	J	AA	0.022 μF,25V	C429,430	VCKYMN1HB391K	J	AA	390 pF,50V
C138	VCEAZA1AW227M	J	AC	220 μF,10V,Electrolytic	C601	VCCSPA1HL271J	J	AA	270 pF,50V
C139	VCEAEA1HW335M	J	AB	3.3 μF,50V,Electrolytic	C602	VCTYMN1CX272K	J	AA	0.0027 μF,16V
C140	VCQPKA2AA822J	J	AA	0.0082 μF,100V,Polypropylene	C603,604	VCTYMN1CX682K	J	AA	0.0068 μF,16V
C141	VCQYKA1HM393K	J	AB	0.039 μF,50V,Mylar	C605	VCKYMN1HB271K	J	AA	270 pF,50V
C142	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic	C606	VCTYMN1CX272K	J	AA	0.0027 μF,16V
C143,144	VCTYMN1CX222K	J	AA	0.0022 μF,16V	C607,608	VCTYMN1EF223Z	J	AA	0.022 μF,25V
C145	VCKYMN1HB102K	J	AA	0.001 μF,50V	C609	VCEAZA1HW476M	J	AB	47 μF,50V,Electrolytic
C148	VCQYKA1HM473K	J	AB	0.047 μF,50V,Mylar	C610	VCTYMN1EF223Z	J	AA	0.022 μF,25V
C150	VCEAZA1EW226M	J	AB	22 μF,25V,Electrolytic	C611	VCKZPA1HF223Z	J	AA	0.022 μF,50V
C301	VCTYMN1CY103N	J	AA	0.01 μF,16V	C612~614	VCEAEA1HW225M	J	AB	2.2 μF,50V,Electrolytic
C302	VCKYMN1HB102K	J	AA	0.001 μF,50V	C616	VCEAEA1HW105M	J	AB	1 μF,50V,Electrolytic
C303	VCCCMN1HH100J	J	AA	10 pF (CH),50V	C617,618	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
C304	VCTYMN1CY103N	J	AA	0.01 μF,16V	C620	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
C305	VCCCMN1HH4R7C	J	AA	4.7 pF (CH),50V	C621	VCEAEA1HW105M	J	AB	1 μF,50V,Electrolytic
C306	VCTYMN1EF223Z	J	AA	0.022 μF,25V	C622	VCCCMN1HH150J	J	AA	15 pF (CH),50V
C307	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic	C623	VCCCMN1HH180J	J	AA	18 pF (CH),50V
C308	VCCSMN1HL4R7C	J	AA	4.7 pF,50V	C624	VCTYBT1EF223Z	J	AA	0.022 μF,25V
C309	VCKYMN1HB102K	J	AA	0.001 μF,50V	C625	VCEAZA1AW227M	J	AC	220 μF,10V,Electrolytic
C310	VCCCMN1HH150J	J	AA	15 pF (CH),50V	C626	VCEAEA1HW104M	J	AB	0.1 μF,50V,Electrolytic
C311	VCCCMN1HH180J	J	AA	18 pF (CH),50V	C627	VCTYMN1CY103N	J	AA	0.01 μF,16V
C312	VCTYMN1EF223Z	J	AA	0.022 μF,25V	C628	VCEAEA1HW335M	J	AB	3.3 μF,50V,Electrolytic
C313	VCCCMN1HH220J	J	AA	22 pF (CH),50V	C629	VCKZPA1HF223Z	J	AA	0.022 μF,50V
C314,315	VCTYMN1CX472K	J	AA	0.0047 μF,16V	C630	VCEAZA1HW106M	J	AB	10 μF,50V,Electrolytic
C316	VCTYMN1EF223Z	J	AA	0.022 μF,25V	C631	VCTYMN1EF223Z	J	AA	0.022 μF,25V
C317	VCKYMN1HB102K	J	AA	0.001 μF,50V	C632	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
C318	VCKYMN1HB101K	J	AA	100 pF,50V	C633	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic
C323	VCTYMN1EF223Z	J	AA	0.022 μF,25V	C801,802	VCQYKA1HM104K	J	AB	0.1 μF,50V,Mylar
C324	VCCUMN1HJ8R2D	J	AA	8.2 pF (UJ),50V	C803,804	VCEAZW1HW228M	J	AH	2200 μF,50V,Electrolytic
C326	VCKYBT1HB102K	J	AA	0.001 μF,50V	C805,806	VCQYKA1HM104K	J	AB	0.1 μF,50V,Mylar
C330	VCCUMN1HJ150J	J	AA	15 pF (UJ),50V	C807	VCEAZW1EW338M	J	AG	3300 μF,25V,Electrolytic
C331	VCKZPA1HF473Z	J	AA	0.047 μF,50V	C808,809	VCEAZA1HW107M	J	AC	100 μF,50V,Electrolytic
C332	VCTYMN1EF223Z	J	AA	0.022 μF,25V	C810	VCEAZV1HW227M	J	AD	220 μF,50V,Electrolytic
C334	VCCUMN1HJ270J	J	AA	27 pF (UJ),50V	C811	VCEAZA1HW476M	J	AB	47 μF,50V,Electrolytic
C335	VCKYMN1HB561K	J	AA	560 pF,50V	C812	VCEAZA1HW107M	J	AC	100 μF,50V,Electrolytic
C337	VCCUMN1HJ270J	J	AA	27 pF (UJ),50V	C813	VCEAZA1VW107M	J	AC	100 μF,35V,Electrolytic
C338	VCKYMN1HB102K	J	AA	0.001 μF,50V	C831	VCEAZA1EW227M	J	AC	220 μF,25V,Electrolytic
C342	VCTYMN1EF223Z	J	AA	0.022 μF,25V	C832	VCKZPA1HF223Z	J	AA	0.022 μF,50V
C350,351	VCTYMN1EF223Z	J	AA	0.022 μF,25V	C833	VCEAZA1EW226M	J	AB	22 μF,25V,Electrolytic
C352	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic	C834	VCQYKA1HM473K	J	AB	0.047 μF,50V,Mylar
C353,354	VCTYMN1EF223Z	J	AA	0.022 μF,25V	C841,842	VCQYKA1HM104K	J	AB	0.1 μF,50V,Mylar
C355	VCCSMN1HL220J	J	AA	22 pF,50V	C843	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
C356	VCKYMN1HB102K	J	AA	0.001 μF,50V	C851	VCQYKA1HM104K	J	AB	0.1 μF,50V,Mylar
C357	VCEAEA1HW225M	J	AB	2.2 μF,50V,Electrolytic	C852	VCKZPA1HF223Z	J	AA	0.022 μF,50V
C358	VCEAEA1HW105M	J	AB	1 μF,50V,Electrolytic	C853,854	VCEAZA1EW476M	J	AB	47 μF,25V,Electrolytic
C361	VCTYMN1EF223Z	J	AA	0.022 μF,25V	C855	VCQYKA1HM473K	J	AB	0.047 μF,50V,Mylar
C362	VCEAEA1HW335M	J	AB	3.3 μF,50V,Electrolytic	C901,902	VCCSPA1HL221J	J	AA	220 pF,50V
C363	VCTYMN1EF223Z	J	AA	0.022 μF,25V	C903,904	VCCSPA1HL150J	J	AA	15 pF,50V
C364	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic	C905,906	VCEAZA1HW476M	J	AB	47 μF,50V,Electrolytic
C365	VCKZPA1HF223Z	J	AA	0.022 μF,50V	C907,908	VCKZPA1HF223Z	J	AA	0.022 μF,50V
C366	VCKYMN1HB102K	J	AA	0.001 μF,50V	C909,910	VCEAZA1HW107M	J	AC	100 μF,50V,Electrolytic
C367,368	VCEAEA1HW105M	J	AB	1 μF,50V,Electrolytic	C911,912	VCEAZA1HW106M	J	AB	10 μF,50V,Electrolytic
C369	VCCUMN1HJ270J	J	AA	27 pF (UJ),50V	C913~916	VCQYKA1HM104K	J	AB	0.1 μF,50V,Mylar
C370~372	VCEAEA1HW105M	J	AB	1 μF,50V,Electrolytic	C917	VCEAZA1HW476M	J	AB	47 μF,50V,Electrolytic
C373,374	VCTYPA1CX153K	J	AA	0.015 μF,16V	C930,931	VCEAZA1HW226M	J	AB	22 μF,50V,Electrolytic [180W/1700W Only]
C375	VCKYMN1HB102K	J	AA	0.001 μF,50V					
C380	VCEAZA1CW106M	J	AC	10 μF,16V,Electrolytic	C935,936	VCEAZA1HW106M	J	AB	10 μF,50V,Electrolytic
C381	VCCCMN1HH120J	J	AA	12 pF (CH),50V	C971	VCEAZA1HW476M	J	AB	47 μF,50V,Electrolytic
C382	VCCCMN1HH150J	J	AA	15 pF (CH),50V	C972	VCEAZA1HW106M	J	AB	10 μF,50V,Electrolytic
C385	VCTYMN1CY103N	J	AA	0.01 μF,16V					
C386	VCKYMN1HB331K	J	AA	330 pF,50V					
C387	VCTYMN1EF223Z	J	AA	0.022 μF,25V					
C391	VCEAZA1CW476M	J	AB	47 μF,16V,Electrolytic					
C392	VCKYMN1HB102K	J	AA	0.001 μF,50V					
C393	VCEAEA1HW105M	J	AB	1 μF,50V,Electrolytic					
C394	VCEAZA1CW476M	J	AB	47 μF,16V,Electrolytic					
C395	VCTYMN1EF223Z	J	AA	0.022 μF,25V					

RESISTORS

R3	VRD-MN2BD000C	J	AA	0 ohm,Jumper,ø1.4x3.5mm,Ivory
R4	VRS-TV2AB104J	J	AA	100 kohm,1/10W
R5	VRS-TV2AB103J	J	AA	10 kohm,1/10W
R6	VRS-TV2AB393J	J	AA	39 kohms,1/10W
	VRS-TV2AB273J	J	AA	27 kohms,1/10W

CD-BP160W/180W/1500W/1700W

NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION	NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION
R7	VRS-TV2AB682J	J AA	6.8 kohms,1/10W	R352	VRD-MN2BD102J	J AA	1 kohm,1/8W
R8	VRS-TV2AB331J	J AA	330 ohms,1/10W	R353	VRD-MN2BD271J	J AA	270 ohms,1/8W
R10	VRS-TV2AB273J	J AA	27 kohms,1/10W	R355	VRD-MN2BD332J	J AA	3.3 kohms,1/8W
R11	VRS-TV2AB123J	J AA	12 kohms,1/10W	R356	VRD-MN2BD102J	J AA	1 kohm,1/8W
R12,13	VRS-TV2AB681J	J AA	680 ohms,1/10W	R357	VRD-ST2CD474J	J AA	470 kohms,1/6W
R14	VRS-TV2AB122J	J AA	1.2 kohms,1/10W	R358	VRD-ST2CD392J	J AA	3.9 kohms,1/6W
R15	VRS-TV2AB103J	J AA	10 kohm,1/10W	R359	VRD-MN2BD182J	J AA	1.8 kohms,1/8W
R16	VRD-ST2CD103J	J AA	10 kohm,1/6W	R360	VRD-MN2BD472J	J AA	4.7 kohms,1/8W
R17	VRD-ST2CD102J	J AA	1 kohm,1/6W	R361,362	VRD-MN2BD682J	J AA	6.8 kohms,1/8W
R19	VRD-ST2CD470J	J AA	47 ohms,1/6W	R363-365	VRD-MN2BD103J	J AA	10 kohm,1/8W
R20	VRS-TV2AB221J	J AA	220 ohms,1/10W	R370	VRD-ST2CD102J	J AA	1 kohm,1/6W
R21,22	VRS-TV2AB471J	J AA	470 ohms,1/10W	R372-374	VRD-MN2BD102J	J AA	1 kohm,1/8W
R25	VRD-ST2CD103J	J AA	10 kohm,1/6W	R375	VRD-ST2CD471J	J AA	470 ohms,1/6W
R35	VRD-ST2CD102J	J AA	1 kohm,1/6W	R376	VRD-MN2BD102J	J AA	1 kohm,1/8W
R38	VRD-ST2CD271J	J AA	270 ohms,1/6W	R377	VRD-MN2BD473J	J AA	47 kohms,1/8W
R39	VRD-ST2CD471J	J AA	470 ohms,1/6W	R378	VRD-MN2BD102J	J AA	1 kohm,1/8W
R40	VRS-TV2AB122J	J AA	1.2 kohms,1/10W	R379	VRD-MN2BD222J	J AA	2.2 kohms,1/8W
R42	VRS-TV2AB124J	J AA	120 kohms,1/10W	R380	VRD-MN2BD152J	J AA	1.5 kohms,1/8W
R43	VRS-TV2AB224J	J AA	220 kohms,1/10W	R381	VRD-MN2BD103J	J AA	10 kohm,1/8W
R44	VRD-ST2CD102J	J AA	1 kohm,1/6W	R382	VRD-ST2EE151J	J AA	150 ohms,1/4W
R45	VRS-TV2AB122J	J AA	1.2 kohms,1/10W	R383	VRD-MN2BD562J	J AA	5.6 kohms,1/8W
R46	VRS-TV2AB102J	J AA	1 kohm,1/10W	R384	VRD-ST2CD562J	J AA	5.6 kohms,1/6W
R47	VRD-ST2EE3R3J	J AA	3.3 ohms,1/4W	R385	VRD-MN2BD562J	J AA	5.6 kohms,1/8W
R48	VRS-TV2AB682J	J AA	6.8 kohms,1/10W	R386	VRD-ST2CD223J	J AA	22 kohms,1/6W
R50	VRS-TV2AB470J	J AA	47 ohms,1/10W	R387	VRD-ST2CD562J	J AA	5.6 kohms,1/6W
R51-54	VRS-TV2AB683J	J AA	68 kohms,1/10W	R388	VRD-MN2BD392J	J AA	3.9 kohms,1/8W
R55,56	VRD-ST2CD683J	J AA	68 kohms,1/6W	R391,392	VRD-ST2EE271J	J AA	270 ohms,1/4W
R58	VRD-ST2CD221J	J AA	220 ohms,1/6W	R393	VRD-MN2BD102J	J AA	1 kohm,1/8W
R67,68	VRD-ST2CD102J	J AA	1 kohm,1/6W	R395	VRD-MN2BD473J	J AA	47 kohms,1/8W
R71-78	VRD-ST2CD102J	J AA	1 kohm,1/6W	R401,402	VRD-MN2BD331J	J AA	330 ohms,1/8W
R79	VRS-TV2AB155J	J AA	1.5 Mohms,1/10W	R403,404	VRD-MN2BD272J	J AA	2.7 kohms,1/8W
R80	VRD-ST2CD105J	J AA	1 Mohm,1/6W	R407	VRD-MN2BD222J	J AA	2.2 kohms,1/8W
R81,82	VRS-TV2AB222J	J AA	2.2 kohms,1/10W	R408	VRD-ST2CD222J	J AA	2.2 kohms,1/6W
R83,84	VRS-TV2AB103J	J AA	10 kohm,1/10W	R409,410	VRD-ST2CD103J	J AA	10 kohm,1/6W
R88	VRS-TV2AB682J	J AA	6.8 kohms,1/10W	R415,416	VRD-MN2BD392J	J AA	3.9 kohms,1/8W
R94,95	VRS-TV2AB103J	J AA	10 kohm,1/10W	R417,418	VRD-MN2BD332J	J AA	3.3 kohms,1/8W
R101,102	VRD-MN2BD103J	J AA	10 kohm,1/8W	R419,420	VRD-MN2BD562J	J AA	5.6 kohms,1/8W
R103	VRD-MN2BD472J	J AA	4.7 kohms,1/8W	R421,422	VRD-MN2BD273J	J AA	2.7 kohms,1/8W
R104,105	VRD-MN2BD102J	J AA	1 kohm,1/8W	R423,424	VRD-ST2CD474J	J AA	470 kohms,1/6W
R106,107	VRD-MN2BD222J	J AA	2.2 kohms,1/8W	R425	VRD-MN2BD223J	J AA	22 kohms,1/8W
R108,109	VRD-MN2BD332J	J AA	3.3 kohms,1/8W	R601	VRD-ST2CD102J	J AA	1 kohm,1/6W
R110	VRD-MN2BD473J	J AA	47 kohms,1/8W	R602	VRD-MN2BD104J	J AA	100 kohm,1/8W
R111,112	VRD-MN2BD472J	J AA	4.7 kohms,1/8W	R603	VRD-MN2BD103J	J AA	10 kohm,1/8W
R113	VRD-MN2BD473J	J AA	47 kohms,1/8W	R604	VRD-ST2CD123J	J AA	12 kohms,1/6W
R114,115	VRD-ST2CD102J	J AA	1 kohm,1/6W	R605	VRD-MN2BD563J	J AA	56 kohms,1/8W
R116,117	VRD-ST2CD560J	J AA	56 ohms,1/6W	R606	VRD-ST2CD102J	J AA	1 kohm,1/6W
R118,119	VRD-MN2BD104J	J AA	100 kohm,1/8W	R607	VRD-MN2BD333J	J AA	33 kohms,1/8W
R120,121	VRD-MN2BD392J	J AA	3.9 kohms,1/8W	R608	VRD-MN2BD683J	J AA	68 kohms,1/8W
R122,123	VRD-MN2BD562J	J AA	5.6 kohms,1/8W	R609	VRD-MN2BD474J	J AA	470 kohms,1/8W
R124,125	VRD-MN2BD333J	J AA	33 kohms,1/8W	R610	VRD-MN2BD153J	J AA	15 kohms,1/8W
R126	VRD-MN2BD683J	J AA	68 kohms,1/8W	R611	VRD-MN2BD104J	J AA	100 kohm,1/8W
R127,128	VRD-MN2BD682J	J AA	6.8 kohms,1/8W	R612	VRD-ST2CD105J	J AA	1 Mohm,1/6W
R129,130	VRD-MN2BD392J	J AA	3.9 kohms,1/8W	R613	VRD-MN2BD824J	J AA	820 kohms,1/8W
R131,132	VRD-MN2BD152J	J AA	1.5 kohms,1/8W	R614	VRD-ST2CD394J	J AA	390 kohms,1/6W
R133,134	VRD-MN2BD101J	J AA	100 ohm,1/8W	R615	VRD-MN2BD154J	J AA	150 kohms,1/8W
R135,136	VRD-MN2BD103J	J AA	10 kohm,1/8W	R616	VRD-ST2CD102J	J AA	1 kohm,1/6W
R137	VRD-MN2BD153J	J AA	15 kohms,1/8W	R617	VRD-ST2CD224J	J AA	220 kohms,1/6W
R138	VRD-ST2CD153J	J AA	15 kohms,1/6W	R618	VRD-MN2BD224J	J AA	220 kohms,1/8W
R139	VRD-ST2EE221J	J AA	220 ohms,1/4W	R619	VRD-ST2CD225J	J AA	2.2 Mohms,1/6W
R140	VRD-ST2CD103J	J AA	10 kohm,1/6W	R620	VRD-MN2BD184J	J AA	180 kohms,1/8W
R141	VRD-MN2BD103J	J AA	10 kohm,1/8W	R621	VRD-MN2BD330J	J AA	33 ohms,1/8W
R142,143	VRD-ST2CD224J	J AA	220 kohms,1/6W	R622	VRD-MN2BD104J	J AA	100 kohm,1/8W
R144	VRD-MN2BD473J	J AA	47 kohms,1/8W	R623,624	VRD-ST2EE271J	J AA	270 ohms,1/4W
R145	VRD-ST2CD472J	J AA	4.7 kohms,1/6W	R625-627	VRD-MN2BD104J	J AA	100 kohm,1/8W
R146	VRD-RT2HD820J	J AA	82 ohms,1/2W	R629,630	VRD-ST2CD103J	J AA	10 kohm,1/6W
R147	VRD-MN2BD473J	J AA	47 kohms,1/8W	R632-635	VRD-ST2CD103J	J AA	10 kohm,1/6W
R148	VRD-MN2BD223J	J AA	22 kohms,1/8W	R636	VRD-MN2BD683J	J AA	68 kohms,1/8W
R149	VRD-ST2CD4R7J	J AA	4.7 ohms,1/6W	R637	VRD-MN2BD102J	J AA	1 kohm,1/8W
R157	VRD-ST2EE151J	J AA	150 ohms,1/4W	R638	VRD-MN2BD473J	J AA	47 kohms,1/8W
R302	VRD-MN2BD100J	J AA	10 ohm,1/8W	R642	VRD-MN2BD223J	J AA	22 kohms,1/8W
R309	VRD-ST2CD103J	J AA	10 kohm,1/6W	R643,644	VRD-MN2BD102J	J AA	1 kohm,1/8W
R311	VRD-MN2BD104J	J AA	100 kohm,1/8W	R645	VRD-MN2BD223J	J AA	22 kohms,1/8W
R313	VRD-MN2BD333J	J AA	33 kohms,1/8W	R646-648	VRD-MN2BD102J	J AA	1 kohm,1/8W
R314	VRD-ST2CD220J	J AA	22 ohms,1/6W	R649	VRD-MN2BD103J	J AA	10 kohm,1/8W
R316	VRD-MN2BD472J	J AA	4.7 kohms,1/8W	R650	VRD-ST2CD683J	J AA	68 kohms,1/6W
R322	VRD-MN2BD681J	J AA	680 ohms,1/8W	R651,652	VRD-MN2BD103J	J AA	10 kohm,1/8W
R323	VRD-MN2BD683J	J AA	68 kohms,1/8W	R653	VRD-MN2BD102J	J AA	1 kohm,1/8W
R325	VRD-MN2BD473J	J AA	47 kohms,1/8W	R654	VRD-ST2CD102J	J AA	1 kohm,1/6W
R327	VRD-MN2BD330J	J AA	33 ohms,1/8W	R655	VRD-MN2BD102J	J AA	1 kohm,1/8W
R336	VRD-MN2BD103J	J AA	10 kohm,1/8W	R656	VRD-ST2CD103J	J AA	10 kohm,1/6W
R350	VRD-ST2CD272J	J AA	2.7 kohms,1/6W	R658	VRD-MN2BD473J	J AA	47 kohms,1/8W
R351	VRD-MN2BD562J	J AA	5.6 kohms,1/8W	R659	VRD-MN2BD102J	J AA	1 kohm,1/8W

CD-BP160W/180W/1500W/1700W

NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION	NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION
R660	VRD-MN2BD103J	J AA	10 kohm,1/8W	CNP702	QCNCWZF25AWZZ	J AE	Socket,25Pin
R661	VRD-ST2CD222J	J AA	2.2 kohms,1/6W	CNP703	QCNCWZF13AWZZ	J	Plug,13Pin
R662	VRD-MN2BD103J	J AA	10 kohm,1/8W	△CNP801	QCNCM049EAWZZ	J AD	Plug,5Pin
R663-665	VRD-ST2CD222J	J AA	2.2 kohms,1/6W	CNP802	QCNCM035HAWZZ	J AB	Plug,8Pin
R666	VRD-MN2BD102J	J AA	1 kohm,1/8W	CNP951	QCNCW012EAWZZ	J AC	Plug,5Pin
R667,668	VRD-ST2CD102J	J AA	1 kohm,1/6W	CNP971	92LCONE2P53253	J AB	Plug,2Pin
R669,670	VRD-ST2CD103J	J AA	10 kohm,1/6W	CNS1A/B	QCNCWN1537AWZZ	J AG	Connector Ass'y,7/7Pin
R671	VRD-MN2BD103J	J AA	10 kohm,1/8W	CNS2A/B	QCNCWN1538AWZZ	J AG	Connector Ass'y,8/8Pin
R672	VRD-ST2CD103J	J AA	10 kohm,1/6W	CNS3A/B	QCNCWN1539AWZZ	J AE	Connector Ass'y,6/6Pin
R673-675	VRD-ST2CD102J	J AA	1 kohm,1/6W	CNS971	QCNCWN1389AWZZ	J AC	Connector Ass'y,2Pin
R676	VRD-ST2CD472J	J AA	4.7 kohms,1/6W	△F801,802	92LFUSET402E	J AD	Fuse,T4 L 250V
R677-694	VRD-ST2CD102J	J AA	1 kohm,1/6W	△F803	92LFUSET202E	J	Fuse,T2A L 250V
R695-697	VRD-ST2CD681J	J AA	680 ohms,1/6W	FC701	QCNCWN1568AWZZ	J	Flat Cable,25Pin
R698-700	VRD-ST2CD821J	J AA	820 ohms,1/6W	FC702	QCNCWN1544AWZZ	J AE	Flat Cable,13Pin
R701-703	VRD-ST2CD102J	J AA	1 kohm,1/6W	FL701	VVKB749GNK-1	J BD	FL Display
R704	VRD-MN2BD473J	J AA	47 kohms,1/8W	FW951	QCNCWN1563AWZZ	J	Connector Ass'y,5Pin
R705,706	VRD-ST2CD152J	J AA	1.5 kohms,1/6W	JK951	QJAKM0004AWZZ	J AK	Jack,Headphones
R707	VRD-MN2BD152J	J AA	1.5 kohms,1/8W	M1	92LMMTR1651B	J	Motor with Chassis [Spindle]
R708	VRD-ST2CD103J	J AA	10 kohm,1/6W	M2	92LMMTR1854A	J AP	Motor with Gear [Sled]
R709,710	VRD-ST2CD222J	J AA	2.2 kohms,1/6W	M3	92LTWMEN7E6Y	J AR	Motor with Worm Pulley
R711	VRD-MN2BD104J	J AA	100 kohm,1/8W	M901	RMOTV0027AWZZ	J AM	Motor,Air Cooling Fan
R712,713	VRD-ST2CD272J	J AA	2.7 kohms,1/6W	RL951	RRLYD0014AWZZ	J AK	Relay
R714	VRD-MN2BD392J	J AA	3.9 kohms,1/8W	RX701	VHLN63H380A-1	J AK	Remote Sensor,N63H380A
R715	VRD-ST2CD392J	J AA	3.9 kohms,1/6W	SO302	QTANC0206AWZZ	J	FM Terminal
R716	VRD-ST2CD472J	J AA	4.7 kohms,1/6W	SO401	QSOCJ0219AWZZ	J AD	Jack,Video/AUX
R717	VRD-MN2BD683J	J AA	68 kohms,1/8W	△SO801	QSOC0204AWZZ	J AF	Socket,AC Input
R718	VRD-MN2BD562J	J AA	5.6 kohms,1/8W	SO901	QTANA0417AWZZ	J AE	Terminal,Speaker [160W/1500W]
R719	VRD-ST2CD103J	J AA	10 kohm,1/6W	SO901	QTANA0808AWZZ	J	Terminal,Speaker [180W/1700W]
R720	VRD-MN2BD104J	J AA	100 kohm,1/8W	SW1	SWMPU10780MLB	J	Switch,Push Type [Open/Close]
R721	VRD-ST2CD183J	J AA	18 kohms,1/6W	SW2	SWMPU11470MLB	J	Switch,Push Type [Clamp]
R722	VRD-ST2CD333J	J AA	33 kohms,1/6W	SW3	SWMPU11470MLB	J	Switch,Push Type [Disc Number]
R723	VRD-ST2CD101J	J AA	100 ohm,1/6W	SW4	QSW-F9001AW01	J AD	Switch,Leaf Type [Pickup In]
R724	VRD-ST2CD104J	J AA	100 kohm,1/6W	SW401	QSW-S0024AWZZ	J AE	Switch,Slide Type [SPAN SELECTOR]
R725	VRD-ST2CD103J	J AA	10 kohm,1/6W	SW601	92LSWICH1401AT	J AC	Switch,Key Type [ON/STAND-BY]
R726	VRD-ST2CD184J	J AA	180 kohms,1/6W	SW602	92LSWICH1401AT	J AC	Switch,Key Type [CLOCK]
R801,802	VRD-ST2EE223J	J AA	22 kohms,1/4W	SW603	92LSWICH1401AT	J AC	Switch,Key Type [TIMER/SLEEP]
R803	VRS-VV3DA681J	J AC	680 ohms,2W	SW609	92LSWICH1401AT	J AC	Switch,Key Type [DISC SKIP]
R804	VRD-ST2CD222J	J AA	2.2 kohms,1/6W	SW610	92LSWICH1401AT	J AC	Switch,Key Type [OPEN/CLOSE]
R805	VRD-ST2CD473J	J AA	47 kohms,1/6W	SW611	92LSWICH1401AT	J AC	Switch,Key Type [DIMMER]
R806	VRD-ST2CD100J	J AA	10 ohm,1/6W	SW612	92LSWICH1401AT	J AC	Switch,Key Type [X-BASS/DEMO]
R807	VRD-ST2CD123J	J AA	12 kohms,1/6W	SW613	92LSWICH1401AT	J AC	Switch,Key Type [EQUALIZER]
R831	VRD-RT2HD3R3J	J AA	3.3 ohms,1/2W	SW614	92LSWICH1401AT	J AC	Switch,Key Type [VOLUME UP]
R832	VRD-RT2HD330J	J AA	33 ohms,1/2W	SW615	92LSWICH1401AT	J AC	Switch,Key Type [VOLUME DOWN]
R833	VRD-ST2CD223J	J AA	22 kohms,1/6W	SW616	92LSWICH1401AT	J AC	Switch,Key Type [CD]
R841	VRD-ST2CD223J	J AA	22 kohms,1/6W	SW617	92LSWICH1401AT	J AC	Switch,Key Type [TAPE]
R851	VRD-ST2CD103J	J AA	10 kohm,1/6W	SW618	92LSWICH1401AT	J AC	Switch,Key Type [TUNING/TIME DOWN]
R901,902	VRD-ST2CD563J	J AA	56 kohms,1/6W	SW619	92LSWICH1401AT	J AC	Switch,Key Type [MEMORY/SET]
R903,904	VRD-ST2CD821J	J AA	820 ohms,1/6W	SW620	92LSWICH1401AT	J AC	Switch,Key Type [REWIND]
R905,906	VRD-ST2CD102J	J AA	1 kohm,1/6W	SW621	92LSWICH1401AT	J AC	Switch,Key Type [FAST FORWARD]
R907,908	VRN-VV3AAR10J	J	0.1 ohm,1W	SW622	92LSWICH1401AT	J AC	Switch,Key Type [PLAY/REPEAT]
R909,910	VRD-ST2CD102J	J AA	1 kohm,1/6W	SW623	92LSWICH1401AT	J AC	Switch,Key Type [STOP]
R911,912	VRD-ST2CD103J	J AA	10 kohm,1/6W	SW624	92LSWICH1401AT	J AC	Switch,Key Type [REVERSE PLAY]
R913-915	VRD-ST2CD563J	J AA	56 kohms,1/6W	SW625	92LSWICH1401AT	J AC	Switch,Key Type [REC/PAUSE]
R916,917	VRD-ST2EE4R7J	J AA	4.7 ohms,1/4W	SW626	92LSWICH1401AT	J AC	Switch,Key Type [TUNING/TIME UP]
△R918,919	VRG-ST2EC101J	J AB	100 ohm,1/4W,Fusible	SW627	92LSWICH1401AT	J AC	Switch,Key Type [VIDEO/AUX]
R920	VRD-ST2CD223J	J AA	22 kohms,1/6W	SW628	92LSWICH1401AT	J AC	Switch,Key Type [TUNER (BAND)]
R931,932	VRD-MN2BD102J	J AA	1 kohm,1/8W	SW629	92LSWICH1401AT	J AC	Switch,Key Type [REVERSE]
R933,934	VRD-ST2CD683J	J AA	68 kohms,1/6W	SW801	QSOCE0005AWZZ	J AH	Switch,Slide Type [Voltage Selector]
R951,952	VRD-RT2HD331J	J AA	330 ohms,1/2W				
R953,954	VRD-ST2CD472J	J AA	4.7 kohms,1/6W				
R971	VRD-ST2CD102J	J AA	1 kohm,1/6W				
R972	VRD-ST2CD683J	J AA	68 kohms,1/6W				
R973	VRD-ST2CD153J	J AA	15 kohms,1/6W				
R975	VRD-RT2HD1R5J	J AB	1.5 ohms,1/2W				

OTHER CIRCUITRY PARTS

BF301	RFILR0008AWZZ	J AE	Band Pass Filter
BI4/CNS4	QCNCWN1572AWZZ	J AF	Connector Ass'y,6/6Pin
BI102/CNS102	QCNCWN1569AWZZ	J	Connector Ass'y,7/6Pin
BI402/CNP402	QCNCWN1561AWZZ	J AF	Connector Ass'y,5/5Pin
BI701/CNS701	QCNCWN1562AWZZ	J AH	Connector Ass'y,10/10Pin
CNP1	QCNCM704GAWZZ	J AC	Plug,7Pin
CNP2	QCNCM704HAWZZ	J AC	Plug,8Pin
CNP3	92LCONE6P53253	J AC	Plug,6Pin
CNP3A	92LCONE6P53254	J AC	Plug,6Pin
CNP4	QCNCM705FAFZZ	J AB	Plug,6Pin
CNP11	92LCONE5P53254	J AB	Plug,5Pin
CNP12	92LCONEAP53254	J AD	Plug,10Pin
CNP101	QCNCM705CAFZZ	J AA	Plug,3Pin
CNP302	92LCONE2P5268	J AB	Plug,2Pin
CNP401	QCNCWZG25AWZZ	J AE	Socket,25Pin

MECHANICAL PARTS

301	NGERH0011AWZZ	J AC	Gear,Middle
302	NGERH0012AWZZ	J AC	Gear,Drive
303	MLEVP0080AWZZ	J AC	Rail,Guide
304	NSFTM0020AWFW	J AD	Shaft,Guide
305	92LMCUSN1524A	J AD	Cushion

CD-BP160W/180W/1500W/1700W

NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION
△ 306	92LHPC1LXASY	J BD	Pickup Unit Ass'y
306-1	—	—	Pickup Unit (Not Replacement Item)
306-2	NGERR0043AFZZ	J AC	Gear,Rack
306-3	MSPRC0961AFZZ	J AA	Spring,Rack
701	XBSSD26P06000	J AA	Screw,ø2.6×6mm
702	XHBSD20P05000	J AA	Screw,ø2×5mm
703	XBSSD20P03000	J AA	Screw,ø2×3mm
704	LX-WZ1070AFZZ	J AA	Washer,ø1.5×ø3.8×0.25mm
M1	92LMMTR1651B	J	Motor with Chassis [Spindle]
M2	92LMMTR1854A	J AP	Motor with Gear [Sled]
SW4	QSW-F9001AW01	J AD	Switch,Leaf Type [Pickup In]

CABINET PARTS

201	92LCAB3285AASY	J	Front Cabinet Ass'y [1500W]
201	92LCAB3290AASY	J	Front Cabinet Ass'y [160W]
201	92LCAB3293AASY	J	Front Panel Ass'y [1700W]
201	92LCAB3295AASY	J	Front Panel Ass'y [180W]
201-1	—	—	Front Panel (Not Replacement Item)
201-2	GDORF0074AWSA	J AE	Cassette Holder,Tape 1
201-3	GDORF0075AWSA	J AE	Cassette Holder,Tape 2
201-4	GCOVA1251AWSA	J AH	Cassette Cover,Tape 1
201-5	GCOVA1298AWSA	J AE	Cassette Cover,Tape 2
201-6	HDECQ0521AWSA	J AD	Panel,Cassette,Tape 1
201-7	HDECQ0522AWSA	J AD	Panel,Cassette,Tape 2
201-8	HDECQ0549AWSA	J	Panel,Amp [1500W]
201-8	HDECQ0563AWSA	J	Panel,Amp [1700W]
201-8	HDECQ0575AWSA	J	Panel,Amp [180W]
201-8	HDECQ0576AWSA	J	Panel,Amp [160W]
201-9	PSHEM0008AWZZ	J	Sheet,Front Panel
201-10	JKNBZ0649AWSA	J AF	Button,Volume Up/Down
201-11	JKNBZ0679AWSA	J AG	Button,Center Operation
201-12	JKNBZ0714AWSA	J AF	Button,ON/Stand-by/Clock
201-13	JKNBZ0658AWSA	J AF	Button,CD/Tuner (BAND)
201-14	JKNBZ0659AWSA	J AF	Button,Tape/Video/Aux
201-15	JKNBZ0660AWSA	J AF	Button,Tuning/Time
201-16	JKNBZ0661AWSA	J AE	Button,Dimmer
201-20	GCOVA1258AWSA	J AB	Cover,LED
201-21	MLIFP0008AWZZ	J AD	Damper
201-22	MSPRD0138AWFJ	J	Cassette Spring,Tape 1
201-23	MSPRD0127AWFJ	J AB	Cassette Spring,Tape 2
201-24	92LBADGE1671A	J AC	Badge,SHARP
201-25	JKNBZ0650AWSA	J AF	Button,Disc Skip/X-BASS
202	92LCAB3283BASY	J AM	Side Panel Ass'y,Left
202-1	—	—	Side Panel,Left (Not Replacement Item)
202-2	PCUSG0022AWZZ	J AB	Cushion,Leg
203	92LCAB3283CASY	J AM	Side Panel Ass'y,Right
203-1	—	—	Side Panel,Right (Not Replacement Item)
203-2	PCUSG0022AWZZ	J AB	Cushion,Leg
204	92LCOV3303AASY	J AM	CD Tray Cover Ass'y
204-1	—	—	Cover,CD Tray (Not Replacement Item)
204-2	GCOVA1254AWSA	J AE	Cover,CD Tray Panel,Left
204-3	GCOVA1255AWSA	J AE	Cover,CD Tray Panel,Right
205	GCAB-1184AWSA	J AP	Top Cabinet
206	GITAR0562AWSA	J	Rear Panel [1500W]
206	GITAR0563AWSA	J	Rear Panel [1700W]
206	GITAR0582AWSA	J	Rear Panel [180W]
206	GITAR0583AWSA	J	Rear Panel [160W]
208	LANGK0110AWFW	J AE	Bracket,Cassette Lock,Tape 1
209	LANGK0111AWFW	J AE	Bracket,Cassette Lock,Tape 2
210	LANGK0192AWFW	J AD	Bracket,Fan Support
212	LANGK0207AWFW	J	Bracket,Power Transformer Support
213	LCHSM0094AWFW	J AP	Main Chassis
214	LHLDZ1241AWZZ	J AE	Holder,FL Display
219	MLOKC0003AWZZ	J AD	Lock Lever,Cassette,Tape 1
220	MLOKC0004AWZZ	J AD	Lock Lever,Cassette,Tape 2
221	MSPRD0109AWFJ	J AB	Spring,Cassette Lock,Tape 1
222	MSPRD0110AWFJ	J AB	Spring,Cassette Lock,Tape 2
223	NFANP0001AWZZ	J AD	Rotary Fan
224	92LPT0331105	J AM	Turntable
225	PCUSG0022AWZZ	J AB	Cushion,Leg
226	PRDAR0148AWFW	J AR	Heat Sink,Main
230	QCNWN1615AWZZ	J AC	Lug Wire
△ 231	QFSHD0001AWZZ	J AB	Holder,Fuse
232	92LBE241414	J AD	Belt,Drive
233	92LCSPR1431C	J AA	Spring,Ring

NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION
234	92LEVA0330702	J	Cushion,CD Player Unit
235	92LMAG0104302	J	Magnet
236	92LMT0304302	J	Plate,Metal
237	92LNBAND1318A	J AA	Nylon Band,80mm
238	92LNM0305401	J	Velvet Cushion
239	92LPT0303002	J AB	Roller
240	92LPT0304303	J AB	Lever,Stop
241	92LPT0304304	J	Stopper,Cam Gear
242	92LPT0304305	J AE	Lever,Lock
243	92LPT0304306	J	Stabilizer
244	92LPT0304307	J AC	Support,Cam
245	92LPT0304308	J	Lock Gear Pin
246	92LPT0304309	J	Cap,Pulley Stopper
247	92LPT0305413	J	Cam Gear Lower
248	92LPT0309506	J AD	Gear,Turntable Drive
249	92LPT0309507	J AD	Gear,Open/Close Drive
250	92LPT0309508	J AD	Gear,Planet
251	92LPT0309509	J AD	Gear,Drive
252	92LPT0309510	J AE	Gear,Pulley
253	92LPT0309511	J AD	Gear,Middle
254	92LPT0311101	J AB	Lever,Clamp
255	92LPT0311102	J AC	Lever,Disc
256	92LPT0312005	J	Gear,Cam
257	92LPT0320201	J AE	Support,Stabilizer
258	92LPT0330301	J AU	Chassis,CD Player Unit
259	92LPT0330803	J AK	CD,Chassis
260	92LPT0331003	J AT	Chassis,Disc Tray
262	92LSP0304303	J	Spring,Stopper
263	92LSP0304305	J AB	Spring,Lock
264	92LSP0304306	J	Spring,Lock Gear
267	LANGK0184AWFW	J AG	Bracket,Tuner PWB
268	KMECB0013AWZZ	J BK	Tape Mechanism Ass'y
274	92LCAUT1706A1	J AC	Label,Class 3A Laser
275	92LCAUT1706B	J AA	Label,Laser
276	PSHEZ0067AWZZ	J	Sheet,PWB Support
280	92LRDAT1468B	J	Heat Sink, Sub
281	QLUGP0002AWZZ	J AB	Lug
282	QLUGP0001AWZZ	J AC	Lug
601	XBSSD20P04000	J AA	Screw,ø2×4mm
602	XJBSF30P12000	J AA	Screw,ø3×12mm
604	LX-JZ0004AWFD	J AA	Screw,ø3×12mm
605	XESSD30P10000	J AA	Screw,ø3×10mm
606	XHBSD26P04000	J AA	Screw,ø2.6×4mm
607	XJBSD30P12000	J AA	Screw,ø3×12mm
608	XJBSD30P10000	J AA	Screw,ø3×10mm
609	XJBSD30P14000	J AA	Screw,ø3×14mm
611	XJSSD30P10000	J AA	Screw,ø3×10mm
612	LX-HZ0009AWFD	J AC	Screw,Special
613	LX-HZ0169AFFD	J AA	Screw,ø4×12mm
614	LX-JZ0010AFFD	J AA	Screw,ø3×10mm
615	XEBSD30P10000	J AA	Screw,ø3×10mm
616	LX-BZ2222AXZZ	J	Screw,Special
618	92LSC0308MBZI	J AB	Screw,ø3×8mm
619	92LSC0308RBZI	J	Screw,ø3×8mm

ACCESSORIES/PACKING PARTS

△	92LCORDZ1652A	J AM	AC Power Supply Cord [For Taiwan]
△	92LCORD577B	J AM	AC Power Supply Cord [For Central America]
△	QACCB0008AW00	J AW	AC Power Supply Cord [For Hong Kong]
△	QACCE0011AW00	J AM	AC Power Supply Cord [Except for Hong Kong/Taiwan/ Australia/New Zealand/Central America/Argentina]
△	QACCL0002AW00	J AN	AC Power Supply Cord [1500W/160W for Australia/ New Zealand]
△	QACCZ0008AW00	J	AC Power Supply Cord [1500W for Argentina]
△	QANTL0008AWZZ	J AH	AM Loop Antenna
△	QPLGA0003AWZZ	J AF	Adaptor,AC Plug
△	QPLGA0004AWZZ	J AF	Adaptor,AC Plug [For Brasil/Central/Sou]
	SPAKA0235AWZZ	J	Packing Add.,Left/Right [1500W]
	SPAKA0245AWZZ	J	Packing Add.,Left/Right [160W/180W/1700W]
	SPAKC0960AWZZ	J	Packing Case [1500W Except for Australia]
	SPAKC0961AWZZ	J	Packing Case [1500W for Australia]

CD-BP160W/180W/1500W/1700W

NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION	NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION
	SPAKC0962AWZZ	J	Packing Case [1700W Except for Australia/ New Zealand]		TLABE0384AWZZ	J	Label,Bar Code [1500W Except for Asia/Middle and Near East/Africa]
	SPAKC0990AWZZ	J	Packing Case [180W Except for Australia/New Zealand]		TLABE0385AWZZ	J	Label,Bar Code [1700W for Asia/Middle and Near East/Africa]
	SPAKC0992AWZZ	J	Packing Case [160W for Australia]		TLABE0386AWZZ	J	Label,Bar Code [180W for Asia/Middle and Near East/Africa]
	SPAKC0993AWZZ	J	Packing Case [180W Except for Australia]		TLABE0390AWZZ	J	Label,Bar Code [160W for Asia/Middle and Near East/Africa]
	SPAKC1020AWZZ	J	Packing Case [1700W for Australia/New Zealand]		TLABG0002AWZZ	J AB	Label,Hong Kong
	SPAKC1021AWZZ	J	Packing Case [180W for Australia/New Zealand]		TLABG0006AWZZ	J AB	Label,Carto [1500W for Argentina]
	SPAKP0013AWZZ	J AC	Polyethylene Bag,Unit		TLABG0007AWZZ	J AC	Label,Set [1500W for Argentina]
	SPAKZ0573AWZZ	J	Sheet,CD Tray		TLABH0056AWSA	J AF	Sheet,E/C Comparison
	SPAKZ0611AWZZ	J	Pad,Surround Speaker [1700W]		TLABH0057AWSA	J AF	Sheet,E/C Comparison
	SPAKZ0623AWZZ	J	Pad,Surround Speaker [180W]		TLABH0058AWSA	J AF	Sheet,E/C Comparison
	TCAUA0042AWZZ	J	Caution Tag [Taiwan]		TLABR1093AWZZ	J	Label,Bar Code [1500W the Middle South America]
	TGANE0011AW31	J	Warranty Card [1500W for Philippines]		TLABS0247AWZZ	J	Label,Safety [For Hong Kong]
	TGANE0011AW32	J	Warranty Card [1700W for Philippines]		TLABZ0691AWZZ	J	Feature Label,Tape 2 [1500W]
	TGANE0011AW35	J	Warranty Card [160W for Philippines]		TLABZ0692AWZZ	J	Feature Label,Tape 1 [Except for Australia/New Zealand/Turkey]
	TGANE0011AW38	J	Warranty Card [180W for Philippines]		TLABZ0693AWZZ	J	Feature Label,Tape 1 [For Australia/New Zealand/ Turkey]
	TGANE0028AW35	J	Warranty Card [1700W for Taiwan]		TLABZ0694AWZZ	J	Label,Carton [1500W for Taiwan]
	TGANE0028AW42	J	Warranty Card [180W for Taiwan]		TLABZ0697AWZZ	J	Feature Label,Tape 2 [1700W/180W]
	TGANZ0028AW37	J	Warranty Card [1500W for Taiwan]		TLABZ0698AWZZ	J	Label,Carton [1700W for Taiwan]
	TGANZ0028AW39	J	Warranty Card [160W for Taiwan]		TLABZ0730AWZZ	J	Label,Carton [180W for Taiwan]
	TINST0064AWZZ	J	Operation Manual [1500W for Thailand]		TLABZ0738AWZZ	J	Label,Carton [160W for Taiwan]
	TINST0065AWZZ	J	Operation Manual [1700W for Thailand]		TLABZ0794AWZZ	J	Label,Carton [1500W for Turkey]
	TINST0069AWZZ	J	Operation Manual [180W for Thailand]		TLSTS0014AWZZ	J AB	List,Service Station
	TINST0070AWZZ	J	Operation Manual [160W for Thailand]		TMAPC0169AWZZ	J	MAP [160W/1500W]
	TINSZ0528AWZZ	J	Operation Manual [1500W Except for Thailand/ Australia/New Zealand]		TMAPC0170AWZZ	J	MAP [180W/1700W]
	TINSZ0529AWZZ	J AE	Operation Manual [1500W for Australia/New Zealand]		TSPC-0653AWZZ	J	Label,Specification [1500W for Taiwan]
	TINSZ0530AWZZ	J	Operation Manual [1700W Except for Thailand/ Australia/New Zealand]		TSPC-0654AWZZ	J	Label,Specification [1500W for Thailand]
	TINSZ0549AWZZ	J	Operation Manual [180W Except for Thailand/ Australia/New Zealand]		TSPC-0655AWZZ	J	Label,Specification [1500W Except for Taiwan/ Thailand]
	TINSZ0551AWZZ	J	Operation Manual [160W Except for Thailand/ Australia/New Zealand]		TSPC-0656AWZZ	J	Label,Specification [1700W for Taiwan]
	TINSZ0552AWZZ	J	Operation Manual [160W for Australia/New Zealand]		TSPC-0657AWZZ	J	Label,Specification [1700W for Thailand]
	TINSZ0560AWZZ	J AF	Operation Manual [1700W for Australia/New Zealand]		TSPC-0658AWZZ	J	Label,Specification [1700W Except for Taiwan/ Thailand]
	TINSZ0561AWZZ	J	Operation Manual [180W for Australia/New Zealand]		TSPC-0694AWZZ	J	Label,Specification [180W for Thailand]
	TLABE0368AWZZ	J	Label,Bar Code [1500W for Asia/Middle and Near East/Africa]		TSPC-0695AWZZ	J	Label,Specification [180W for Taiwan]
	TLABE0374AWZZ	J	Label,Bar Code [160W for Asia/Middle and Near East/Africa]		TSPC-0696AWZZ	J	Label,Specification [160W for Taiwan]
	TLABE0380AWZZ	J	Label,Bar Code [1700W Except for Asia/Middle and Near East/Africa]		TSPC-0697AWZZ	J	Label,Specification [160W for Thailand]
	TLABE0381AWZZ	J	Label,Bar Code [180W Except for Asia/Middle and Near East/Africa]		TSPC-0698AWZZ	J	Label,Specification [160W Except for Taiwan/ Thailand]
					TSPC-0716AWZZ	J	Label,Specification [180W Except for Taiwan/ Thailand]
					TTAG-0004AWZZ	J	Cord Tag [1500W for Argentina]
					92LBAG1460C1	J AB	Polyethylene Bag,Operation Manual
					92LBAG1770A	J AB	Polyethylene Bag,AC Power Supply Cord
					92LBAG760C	J AA	Polyethylene Bag,AC Plug Adaptor
					92LFANT1746A	J AD	FM Antenna
					92LGCARD1266E1	J AC	Guarantee Card
					92LLABL1204C	J AA	Label,Made in Malaysia
					92LLABL1507B	J AA	Packing Case Label,Made in Malaysia
					92L411-0075	J AG	Polyethylene Bag,Speaker
					92L16-01-0002	J AF	Polyethylene Bag,Surround Speaker [180W/1700W Only]

CD-BP160W/180W/1500W/1700W

NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION
	92L412-0133	J AN	Packing Add.,Speaker [180W/1500W]
	92L412-0138	J	Packing Add.,Speaker [1700W]
	92L412-0148	J	Packing Add.,Speaker [160W]
	92L416-0068	J	Packing Add.,Surround Speaker [180W/1700W Only]
	RRMCG0221AWSA	J AR	Remote Control
	GFTAB1022AWSB	J AK	Battery Lid,Remote Control

P.W.B. ASSEMBLY (Not Replacement Item)

PWB-A1-4	92LPWB3285MANS	J —	Main/Display/Headphones/Socket (Combined Ass'y) [1500W/160W]
PWB-A1-4	92LPWB3293MANS	J —	Main/Display/Headphones/Socket (Combined Ass'y) [1700W]
PWB-A1-4	92LPWB3295MANS	J —	Main/Display/Headphones/Socket (Combined Ass'y) [180W]
PWB-B	92LPWB3303CDUS	J —	CD Servo
PWB-C	QPWBF0027AWZZ	J AD	CD Motor (PWB Only)
PWB-D	—	—	Tape Mechanism/Record/Playback/Erase Head
PWB-E	92LPC99C017	J	CD T/T Up/Down Motor (PWB Only)

OTHER SERVICE PART

UDSKA0004AFZZ	J AZ	CD Pickup Lens Cleaner
---------------	------	------------------------

CP-BP160

SPEAKER BOX PARTS (CD-BP160W)

901	92L126-0015	J	Front Panel Ass'y,Left
902	92L126-0016	J	Front Panel Ass'y,Right
903	92L121-0196	J	Net Frame Ass'y
904	92L051-0099	J	Speaker Box Ass'y,Left
905	92L051-0100	J	Speaker Box Ass'y,Right
906	92L291-0079	J AG	Speaker Cord
907	92L394-0056	J AC	Cushion,Foot
908	92L394-0059	J	Cushion,Part
909	92L351-0363	J	Label,Specifications
912	92L319-0027	J AE	Catching Holder
913	92L372-0027	J AC	Screw,ø3×10mm
914	92L372-0124	J AB	Screw,ø4×12mm
915	92L122-0048	J AG	Speaker Cord Ass'y (With Capacitor)
SP1,2	VSPA010WB13WA	J AV	Woofers
SP3,4	VSPA010WB13WA	J AV	Sub Woofers
SP5,6	VSP0051TBN98A	J AQ	Tweeters

CP-BP180

SPEAKER BOX PARTS (CD-BP180W)

901	92L126-0013	J	Front Panel Ass'y,Left
902	92L126-0014	J	Front Panel Ass'y,Right
903	92L121-0178	J AP	Net Frame Ass'y
904	92L051-0087	J	Speaker Box Ass'y,Left
905	92L051-0088	J	Speaker Box Ass'y,Right
906	92L291-0079	J AG	Speaker Cord
907	92L394-0056	J AC	Cushion,Foot
909	92L351-0368	J	Label,Specifications
912	92L319-0027	J AE	Catching Holder
913	92L372-0109	J AB	Screw,ø3×10mm
914	92L372-0124	J	Screw,ø4×12mm
915	92L122-0048	J AG	Speaker Cord Ass'y (With Capacitor)
SP1,2	VSPA010WB29WA	J AW	Woofers
SP3,4	VSPA010WB30WA	J AW	Sub Woofers
SP5,6	VSP0051TBN98A	J AQ	Tweeters

NO.	PARTS CODE	★ PRICE RANK	DESCRIPTION
-----	------------	--------------	-------------

CP-BP1500

SPEAKER BOX PARTS (CD-BP1500W)

901	92L126-0009	J BA	Front Panel Ass'y,Left
902	92L126-0010	J BA	Front Panel Ass'y,Right
903	92L121-0178	J AP	Net Frame Ass'y
904	92L051-0095	J AY	Speaker Box Ass'y,Left
905	92L051-0096	J AY	Speaker Box Ass'y,Right
906	92L291-0079	J AG	Speaker Cord
907	92L394-0056	J AC	Cushion,Foot
908	92L394-0055	J AC	Cushion,Part
909	92L351-0364	J	Label,Specifications
912	92L319-0027	J AE	Catching Holder
913	92L372-0109	J AB	Screw,ø3×10mm
914	92L372-0124	J AB	Screw,ø4×12mm
915	92L122-0048	J AG	Speaker Cord Ass'y (With Capacitor)
SP1,2	VSPA010WB19CA	J AW	Woofers
SP3,4	VSPA010WB20CA	J AW	Sub Woofers
SP5,6	VSP0051TBN46A	J AQ	Tweeters

CP-BP1700

SPEAKER BOX PARTS (CD-BP1700W)

901	92L126-0011	J BA	Front Panel Ass'y,Left
902	92L126-0012	J BA	Front Panel Ass'y,Right
903	92L121-0182	J AP	Net Frame Ass'y
904	92L051-0097	J AY	Speaker Box Ass'y,Left
905	92L051-0098	J AY	Speaker Box Ass'y,Right
906	92L291-0079	J AG	Speaker Cord
907	92L394-0056	J AC	Cushion,Foot
908	92L394-0057	J AC	Cushion,Part
909	92L351-0366	J	Label,Specifications
912	92L319-0027	J AE	Catching Holder
913	92L372-0027	J AC	Screw,ø3×10mm
914	92L372-0124	J AB	Screw,ø4×12mm
915	92L122-0048	J AG	Speaker Cord Ass'y (With Capacitor)
SP1,2	VSPA010WB29WA	J AW	Woofers
SP3,4	VSPA010WB30WA	J AW	Sub Woofers
SP5,6	VSP0051TBN98A	J AQ	Tweeters

GBOXS0041AWM1

SPEAKER BOX PARTS(CD-BP180W/1700W ONLY)

901	92L32-01-0460	J	Bottom Cabinet
902	92L60-00-1190	J	Net Frame Ass'y
903	92L33-01-1430	J	Label,Part Cord
904	92L37-03-0110	J	Speaker Cord
905	92L35-02-0320	J	Screw,ø3×14mm
SP1,2	VSPA010PB23WA	J	Speakers

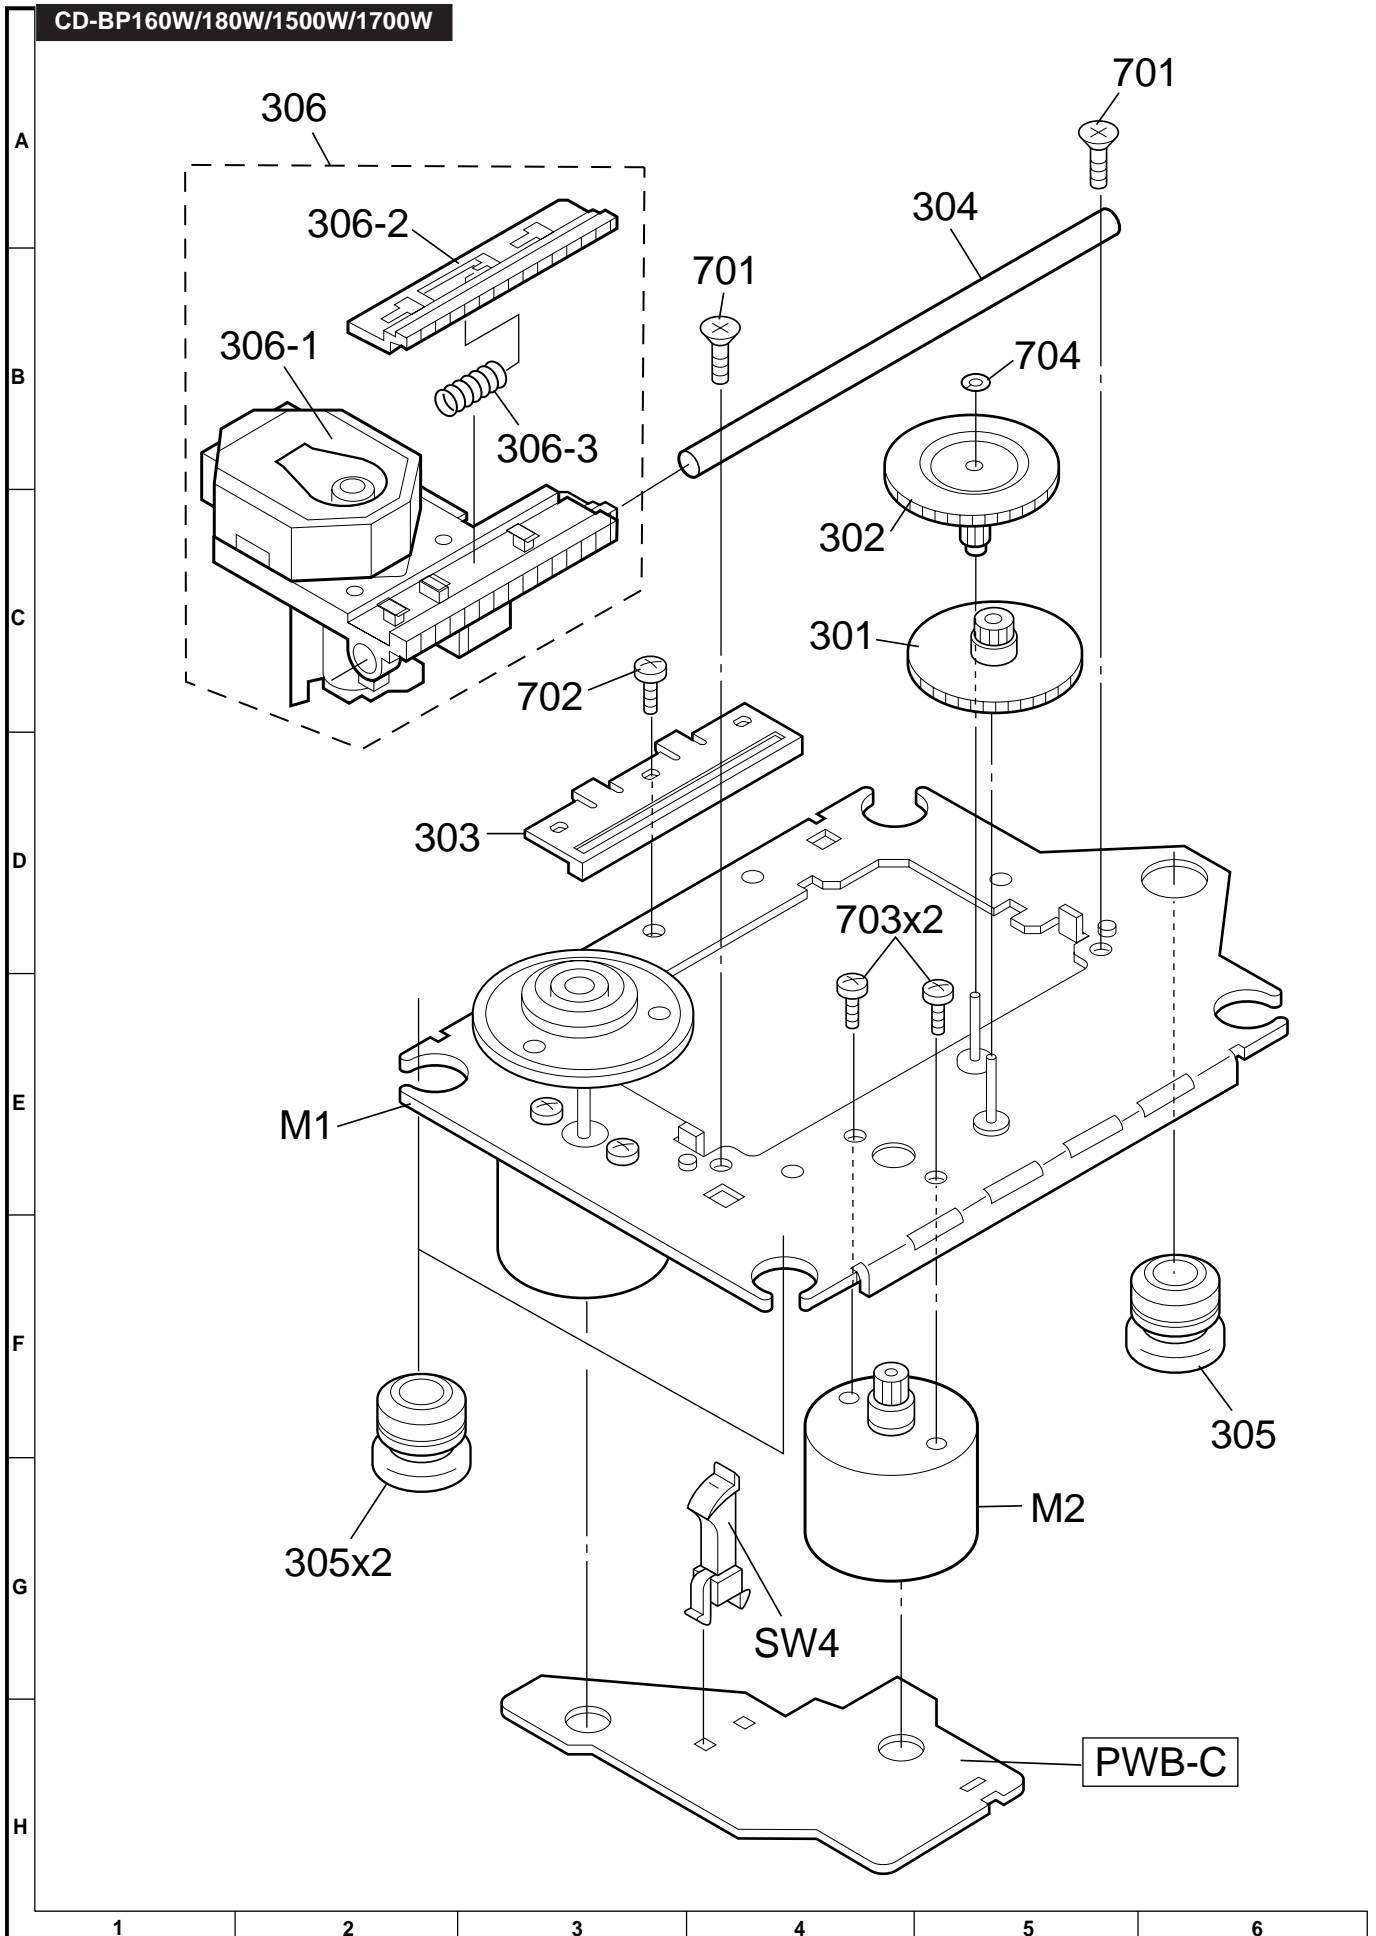


Figure 8 CD MECHANISM EXPLODED VIEW

CD-BP160W/180W/1500W/1700W

CD-BP160W/180W/1500W/1700W

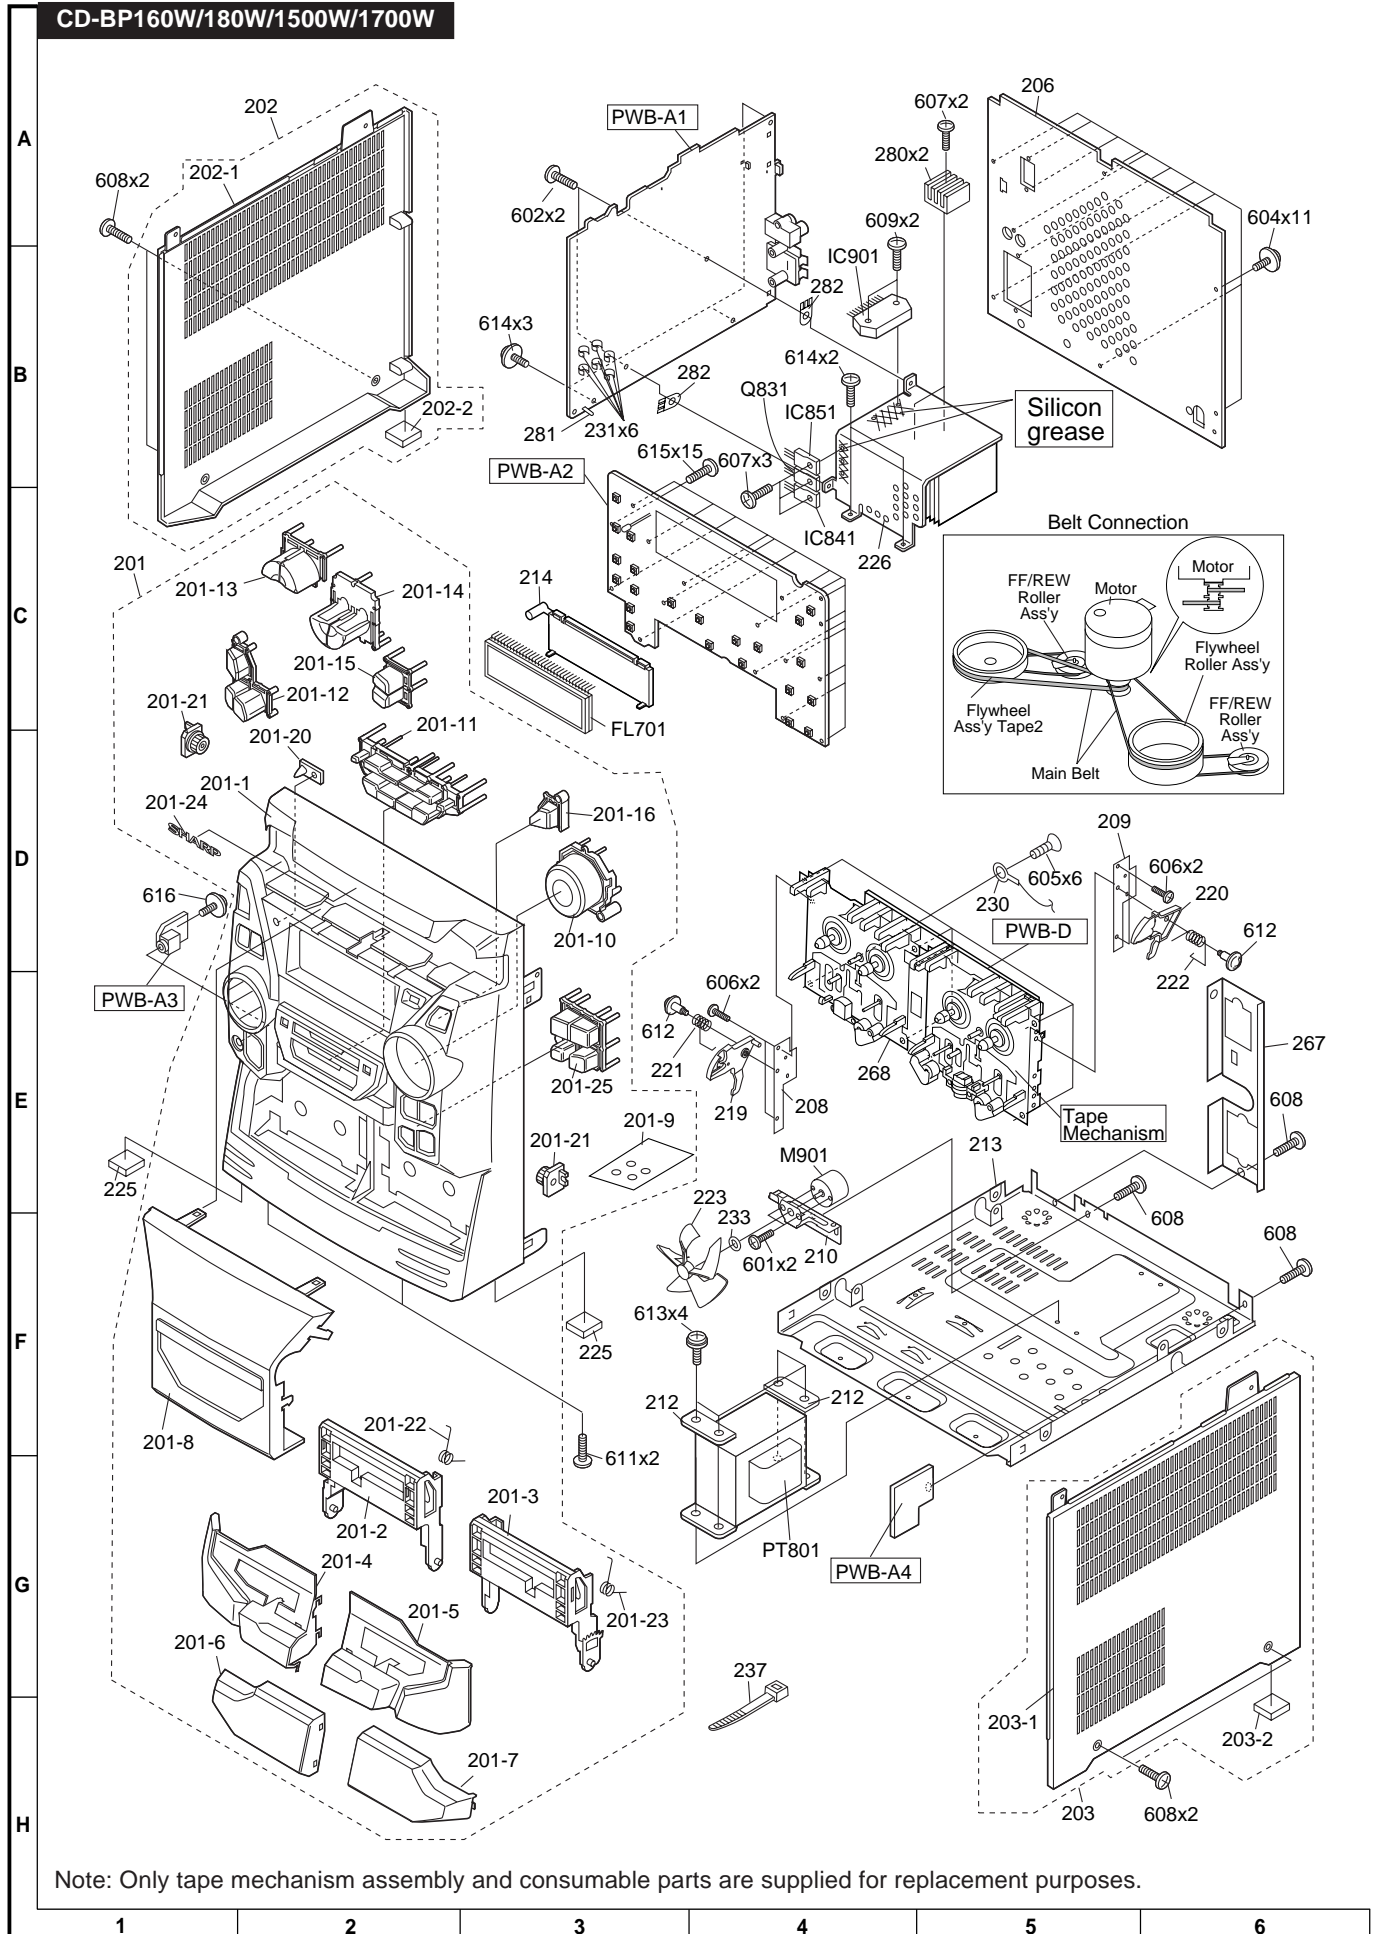


Figure 9 CABINET EXPLODED VIEW (1/2)

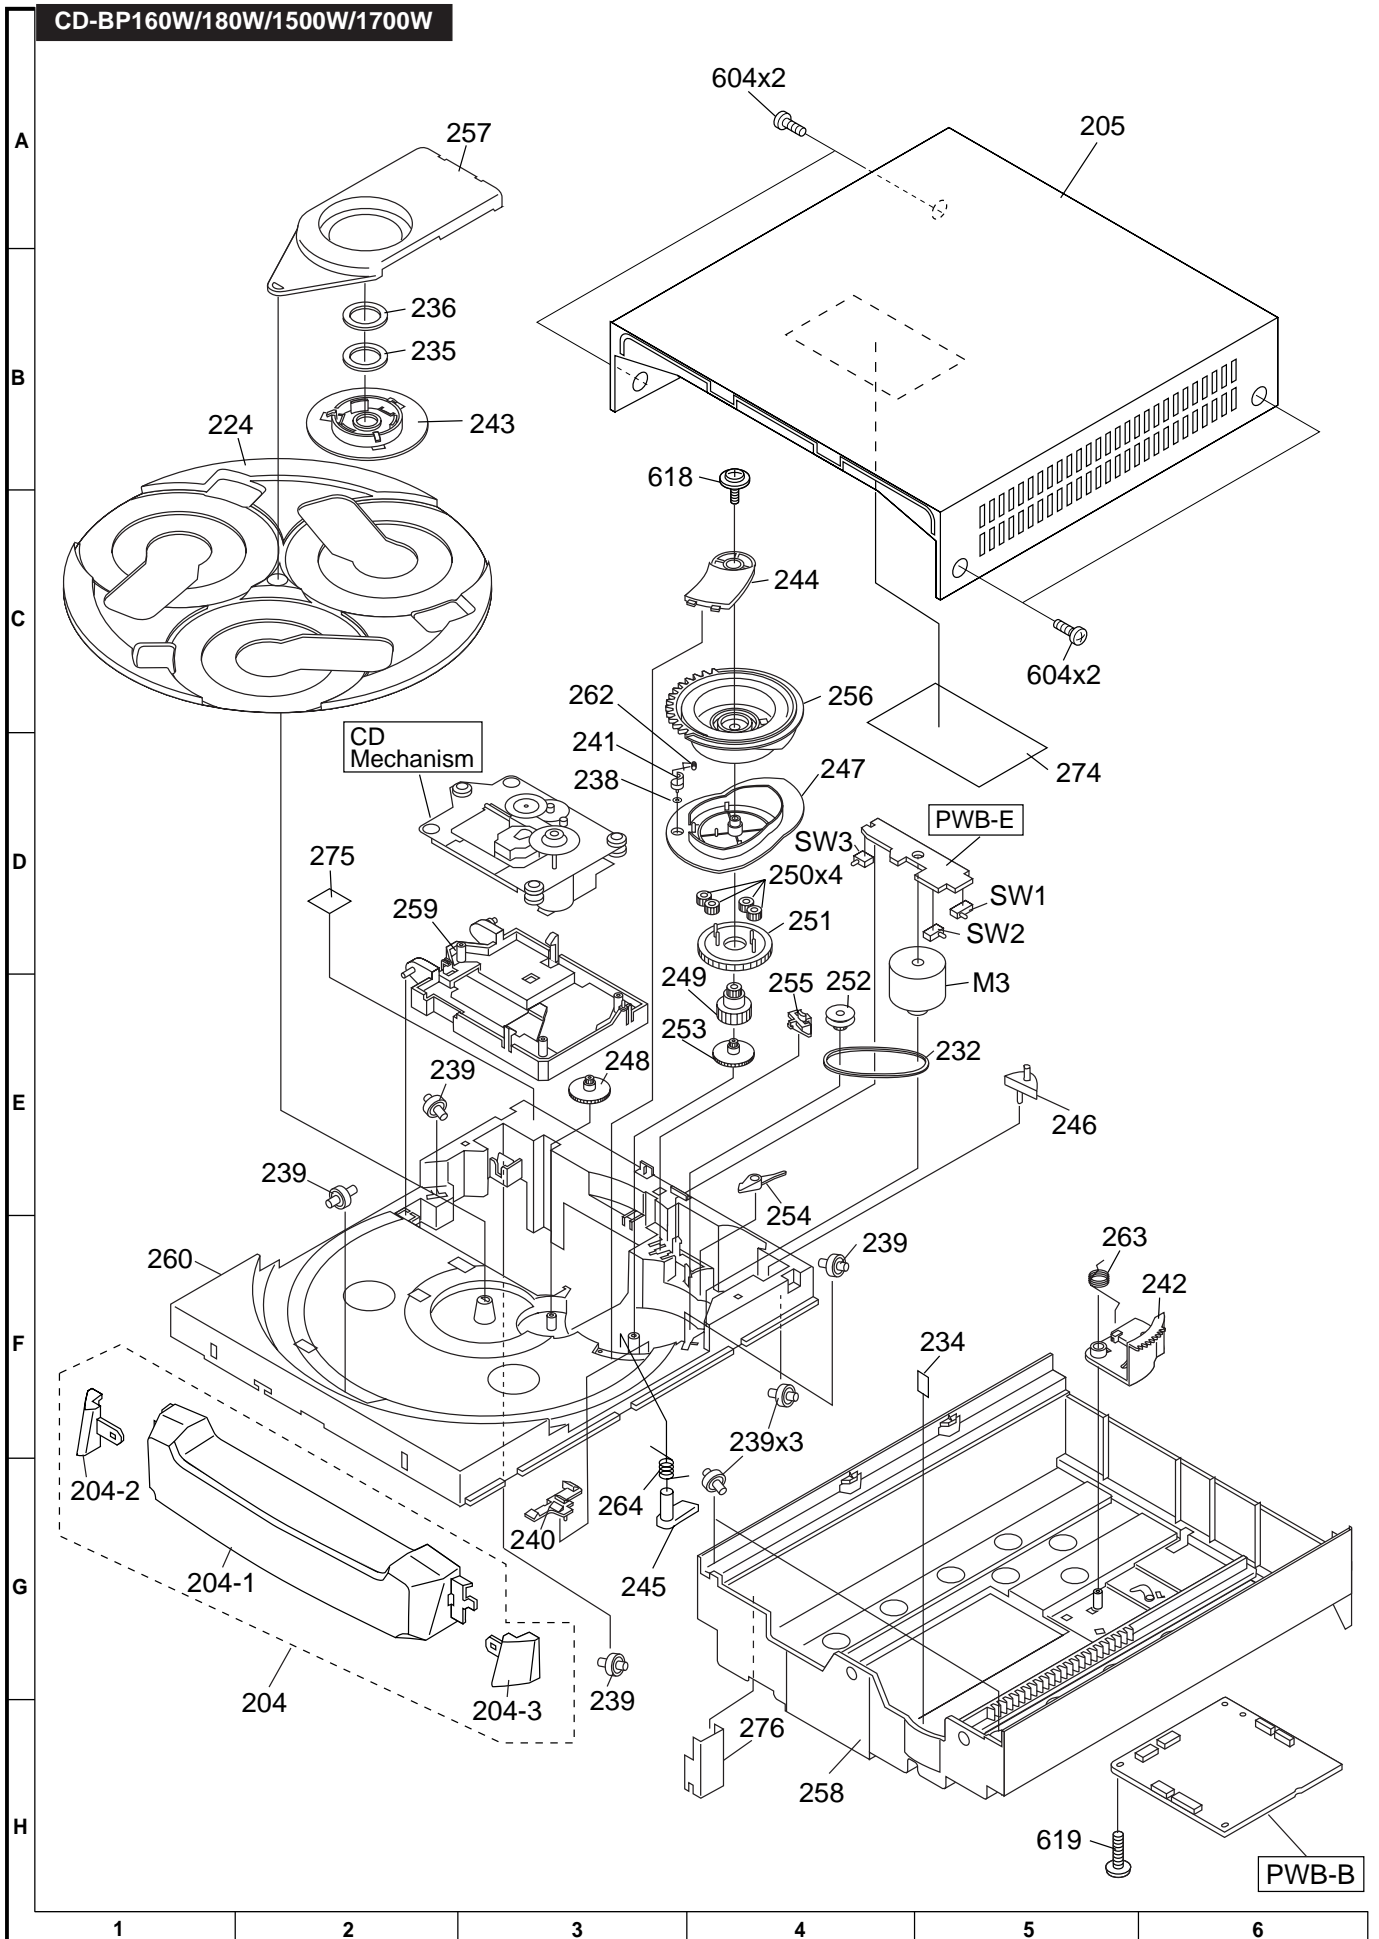


Figure 10 CABINET EXPLODED VIEW (2/2)

CD-BP160W/180W/1500W/1700W

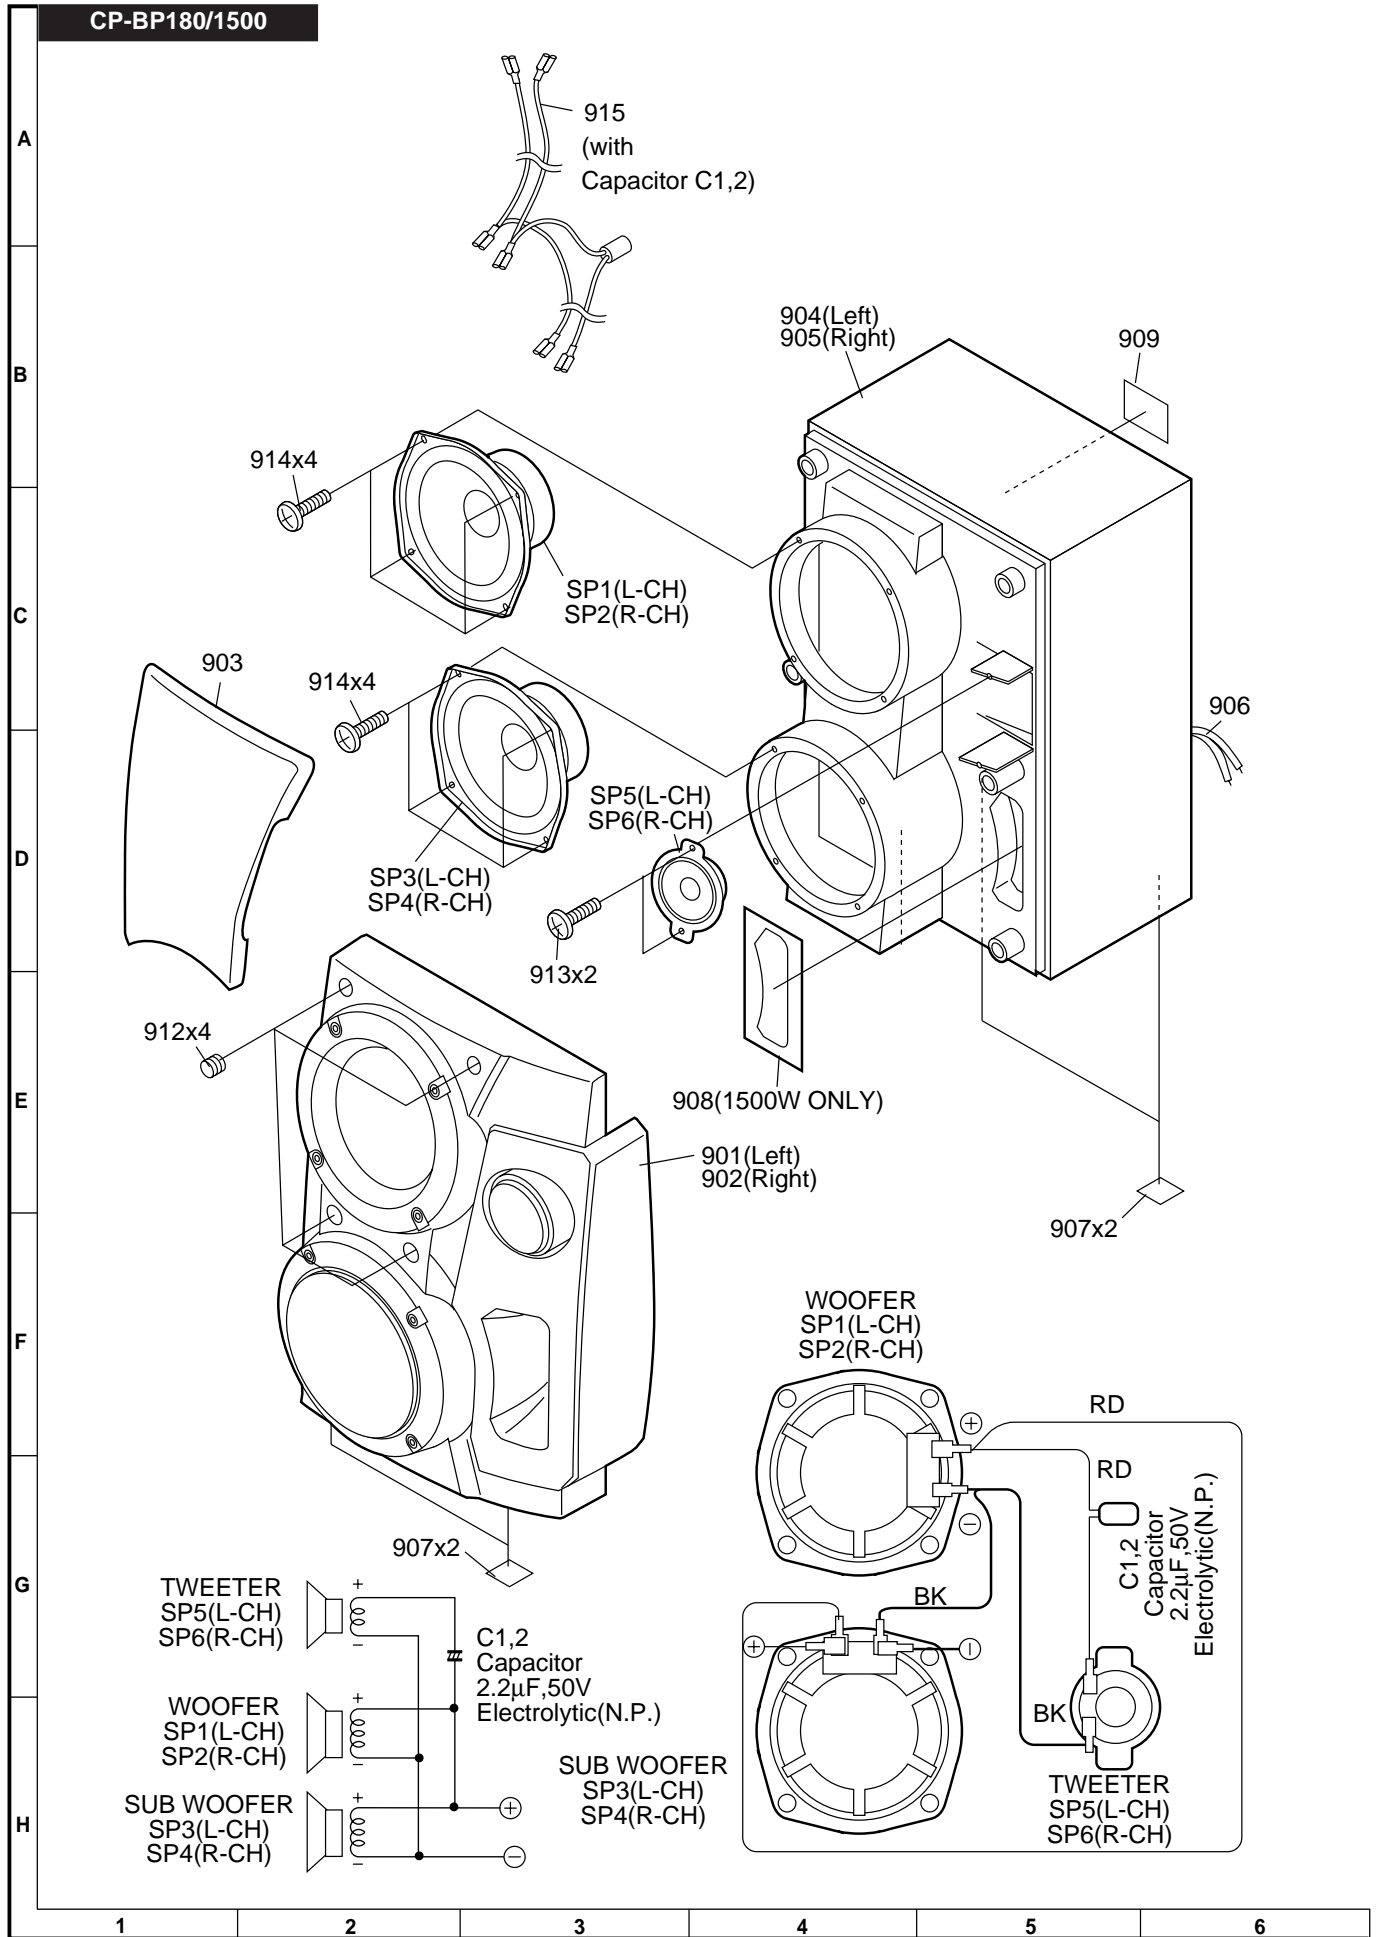


Figure 11 SPEAKER EXPLODED VIEW (1/3)

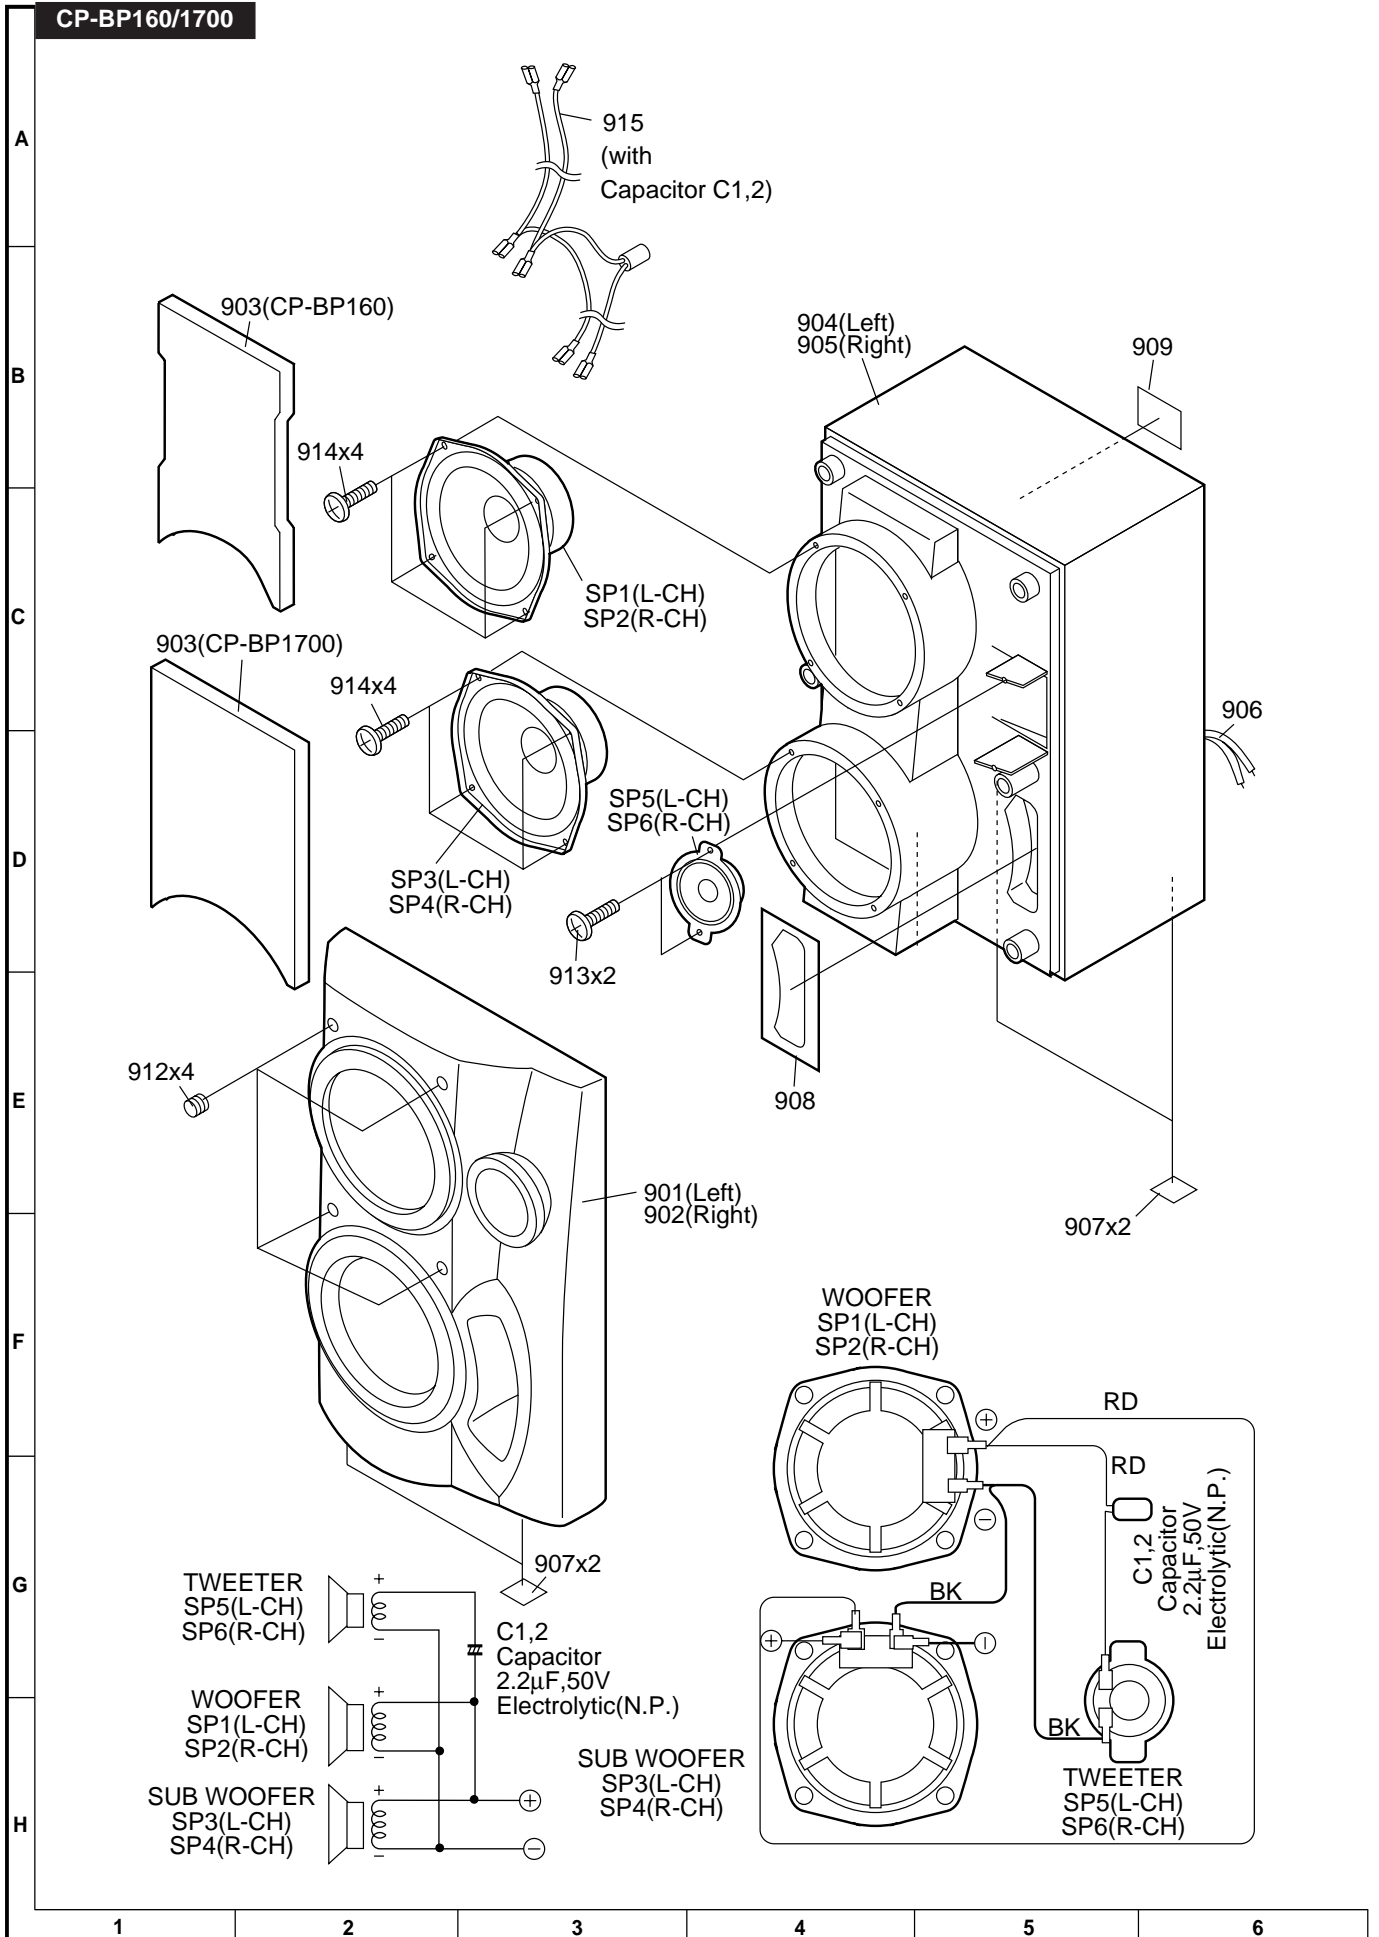


Figure 12 SPEAKER EXPLODED VIEW (2/3)

GBOXS0041AWM1

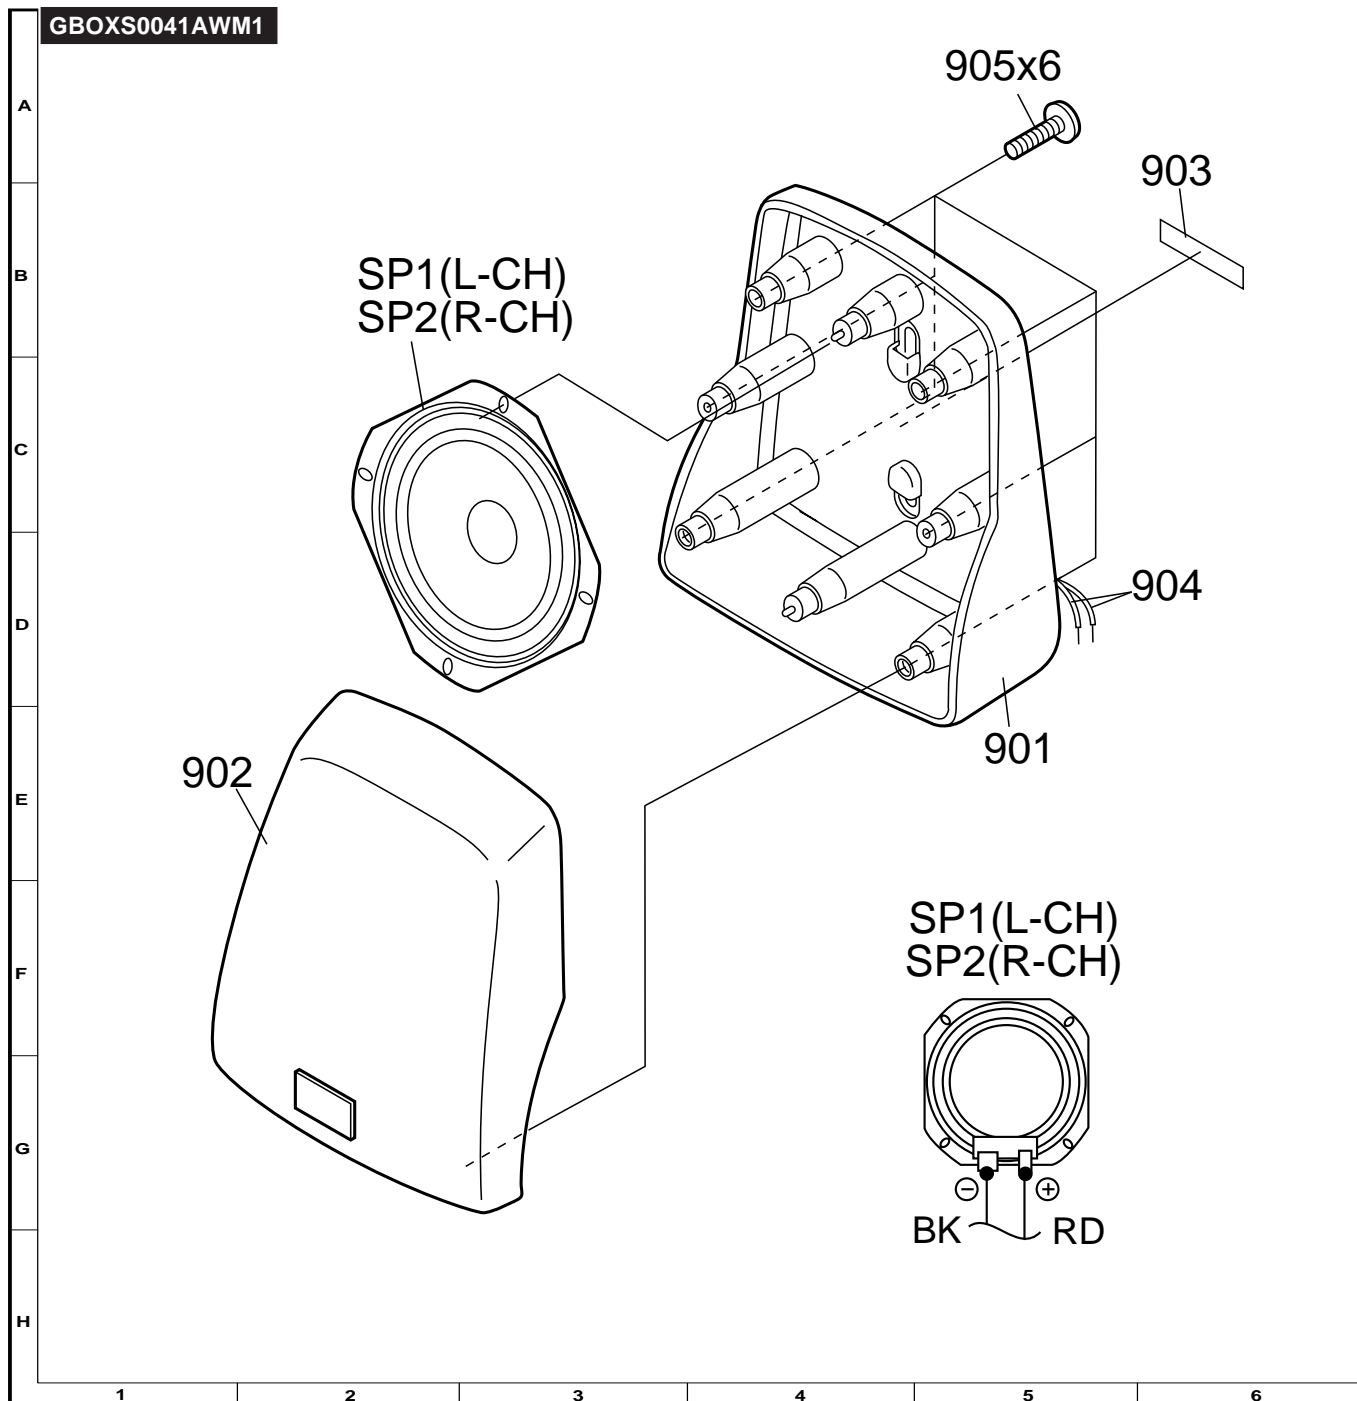


Figure 13 SPEAKER EXPLODED VIEW (3/3)

SHARP

COPYRIGHT © 2000 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher.

SHARP CORPORATION
 Communication Systems Group
 Quality & Reliability Control Center
 Higashihiroshima, Hiroshima 739-0192, Japan

Printed in Japan

A0004-2730DS•HA•M

EX • SA • SZ